


9.3.1 Battery installation into the memory card

Installation method of the battery for the memory card (SRAM card)

The battery for the SRAM card is removed from the battery holder when shipping.

Before inserting the SRAM card into the CPU module, set the battery holder as shown in the following flowchart.

(1) For Q2MEM-1MBSN, Q2MEM-1MBS, Q2MEM-2MBSN, and Q2MEM-2MBS

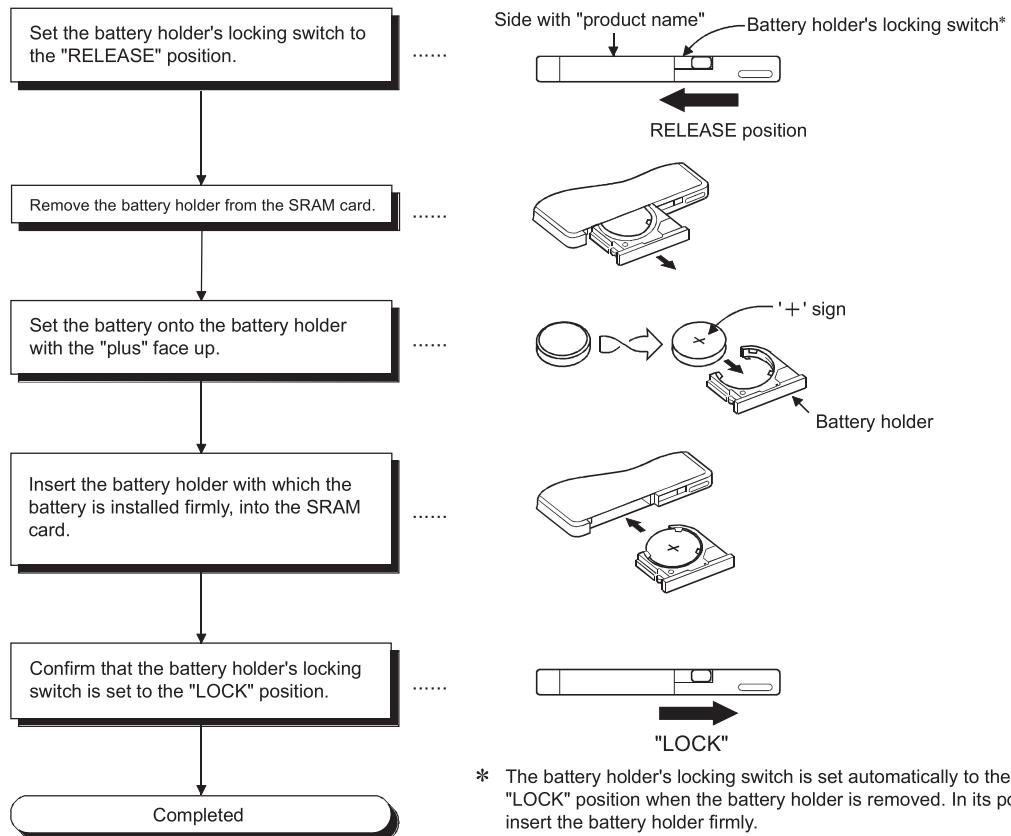

* The battery holder's locking switch is set automatically to the "LOCK" position when the battery holder is removed. In its position, insert the battery holder firmly.

Point

Insert or remove the battery in the horizontal direction along the battery holder fixing guide. Failure to do so may damage the latches of the battery holder.

