

The FR-F800 series

The frequency inverter FR-F800-E is optimized for applications with fans and pumps and is equipped with an integrated PLC as well as an integrated Ethernet interface with 100 MBit/s. This interface enables simple integration into an existing network and offers communication via Modbus® TCP/IP or CC-Link IE Field Basic

networks as standard. Up to 3 different protocols can communicate in parallel via the built-in Ethernet interface. This also enables inverter-to-inverter communication without a master. Due to the standard Ethernet interface, the FR-F800-E frequency inverter is supplied only with one serial interface.

The FR-F842 series frequency inverters are operated with a separate converter unit (FR-CC2).

FR-F846-E

The FR-F846 series covers the wide range of features of the FR-F800, but offers additional features in comparison:

- IP55 protective structure
- Integrated C3 EMC filter
- Integrated DC choke for harmonic suppression
- High-capacity DC Bus to avoid problems with fluctuating power supply
- Integrated multilingual display for output in plain text including English, German, French, Spanish, Italian, Russian, Turkish, Polish and Japanese
- Meets the requirements according to EN 61800-3

FR-F842-E

The F842 is separated into control and power unit. FR-CC2 (converter unit) and FR-F842 (frequency inverter).

This concept enables simple installation and commissioning of cost-effective DC bus systems.


FR-F840/842-E-SCM

The SCM Kit-DRIVES offers a ready-made integrated condition monitoring solution. The combination of the three powerful individual components frequency inverter, operating display and a vibration sensor makes this possible. The system can be extended with up to two sensors. Commissioning can be carried out simply by means of an operating display, even without expert knowledge in the field of condition monitoring.

Power range:	FR-F820-E: 0,75– 110 kW, 200–240 V AC
	FR-F840-E: 0,75–315 kW, 380–500 V AC
	FR-F846-E: 0,75–160 kW, 380–500 V AC (IP55 compatible model)
	FR-F842-E: 355–560 kW, 380–500 V AC (Separated converter type)

Converter unit FR-CC2-□

The converter units FR-CC2-H are diode rectifiers and enable the connection via a twelve-pulse rectifier, resulting in low harmonic content. They are used together with the FR-F842 frequency inverter. The separation of the units allows the flexible design of different systems such as parallel drives and common bus systems. This saves costs and minimizes the space required for installation.

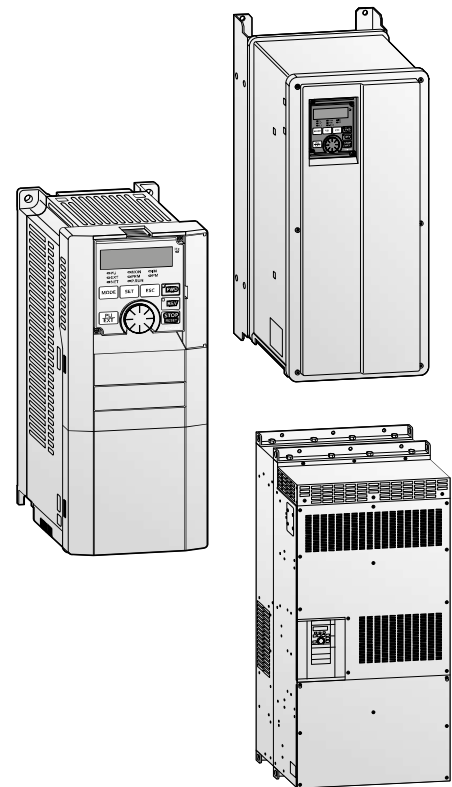

Technical details FR-F840-00023 to -01160

Product line		FR-F840-□-E2-60/-E2-60-SCM1															
		00023	00038	00052	00083	00126	00170	00250	00310	00380	00470	00620	00770	00930	01160		
Output	Rated motor capacity ^①	120 % overload capacity (SLD) ^⑤	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	
		150 % overload capacity (LD)	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	
	Rated current ^②	A	I rated ^⑥	2.3	3.8	5.2	8.3	12.6	17	25	31	38	47	62	77	93	116
			I max. 60	2.5	4.2	5.7	9.1	13.9	18.7	27.5	34.1	41.8	51.7	68.2	84.7	102.3	127.5
			I max. 3 s	2.8	4.6	6.2	10	15.1	20.4	30	37.2	45.6	56.4	74.4	92.4	111.6	139.2
		150 % overload capacity (LD)	I rated ^⑥	2.1	3.5	4.8	7.6	11.5	16	23	29	35	43	57	70	85	106
			I max. 60	2.5	4.2	5.8	9.1	13.8	19.2	27.6	34.8	42	51.6	68.4	84	102	127.2
			I max. 3 s	3.1	5.2	7.2	11.4	17.2	24	34.5	43.5	52.5	64.5	85.5	105	127.5	159
	Rated output capacity	kVA	SLD ^⑤	1.8	2.9	4.0	6.3	9.6	13	19.1	23.6	29.0	35.8	47.3	58.7	70.9	88.4
		LD	LD	1.6	2.7	3.7	5.8	8.8	12.2	17.5	22.1	26.7	32.8	43.4	53.3	64.8	80.8
Overload capacity ^②	SLD	110 % of rated motor capacity for 60 s; 120 % for 3 s (max. ambient temperature 40 °C) – inverse time characteristics															
	LD	120 % of rated motor capacity for 60 s; 150 % for 3 s (max. ambient temperature 50 °C) – inverse time characteristics															
Voltage ^③	3-phase AC, 0 V to power supply voltage																
Frequency range	0.2–590 Hz																
Control method	U/f control, optimum excitation control or advanced magnetic flux vector control																
Modulation control	Sine evaluated PWM, soft PWM																
Carrier frequency	0.7–14.5 kHz (user adjustable)																
Input	Power supply voltage	3-phase, 380–500 V AC, -15 %/+10 %															
	Voltage range	323–550 V AC at 50/60 Hz															
	Power supply frequency	50/60 Hz ±5 %															
	Rated input capacity ^④	kVA	SLD ^⑤	2.5	4.1	5.9	8.3	12	17	24	31	37	44	59	74	88	107
LD		LD	2.3	3.7	5.5	7.7	12	17	24	29	34	41	57	68	81	99	
Others	Cooling	Self cooling			Fan cooling												
	Protective structure	IP20										IP00					
	Max. heat dissipation	SLD ^⑤	0.055	0.075	0.085	0.13	0.175	0.245	0.345	0.37	0.45	0.565	0.74	0.93	1.11	1.34	
		LD	0.05	0.07	0.08	0.12	0.16	0.23	0.315	0.345	0.415	0.52	0.675	0.825	1.02	1.22	
	Weight	kg	2.5	2.5	2.5	3.0	3.0	6.3	6.3	8.3	8.3	15	15	23	41	41	
Dimensions (WxHxD)	mm	150x260x140				220x260x170			220x300x190			250x400x190		325x550x195	435x550x250		
Order information ^⑦	Art. no.	Ethernet version (E2)	307171	307172	307173	307174	307215	307216	307217	307218	307219	307220	307221	—	—	—	
		Input power frame	—	—	—	—	—	—	—	—	—	—	—	—	307162	307163	307164
		Control card (Ethernet)	—	—	—	—	—	—	—	—	—	—	—	—	307205	307205	307205
		Smart condition monitoring (SCM) kit	314607	314608	314609	314610	314611	314612	314613	314614	314615	314616	314617	314618	314619	314620	—

- Remarks:
- ① The applicable motor capacity indicated is the maximum capacity applicable for use of the Mitsubishi 4-pole standard motor.
 - ② The overload capacity in % is the ratio of the overload capacity to the inverter's rated current in the respective operating mode. For repeated duty cycles allow sufficient time for the inverter and the motor to cool below the temperature reached at 100 % load. The waiting periods can be calculated using the r.m.s. current method (I²t), which requires knowledge of the duty. When using the FR-F820-01250(30K) or lower and FR-F840-00620(30K) or lower at the surrounding air temperature of 40°C or less (30°C or less for the SLD rated inverter), side-by-side installation (0 cm clearance) is available.
 - ③ The maximum output voltage cannot exceed the power supply voltage. The output voltage can be varied over the entire power supply voltage range.
 - ④ The rated input capacity varies depending on the impedance values on the power supply side of the inverter (including the cables and input choke).
 - ⑤ When the load curve with 120 % overload capacity is selected the maximum permitted ambient temperature is 40 °C.
 - ⑥ When operating with carrier frequencies ≥2.5 kHz this value is reduced automatically as soon as the frequency inverter exceeds 85 % of the rated output current.
 - ⑦ All inverters with circuit board coating (IEC60721-3-3 3C2/3S2)

Attention: Mandatory DC choke need to be ordered separately if 75 kW motor or bigger is connected to the FR-F840. Please select the mandatory choke on page 76.

Technical details FR-F840-01800 to -06830

Product line			FR-F840-□-E2-60/-E2-60-SCM											
			01800	02160	02600	03250	03610	04320	04810	05470	06100	06830		
Output	Rated motor capacity ^①	kW	120 % overload capacity (SLD) ^⑤	90	110	132	160	185	220	250	280	315	355	
		150 % overload capacity (LD)	75	90	110	132	160	185	220	250	280	315	315	
	Rated current ^⑥	A	120 % overload capacity (SLD) ^⑤	I rated ^⑥	180	216	260	325	361	432	481	547	610	683
				I max. 60 s	198	238	286	357	397	475	529	602	671	751
			I max. 3 s	216	259	312	390	433	518	577	656	732	820	
		150 % overload capacity (LD)	I rated ^⑥	144	180	216	260	325	361	432	481	547	610	
			I max. 60 s	173	216	259	312	390	433	518	577	656	732	
			I max. 3 s	216	270	324	390	487	541	648	721	820	915	
	Rated output capacity [kVA]	SLD ^⑤	137	165	198	248	275	329	367	417	465	521		
		LD	110	137	165	198	248	275	329	367	417	465		
Overload capacity ^②	SLD	110 % of rated motor capacity for 60 s; 120 % for 3 s (max. ambient temperature 40 °C) – inverse time characteristics												
	LD	120 % of rated motor capacity for 60 s; 150 % for 3 s (max. ambient temperature 50 °C) – inverse time characteristics												
Voltage ^③		3-phase AC, 380–500 V to power supply voltage												
Frequency range		0.2–590 Hz												
Control method		U/f control, optimum excitation control or advanced magnetic flux vector control												
Modulation control		Sine evaluated PWM, soft PWM												
Carrier frequency		0.7–6 kHz (user adjustable)												
Input	Power supply voltage		3-phase, 380–500 V AC, -15 %/+10 %											
	Voltage range		323–550 V AC at 50/60 Hz											
	Power supply frequency		50/60 Hz ±5 %											
	Rated input capacity ^④	kVA	SLD ^⑤	137	165	198	248	275	329	367	417	465	520	
LD		110	137	165	198	248	275	329	367	417	465			
Others	Cooling		Fan cooling											
	Protective structure		IP00											
	Max. heat dissipation	SLD ^⑤	2.0	2.52	3.15	3.6	4.05	4.65	5.3	5.85	6.65	7.55		
		LD	1.64	2.1	2.575	2.8	3.6	3.8	4.65	5.1	5.85	6.6		
	Frequency inverter weight		kg	37	50	57	72	72	110	110	220	220	220	
	Choke weight		kg	20	22	26	28	29	30	35	38	42	46	
Dimensions (WxHxD)		mm	435x550x250 465x620x300			465x740x360			498x1010x380			680x1010x380		
Order information ^⑦	Art. no.	Ethernet version (E2)	—											
		Input power frame	307185	307186	307187	307188	307189	307190	307191	307192	307193	307194		
		Control card (Ethernet)	307205	307205	307205	307205	307205	307205	307205	307205	307205	307205		
		Smart condition monitoring (SCM) kit	314621	314622	314623	314624	314625	314626	314627	314628	314629	314630		

Remarks:

- ① The applicable motor capacity indicated is the maximum capacity applicable for use of the Mitsubishi 4-pole standard motor.
- ② The overload capacity in % is the ratio of the overload capacity to the inverter's rated current in the respective operating mode. For repeated duty cycles allow sufficient time for the inverter and the motor to cool below the temperature reached at 100 % load. The waiting periods can be calculated using the r.m.s. current method (I²t), which requires knowledge of the duty. When using the FR-F820-01250(30K) or lower and FR-F840-00620(30K) or lower at the surrounding air temperature of 40°C or less (30°C or less for the SLD rated inverter), side-by-side installation (0 cm clearance) is available.
- ③ The maximum output voltage cannot exceed the power supply voltage. The output voltage can be varied over the entire power supply voltage range.
- ④ The rated input capacity varies depending on the impedance values on the power supply side of the inverter (including the cables and input choke).
- ⑤ When the load curve with 120 % overload capacity is selected the maximum permitted ambient temperature is 40 °C.
- ⑥ When operating with carrier frequencies ≥2.5 kHz this value is reduced automatically as soon as the frequency inverter exceeds 85 % of the rated output current.
- ⑦ All inverters with circuit board coating (IEC60721-3-3 3C2/3S2)

Attention: Mandatory DC choke need to be ordered separately if 75 kW motor or bigger is connected to the FR-F840. Please select the mandatory choke on page 76.

Technical details FR-F842-07700 to -12120 and converter unit FR-CC2-H

The FR-F842 frequency inverters must be operated together with a FR-CC2 converter unit, which must be ordered separately.

Product line		FR-F842-□-2-60/-E2-60							
		07700	08660	09620	10940	12120			
Output	Rated motor capacity ^①	kW	120 % overload capacity (SLD) ^⑤	400	450	500	560	630	
			150 % overload capacity (LD)	355	400	450	500	560	
	Rated current ^⑥	A	120 % overload capacity (SLD) ^⑤	I rated ^⑥	770	866	962	1094	1212
				I max. 60 s	847	953	1058	1203	1333
				I max. 3 s	924	1039	1154	1313	1454
		150 % overload capacity (LD)	I rated ^⑥	683	770	866	962	1094	
			I max. 60 s	820	924	1039	1154	1313	
			I max. 3 s	1024	1155	1299	1443	1641	
	Rated output capacity [kVA]	SLD ^⑤	587	660	733	834	924		
		LD	521	587	660	733	834		
Overload capacity ^②	SLD	110 % of rated motor capacity for 60 s; 120 % for 3 s (max. ambient temperature 40 °C) – inverse time characteristics							
	LD	120 % of rated motor capacity for 60 s; 150 % for 3 s (max. ambient temperature 50 °C) – inverse time characteristics							
Voltage ^③	3-phase AC, 380–500 V to power supply voltage								
Frequency range	Hz	0.2–590 Hz							
Control method	U/f control, optimum excitation control or advanced magnetic flux vector control								
Modulation control	Sine evaluated PWM, soft PWM								
Carrier frequency	0.7–6 kHz (user adjustable)								
Input	DC Power supply voltage	430–780 V DC							
	Control power supply voltage	1-phase, 380–500 V AC, 50/60 Hz							
	Control power supply range	Frequency ±5 %, voltage ±10 %							
Others	Cooling	Fan cooling							
	Protective structure	IP00							
	Max. heat dissipation	SLD ^⑤	5.8	6.69	7.37	8.6	9.81		
		kW LD	5.05	5.8	6.48	7.34	8.63		
	Frequency inverter weight	kg	260	260	370	370	370		
	Choke weight	kg	50	57	67	85	95		
Dimensions (WxHxD)	mm	790x1330x440		995x1580x440					
Order information ^⑦	Art. no.	Ethernet version	—						
		Serial version	—						
	Input power frame	307195	307196	307197	307198	307199			
	Control card (Ethernet)	307205	307205	307205	307205	307205			
	Control card (serial)	307204	307204	307204	307204	307204			

Product line		FR-CC2-H□K-60							
		315	355	400	450	500	560	630	
Output	Rated motor capacity	kW	315	355	400	450	500	560	630
	Overload current rating ^①	200 % 60 s, 250 % 3 s					150 % 60 s, 200 % 3 s	120 % 60 s, 150 % 3 s	110 % 60 s, 120 % 3 s
	Voltage ^②	430–780 V ^③							
	Regenerative braking torque	10 % torque/100 % ED							
Input	Power supply voltage	3-phase, 380–500 V AC, -15 %/+10 %							
	Voltage/frequency range	323–550 V AC at 50/60 Hz ±5 %							
	Rated input capacity ^④	kVA	465	521	587	660	733	833	924
Others	Cooling	Fan cooling							
	DC choke	Built-in							
	Protective structure	Open type (IP00)							
	Weight	kg	210	213	282	285	288	293	294
Dimensions (WxHxD)	mm	600x1330x440		600x1580x440					
Order information	Art. no.	274507	274508	274509	274510	274511	279637	279638	

Remarks:

- ① The applicable motor capacity indicated is the maximum capacity applicable for use of the Mitsubishi 4-pole standard motor.
- ② The overload capacity in % is the ratio of the overload capacity to the inverter's rated current in the respective operating mode.
For repeated duty cycles allow sufficient time for the inverter and the motor to cool below the temperature reached at 100 % load.
- ③ The maximum output voltage cannot exceed the power supply voltage. The output voltage can be varied over the entire power supply voltage range.
- ④ When the load curve with 120 % overload capacity is selected the maximum permitted ambient temperature is 30 °C.
- ⑤ When operating with carrier frequencies ≥2.5 kHz this value is reduced automatically as soon as the frequency inverter exceeds 85 % of the rated output current.
- ⑥ All inverters with circuit board coating (IEC60721-3-3 3C2/3S2)
- ⑦ The power supply capacity is the value at the rated output current. It varies by the impedance at the power supply side (including those of the input choke and cables).
- ⑧ The permissible voltage imbalance ratio is 3 % or less. (Imbalance ratio = (highest voltage between lines – average voltage between three lines)/average voltage between three lines x100)
- ⑨ The converter unit output voltage varies according to the input power supply voltage and the load. The maximum point of the voltage waveform at the converter unit output side is approximately the power supply voltage multiplied by √2.


Common specifications FR-F800

FR-A840		Description	
Control specifications	Frequency setting resolution	Analog input	0.015 Hz/0–50 Hz (terminal 2, 4: 0–10 V/12 bit) 0.03 Hz/0–50 Hz (terminal 2, 4: 0–5 V/11 bit, 0–20 mA/11 bit, terminal 1: -10–+10 V/12 bit) 0.06 Hz/0–50 Hz (terminal 1: 0–±5 V/11 bit)
		Digital input	0.01 Hz
	Frequency accuracy		0.2 % of the maximum output frequency (temperature range 25 °C ±10 °C) via analog input; ±0.01 % of the set output frequency (via digital input)
	Voltage/frequency characteristics		Base frequency adjustable from 0 to 590 Hz; selection between constant torque, variable torque or optional flexible 5-point V/f characteristics
	Starting torque		120 % (3 Hz) when set to simple magnetic flux vector control and slip compensation
	Torque boost		Manual torque boost
	Acceleration/deceleration time		0–3600 s (can be set individually), linear or S-pattern acceleration/deceleration mode, backlash measures acceleration/deceleration can be selected.
	Acceleration/deceleration characteristics		Linear or S-form course, user selectable
	DC injection brake		Operating frequency (0–120 Hz), operating time (0–10 s) and operating voltage (0–30 %) can be set individually. The DC brake can also be activated via the digital input.
	Stall prevention operation level		Operation current level can be set (0–150 % adjustable), whether to use the function or not can be selected
Motor protection		Electronic motor protection relay (rated current user adjustable)	
Torque limit level		Torque limit value can be set (0–400 % variable)	
Control signals for operation	Frequency setting values	Analog input	Terminal 2, 4: 0–5 V DC, 0–10 V DC, 0/4–20 mA Terminal 1: 0–±5 V DC, 0–±10 V DC
		Digital input	Input using the setting dial of the parameter unit Four-digit BCD or 16 bit binary (when used with option FR-A8AX)
	Start signal		Available individually for forward rotation and reverse rotation. Start signal automatic self-holding input (3-wire input) can be selected.
	Input signals	Common	Low-speed operation command, middle-speed operation command, high-speed operation command, second function selection, terminal 4 input selection, JOG operation selection, output stop, start self-holding selection, forward rotation command, reverse rotation command, inverter reset The input signal can be changed using Pr. 178 to Pr. 189 (input terminal function selection).
		Pulse train input	100 kpps
	Output signal	Open collector output (five terminals)	Inverter running, up to frequency, instantaneous power failure/undervoltage ^① , overload warning, output frequency detection, fault Fault codes of the inverter can be output (4 bits) from the open collector.
		Relay output (two terminals)	
Indication	For meter	Current output	Max. 20 mA DC: one terminal (output current) The monitored item can be changed using Pr. 54 FM/CA terminal function selection.
		Voltage output	Max. ±10 V DC: one terminal (output voltage) The monitored item can be changed using Pr. 158 AM terminal function selection.
	Operation panel (FR-DU08)	Operating status	Output frequency, output current, output voltage, frequency setting value The monitored item can be changed using Pr. 52 Operation panel main monitor selection.
		Fault record	Fault record is displayed when a fault occurs. Past 8 fault records and the conditions immediately before the fault (output voltage/current/frequency/cumulative energization time/year/month/date/time) are saved.
Protection	Protective functions		Overcurrent trip during acceleration, overcurrent trip during constant speed, overcurrent trip during deceleration or stop, regenerative overvoltage trip during acceleration, regenerative overvoltage trip during constant speed, regenerative overvoltage trip during deceleration or stop, inverter overload trip (electronic thermal relay function), motor overload trip (electronic thermal relay function), heatsink overheat, instantaneous power failure ^① , undervoltage ^① , input phase loss ^{①②} , stall prevention stop, loss of synchronism detection ^② , upper limit fault detection, lower limit fault detection, Output side earth (ground) fault overcurrent, output short circuit, output phase loss, external thermal relay operation ^② , PTC thermistor operation ^② , option fault, communication option fault, parameter storage device fault, PU disconnection, retry count excess ^② , CPU fault, operation panel power supply short circuit/RS485 terminals power supply short circuit, 24 V DC power fault, abnormal output current detection ^② , inrush current limit circuit fault ^③ , communication fault (inverter), analog input fault, USB communication fault, safety circuit fault, overspeed occurrence ^② , 4 mA input fault ^② , pre-charge fault ^② , PID signal fault ^② , internal circuit fault, user definition error in the PLC function
	Warning function		Fan alarm, stall prevention (overcurrent), stall prevention (overvoltage), electronic thermal relay function pre-alarm, PU stop, parameter copy, safety stop, maintenance timer 1 to 3 ^② , USB host error, operation panel lock ^② , password locked ^② , parameter write error, copy operation error, 24 V external power supply operation
Others	Surrounding air temperature		-10 °C to +50 °C
	Storage temperature ^③		-20 °C to +65 °C

Remarks:

- ① Available only for the standard model.
- ② This protective function is not available in the initial status.
- ③ Temperature applicable for a short time, e. g. in transit.

Block diagram FR-F800

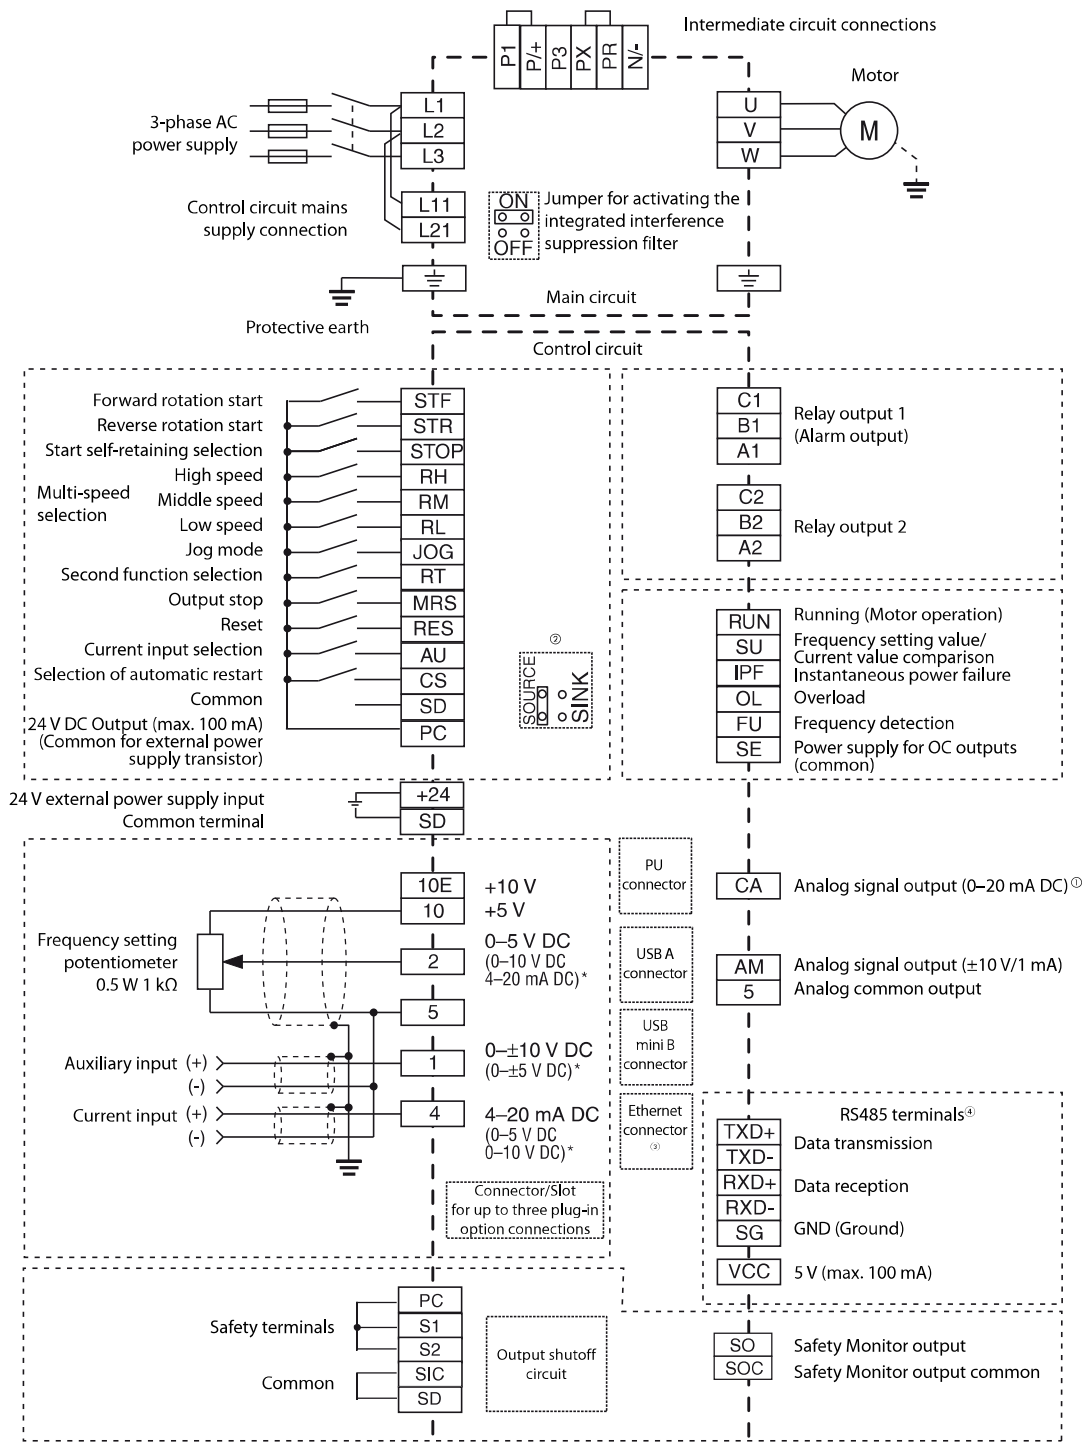

* Input area can be set via parameters.

- ① Common terminal is 5
- ② Initial setting is source logic.
- ③ Only for FR-F800-E
- ④ Not for FR-F800-E
If RS485 terminals are needed, install the interface card FR-A8ERS

Assignment of main circuit terminals

Function	Terminal	Designation	Description
Main circuit connection	L1, L2, L3	Mains supply connection	Mains power supply of the inverters (FR-F820: 200–240 V AC, 50/60 Hz); (FR-F840: 380–500 V AC, 50/60 Hz)
	P/+, N/-	Brake unit connection	Connect the brake unit (FR-BU, BU), power regeneration common converter (FR-CV), Harmonic Converter (FR-HC and MT-HC) or power regeneration converter (MTRC).
	P/+, P1	DC choke connection	An optional DC choke can be connected to the terminals P1 and P/+. The jumper on terminals P1 and P/+ must be removed when this optional choke is used on frequency inverter models FR-F820-03160 or lower and FR-F840-01800 or lower. When using a motor with 75 kW or higher, always connect a mandatory DC choke. The DC choke must be installed on frequency inverter models FR-F820-03800 or higher and FR-F840-02160 or higher.
	PR, PX	Built-in brake circuit connection	When the jumper is connected across terminals PR and PX (initial status), the built-in brake resistor circuit is valid.
	U, V, W	Motor connection	Voltage output of the inverter (3-phase, 0 V up to power supply voltage, 0.2–590 Hz)
	L11, L21	Power supply for control circuit	To use external power for the control circuit connect the mains power to L11/L21 (and remove jumpers L1 and L2).
	⏏	PE	Protective earth connection of inverter

Assignment of signal terminals

Function	Terminal	Designation	Description
Control connection (programmable)	STF	Forward rotation start	The motor rotates forward, if a signal is applied to terminal STF.
	STR	Reverse rotation start	The motor rotates reverse, if a signal is applied to terminal STR.
	STOP	Start self-retaining selection	The start signals are self-retaining, if a signal is applied to terminal STOP.
	RH, RM, RL	Multi-speed selection	Preset of 15 different output frequencies according to the combination of the RH, RM and RL signals.
	JOG	Jog mode selection	The JOG mode is selected, if a signal is applied to this terminal (factory setting). The start signals STF and STR determine the rotation direction.
		Pulse train input	The JOG terminal can be used as pulse train input terminal (parameter 291 setting needs to be changed)
	RT	Second parameter settings	A second set of parameter settings is selected, if a signal is applied to terminal RT.
	MRS	Output stop	The inverter lock stops the output frequency without regard to the delay time.
	RES	RESET input	An activated protective circuit is reset, if a signal is applied to the terminal RES ($t > 0.1$ s).
	AU	Current input selection	The 0/4–20 mA signal on terminal 4 is enabled by a signal on the AU terminal.
PTC input		If you connect a PTC temperature sensor you must assign the PTC signal to the AU terminal and set the slide switch on the control circuit board to the PTC position.	
CS	No function	Use Pr.186 CS terminal function selection for function assignment.	
Common	SD	Reference potential (0 V) for the PC terminal (24 V)	Common terminal for contact input terminal (sink logic); Connect this terminal to the power supply common terminal of a transistor output (open collector output) device, such as a programmable controller, in the source logic to avoid malfunction by undesirable current. Common terminal for the 24 V DC power supply (terminal PC, terminal +24) Isolated from terminals 5 and SE.
	PC	24 V DC output	Connect this terminal to the power supply common terminal of a transistor output (open collector output) device, such as a programmable controller, in the source logic to avoid malfunction by undesirable current. Common terminal for contact input terminal (source logic). Can be used as a 24 V DC 0.1 A power supply.
	+24	24 V external power supply input	For connecting a 24 V external power supply. If a 24 V external power supply is connected, power is supplied to the control circuit while the main power circuit is OFF.
Setting value specification	10 E	Voltage output for potentiometer	Output voltage 10 V DC. Max. output current 10 mA. Recommended potentiometer: 1 k Ω , 2 W linear
	10		Output voltage 5 V DC. Max. output current 10 mA. Recommended potentiometer: 1 k Ω , 2 W linear
	2	Input for frequency setting value signal	The setting value 0–5 V DC (or 0–10 V, 0/4–20 mA) is applied to this terminal. You can switch between voltage and current setpoint values with parameter 73. The input resistance is 10 k Ω .
	5	Frequency setting common and analog outputs	Terminal 5 provides the common reference potential (0 V) for all analog set point values and for the analog output signals CA (current) and AM (voltage). The terminal is isolated from the digital circuit's reference potential (SD). This terminal should not be grounded.
	1	Auxiliary input for frequency setting value signal 0– \pm 5 (10) V DC	An additional voltage setting value signal of 0– \pm 5 (10) V DC can be applied to terminal 1. The voltage range is preset to 0– \pm 10 V DC. The input resistance is 10 k Ω .
4	Input for setting value signal	The setting value 0/4–20 mA or 0–10 V is applied to this terminal. You can switch between voltage and current setpoint values with parameter 267. The input resistance is 250 Ω . The current setting value is enabled via terminal function AU.	
Signal output (programmable)	A1, B1, C1	Potential free relay output 1 (Alarm)	The alarm is output via relay contacts. The block diagram shows the normal operation and voltage free status. If the protective function is activated, the relay picks up. The maximum contact load is 200 V AC/0.3 A or 30 V DC/0.3 A.
	A2, B2, C2	Potential free relay output 2	Any of the available 42 output signals can be used as the output driver. The maximum contact load is 230 V AC/0.3 A or 30 V DC/0.3 A.
	RUN	Signal output for motor operation	The output is switched low, if the inverter output frequency is equal to or higher than the starting frequency. The output is switched high, if no frequency is output or the DC brake is in operation.
	SU	Signal output for frequency setting value/current value comparison	The SU output supports a monitoring of frequency setting value and frequency current value. The output is switched low, once the frequency current value (output frequency of the inverter) approaches the frequency setting value (determined by the setting value signal) within a preset range of tolerance.
	IPF	Signal output for instantaneous power failure	The output is switched low for a temporary power failure within a range of 15 ms \leq tPF \leq 100 ms or for under voltage.
	OL	Signal output for overload alarm	The OL is switched low, if the output current of the inverter exceeds the current limit preset in parameter 22 and the stall prevention is activated. If the output current of the inverter falls below the current limit preset in parameter 22, the signal at the OL output is switched high.
	FU	Signal output for monitoring output frequency	The output is switched low once the output frequency exceeds a value preset in parameter 42 (or 43). Otherwise the FU output is switched high.
	SE	Reference potential for signal outputs	The potential that is switched via open collector outputs RUN, SU, OL, IPF and FU is connected to this terminal.
	CA	Analog current output	One of 18 monitoring functions can be selected, e. g. external frequency output. CA- and AM output can be used simultaneously. The functions are determined by parameters. Output item: output frequency (initial setting), Load impedance: 200 Ω –450 Ω , output signal: 0–20 mA
AM	Analog signal output 0–10 V DC (1 mA)	Output item: output frequency (initial setting), output signal 0–10 V DC, permissible load current 1 mA (load impedance \geq 10 k Ω), resolution 8 bit	
Interface	—	PU connector	A parameter unit can be connected. Communications via RS485 I/O standard: RS485, multi drop operation: max 1152 baud (overall length: 500 m)
	—	RS485 terminal (via RS485 terminal)	Communications via RS485; I/O standard: RS485, multi drop operation: max 1152 baud (overall length: 500 m)
	—	2 USB connectors (Conforms to USB1.1/USB2.0)	USB A connector: a USB memory device enables parameter copy, PLC code download and trace function. USB mini B connector: connected to a personal computer via USB to enable operations of the inverter by FR Configurator2.
Safety connection	S1, S2	Safety inputs	
	SIC	Reference potential for safety inputs	When the safety functions are not used, the existing jumpers between the terminals S1-PC, S2-PC and SIC-SD must not be removed, otherwise an operation of the frequency inverter is not possible.
	SO	Safety monitor output	
	SOC	Safety monitor output common	