

# **GOT1000**

MELSECNET/10 Communication Unit

User's Manual

# **GT15**

## ●SAFETY PRECAUTIONS●

(Always read these precautions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product.

In this manual, the safety precautions are ranked as "DANGER" and "CAUTION".




**DANGER**

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



**CAUTION**

Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the  CAUTION level may lead to a serious accident according to the circumstances.

Always follow the precautions of both levels because they are important to personal safety.

Please save this manual to make it accessible when required and always forward it to the end user.

## [DESIGN PRECAUTIONS]

### DANGER

- If a communication fails in data link, the faulty station holds the data link data generated before the communication error. Create an interlock circuit in the sequence program using the communication status information in order that the system will operate safely.  
Check the faulty station and the operation status during communication error by referring to the relevant manuals.
- Some failures of cable or communication unit may cause the GOT to keep the outputs on or off.  
Create an external circuit for monitoring output signals that may lead to serious accidents.  
Failure to do so may cause mis-outputs or malfunctions, resulting in accidents.
- If a communication error (including cable disconnection) occurs during monitoring, the communication between the GOT and PLC CPU may be interrupted and the GOT may be inoperative.  
For bus connection : The PLC CPU is down and the GOT is inoperative.  
For other than above: The GOT is inoperative.  
When configuring a system including the GOT, the possibility of GOT communication error must be considered; make sure the operation significant for the system will be performed by switches on devices other than the GOT.  
Failure to do so may cause mis-outputs or malfunctions, resulting in accidents.

### CAUTION

- Do not install the communication cables together with the main circuit or power lines, or bring them close to each other. The distance of 100mm (3.9inch) or more should be ensured. Failure to do so may cause malfunctions due to noise.

## [INSTALLATION PRECAUTIONS]

### DANGER

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing this unit to/from the GOT.  
Not doing so can cause a unit failure or malfunction.

## [INSTALLATION PRECAUTIONS]

### CAUTION

- Use this unit in the environment given in the general specifications of the GT15 User's Manual.  
Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.
- When installing this unit to the GOT, fit it to the connection interface of the GOT and tighten the mounting screws in the specified torque range.  
Undertightening can cause a drop, failure or malfunction.  
Overtightening can cause a drop, failure or malfunction due to screw or unit damage.
- Do not directly touch the conductive part or electronic components of the unit.  
This may cause the unit to fail or malfunction.

## [WIRING PRECAUTIONS]

### DANGER

- Be sure to shut off all phases of the external power supply used by the system before wiring.  
Failure to do so may cause electric shock, product damage or malfunctions.

### CAUTION

- Be careful not to let foreign matter such as dust or wire chips get inside the unit. This may cause a fire, failure or malfunctions.
- Make sure to securely connect the cable to the connector of unit.  
Incorrect connection may cause malfunctions.
- Make sure to fix communication cables and power cables to the unit by ducts or clamps. Failure to do so may cause damage of the unit or the cables due to accidental pull or unintentional shifting of the cables, or malfunctions due to poor contact of the cables.
- Do not hold the cable by hand and pull it out from the unit.  
When removing the cable from the unit, make sure to hold the connector by hand and pull it.  
Failure to do so may cause malfunctions or damage to the unit or cable.
- Solder the coaxial cable connector correctly.  
Incomplete soldering may cause a malfunction.

## [STARTUP AND MAINTENANCE PRECAUTIONS]



### **DANGER**

- Do not touch the connector while power is on.  
Failure to do so may cause electric shock or malfunctions.
- Before starting cleaning, always shut off GOT power externally in all phases.  
Not doing so can cause a unit failure or malfunction.



### **CAUTION**

- Do not disassemble or modify any unit.  
This will cause failure, malfunction, injuries, or fire.
- Do not touch the conductive areas and electronic parts of this unit directly.  
Doing so can cause a unit malfunction or failure.
- Do not change the switch settings while power is on.  
This may cause failures or malfunctions.
- Make sure to externally shut off all phases of the power supply before cleaning the unit and retightening unit mounting screws.  
Failure to do so may cause the unit to fail or malfunction.  
Loose tightening may cause a fall of the unit, short circuits, or malfunctions.  
Overtightening may damage the screws and/or the unit, resulting in a fall of the unit, short circuits or malfunctions.
- Always make sure to touch the grounded metal to discharge the electricity charged in the body, etc., before touching the unit.  
Failure to do so may cause a failure or malfunctions of the unit.

## [DISPOSAL PRECAUTIONS]



### **CAUTION**

- Dispose of this product as industrial waste.

## [TRANSPORTATION PRECAUTIONS]

### CAUTION

- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of the GT15 User's Manual, as they are precision devices.  
Failure to do so may cause the unit to fail.  
Check if the unit operates correctly after transportation.

## REVISIONS

\*The manual number is noted at the lower right of the top cover.

Print Date	*Manual Number	Revision
Jan., 2005	IB(NA)-0800315-A	First edition
Dec., 2005	IB(NA)-0800315-B	Description of the front cover is reviewed.
Mar., 2006	IB(NA)-0800315-C	Partial corrections Chapter 1, 2, 7

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2005 MITSUBISHI ELECTRIC CORPORATION

---

---

## CONTENTS

---

---

1. Overview .....	1
2. Performance Specifications .....	2
3. Part Names and the Settings .....	4
4. Installation Procedure .....	9
5. Precautions for Laying Cables .....	11
5.1 Precautions for cable connection (A9GT-QJ71LP23) .....	11
5.2 Precautions for cable connection (A9GT-QJ71BR13) .....	12
6. Wiring Method .....	15
7. External Dimensions .....	16



## **Manuals**

The following shows manuals relevant to this product.

### Detailed Manual

Manual name	Manual number (Type code)
GT15 User's Manual (Option)	SH-080528ENG (1D7M23)
GOT1000 Connection Manual (Option)	SH-080532ENG (1D7M26)

### Relevant Manuals

For relevant manuals, refer to the PDF manual stored within the drawing software used.

---

---

## 1. Overview

---

---

This manual explains the GT15 MELSECNET/10 communication unit (hereinafter referred to as GT15-75J71LP23-Z/GT15-75J71BR13-Z), i.e., the specifications, switch settings and how to mount onto the GOT.

The GT15-75J71LP23-Z and GT15-75J71BR13-Z allow the GOT 1000 series to function as a normal station (MELSECNET/10 connection) in the MELSECNET/10 network system (PLC to PLC network).

After unpacking each product package, check if the following items are contained.

### <GT15-75J71LP23-Z>

Product name	Model name	Quantity
A9GT-QJ71LP23 network unit (for optical loop network connection; normal station only)	(A9GT-QJ71LP23)	1
Interface converter unit	(GT15-75IF900)	1
Communication unit fixing bracket	-	3

### <GT15-75J71BR13-Z>

Product name	Model name	Quantity
A9GT-QJ71BR13 network unit* <sup>1</sup> (for coaxial bus network connection; normal station only)	(A9GT-QJ71BR13)	1
F-type connector	(A6RCON-F)	1
Interface converter unit	(GT15-75IF900)	1
Communication unit fixing bracket	-	3

\*1 : In the case of coaxial-type network system, terminal resistors must be attached to both terminal stations of the network. The A9GT-QJ71BR13 does not include terminal resistors (A6RCON-R75:75Ω). Therefore, they should be prepared by the user.

A network unit (A9GT-QJ71LP23 or A9GT-QJ71BR13) can be connected to the GOT with the GT15-75IF900, which can perform monitoring as a normal station in the MELSECNET/10 network system (PLC to PLC network).

For system configuration when connecting the GOT to MELSECNET/10, refer to GOT1000 Series Connection Manual.
--

## 2. Performance Specifications

The following is the performance specification of MELSECNET/10 communication unit.

For the general specifications of MELSECNET/10 communication unit, refer to the GT15 User's Manual \*1.

Item	A9GT-QJ71LP23	A9GT-QJ71BR13	
Maximum number of link points per network	LX/LY	8192 points	
	LB	8192 points	
	LW	8192 points	
Maximum number of link points per station	$\{(B+Y)/8+(2 \times W)\} \leq 2000$ bytes		
Communication speed	10Mbps (20 Mbps : multiples transmission)	10Mbps	
Communication method	Token ring method	Token bus method	
Synchronous method	Frame synchronous		
Type of transmission channel	Double loop (Optical fiber cable)	Coaxial single bus	
Overall distance (Distance between stations) *2	30km [ SI optical cable inter station 500m H-PCF optical cable inter station 1km Broad-band H-PCF optical cable inter station 1km QSI optical cable inter station 1km ]	3C-2V	300m (0.19 mil) (Distance between stations: 300m (0.19 mil))
		5C-2V	500m (0.31 mil) (Distance between stations: 500m (0.31 mil))
		Repeater module (A6BR10, A6BR10-DC) Maximum expansion is 2.5km	
Accessible network range	Same network only		
Maximum number of groups	9		
Number of stations connected to a network	63 stations	31 stations	
	RAS functions		
RAS functions	<ul style="list-style-type: none"> <li>• Loopback in case of error detection or cable disconnection (Specific to A9GT-QJ71LP23)</li> <li>• Link channel check for the host station</li> <li>• Abnormality detection by link special relay, resistor</li> <li>• Various diagnostic functions</li> </ul>		
Transient transmission	• N:N communication		
Cable	Optical fiber cable (Arranged by user *3)	3C-3V 5C-2V or equivalent	

Item	A9GT-QJ71LP23	A9GT-QJ71BR13
Applicable connectors	2-core optical connector plug (Arranged by user*3)	BNC-P-3-NiCAu (For 3C-2V) BNC-P-5-NiCAu (For 5C-2V) Equivalent goods (manufactured by DDK Electronics., LTD.)
Internal current consumption	0.52A in total with GT15-75IF900	
Weight	0.5kg (1.1lb) in total with GT15-75IF900	

\*1 : The vibration resistance of the MELSECNET/10 communication unit is as follows. (Differs with the GT15.)

Item	Specifications					
Vibration resistance	Conforming to JIS B 3502, IEC 61131-2	Under intermittent vibration	10 to 57Hz	---	0.075mm (0.003inch)	10 times each in X, Y, Z directions (for 80 minch)
			57 to 150Hz	9.8m/s <sup>2</sup>	---	
		Under continuous vibration	10 to 57Hz	---	0.035mm (0.001inch)	
			57 to 150Hz	4.9m/s <sup>2</sup>	---	


\*2 : In the case of coaxial bus system, the cable length between stations may be restricted, depending on the number of connected stations. (Refer to Section 5.2 (1).)

\*3 : Please note that use of optical fiber cable requires the expertise, special tools and dedicated connector for connection. Please contact your local Mitsubishi Electric System Service or representative, for the purchase of the required items.


### 3. Part Names and the Settings

The following indicates part names and the setting of each part of A9GT-QJ71LP23, A9GT-QJ71BR13 and GT15-75IF900.


A9GT-QJ71LP23

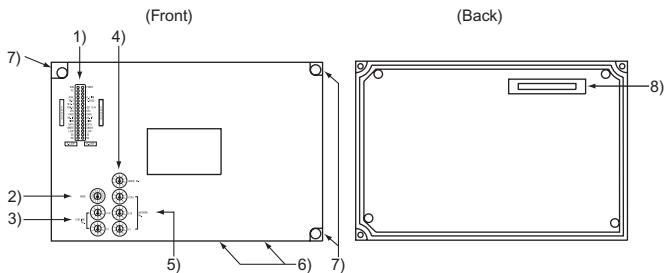

A9GT-QJ71BR13

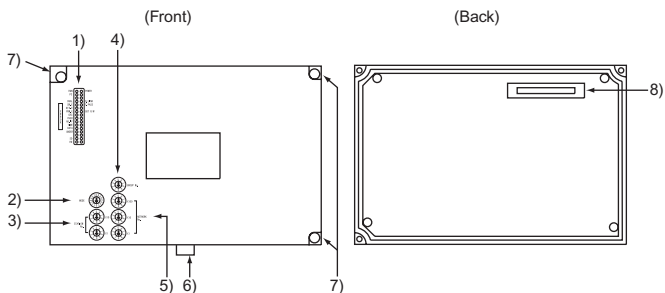
 


GT15-75IF900

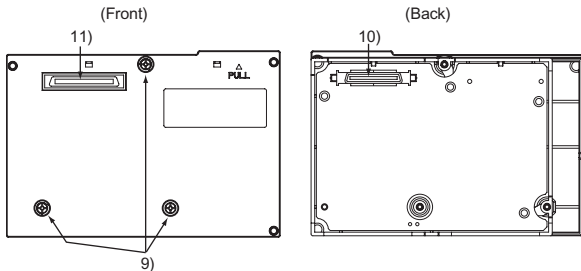
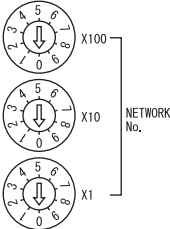


No.	Name	Details	
1)	<p>LED</p> <p>A9GT-QJ71LP23</p> <p>A9GT-QJ71BR13</p>	Name	Details
		RUN	On : Normal operation Off : The WDT error has Toccured.
		PC	On : Set to the PLC to PLC network (Always ON)
		DUAL	On : Multiple transmission is being executed. Off : Multiple transmission is not being executed.
		SW.E	On : No.2 to 5 switch settings are incorrect. Off : Normal
		M/S.E	On : Station No. settings are overlapped on the same network. Off : Normal
		PRM.E	On : An error has occurred because common parameters are inconsistent with station- specific parameters, i.e., parameters received from sub-control station are different from those of host station (received from control station). Off : Normal
		POWER	On : Power is supplied. Off : Power is not supplied.
		D.LINK	On : Data link is being executed. Off : Data link is not being executed.
		T.PASS	On : Participating in the button passing. Off : Not participating in the button passing.
		GOT R/W	On : Communicating with GOT Off : Not communicating with GOT
		CRC	On : An error has occurred, i.e., an error code is detected in the received data. <Cause> The timing when the station that sends data to the corresponding station is disconnected, H/W failure, cable failure, noise, etc. Off : Normal
		OVER	On : An error has occurred, i.e., the received data processing is delayed. <Cause> H/W failure, cable failure, noise, etc. Off : Normal

No.	Name	Details	
1)	LED	AB.IF	<p>On : An error has occurred, i.e., "1" is continuously received more than specified times, or the received data length is too short.            &lt;Cause&gt; The timing when the station that sends data to the corresponding station is disconnected, H/W failure, cable failure, noise, etc.</p> <p>Off : Normal</p>
		TIME	<p>On : When the baton has not been passed to the host station within the monitor time.            &lt;Cause&gt; Short monitor time, cable failure, noise, etc.</p> <p>Off : Normal</p>
		DATA	<p>On : An error has occurred, i.e., an error code is received.            &lt;Cause&gt; Cable failure, noise, etc.</p> <p>Off : Normal</p>
		UNDER	<p>On : An error has occurred, i.e., the internal processing of the data to be sent is not executed at constant intervals.            &lt;Cause&gt; H/W failure.</p> <p>Off : Normal</p>
		LOOP	<p>On : An error has occurred in forward loop/ reverse loop.            &lt;Cause&gt; The adjacent station power is off, cable is disconnected/unconnected.            (Specific to A9GT-QJ71LP23)</p> <p>Off : Normal</p>
		SD	Barely on : Data transmitting
		RD	Barely on : Data transmitting <sup>*2</sup>

No.	Name	Details			
2) *3	Mode setting switch 	Setting of mode (Factory setting at time of shipping: 0)			
		Mode	Name	Contents	
		0	On-line (automatic double line existent)	Data link (automatic double line existent)	
		1	Use not possible		
		2	Off-line	Placing local station in parallel condition	
		3	-	Unusable	
		4	-	Unusable	
		5	-	Unusable	
		6	Test mode 4	Station-to station test (Slave station)	
		7	Test mode 5	Self- loopback test	
		8	Test mode 6	Internal self- loopback test	
		9	Test mode 7	Hardware test	
		A	-	Unusable	
		B	-	Unusable	
		C	-	Unusable	
		D	Test mode 8	Network number confirmation (LED indication)	
E	Test mode 9	Group number confirmation (LED indication)			
F	Test mode 10	Station number confirmation (LED indication)			
3) *3	Station number setting switch 	Station number setting (factory setting at time of shipping: 1) <Setting range> 1 to 64 : station number Other than 1 to 64 : setting error (SW.E LED lamp is lit)			



No.	Name	Details
4) *3	Group number setting Switch 	Group number setting (factory setting at time of shipping: 0) <Setting range> 0 : No group setting (Fixed)*4
5) *3	Network number setting switch 	Network number setting (factory setting at time of shipping: 1) <Setting range> 1 to 239 : Network number Other than 1 to 239: Setting error (SW.E LED lamp is lit)
6)	Connector	A9GT-QJ71LP23 : Connect the optical fiber cable A9GT-QJ71BR13 : Connect the F-type connector
7)	Mounting screw	Screw for mounting to the GT15-75IF900
8)	Connector	Connector for connection to the GT15-75IF900
9)	Mounting screw	Mounting screw to be fixed with the GOT main unit
10)	Interface connector	Connector connecting to GOT
11)	Extension connector	Connector connecting with A9GT-QJ71LP23/ A9GT-QJ71BR13

\*1 : Even if the station No. settings are overlapped, the M/S.E. LED may not be on, depending on the line status or cable connection status. It is recommended to confirm the settings by performing a visual check and executing a confirmation test.

\*2 : If no terminal resistors are attached, this may be always on.  
(This is not a network error (specific to A9GT-QJ71BR13.))

\*3 : Make sure to reset the GOT after changing the settings. However, this does not apply when 2) mode setting switch is changed to any of "D" to "F".


\*4 : The GOT does not use a group number. Set as 0 (No group designation).

---


## 4. Installation Procedure

---


- (1) Power off the GOT.
- (2) Remove the two extension unit covers of the GOT.

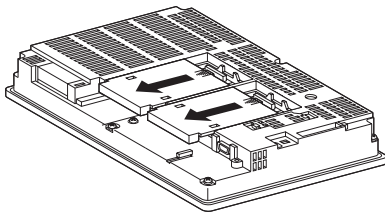


- (3) Fit the GT15-75IF900 along the groove of the GOT case.

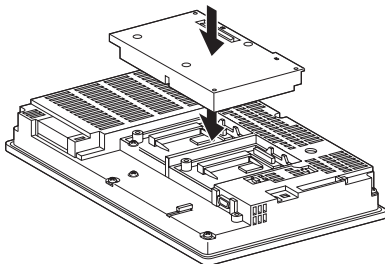


- (4) Fasten the GT15-75IF900 by tightening its mounting screws (3 places) with tightening torque 0.36 to 0.48 N·m.

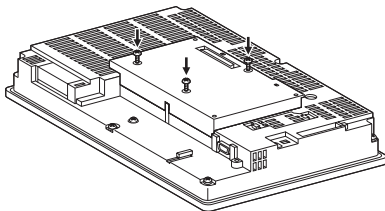


- (5) Attach the communication unit fixing brackets (3 places) to GT15-751F900, then fasten them with tightening torque of 0.36 to 0.48 N·m.

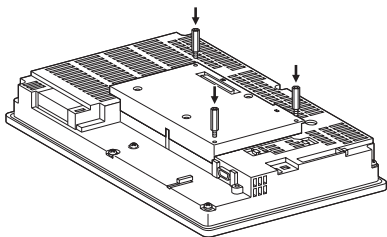

- (6) Mount the network unit (A9GT-QJ71LP23 or A9GT-QJ71BR13) to GT15-751F900.

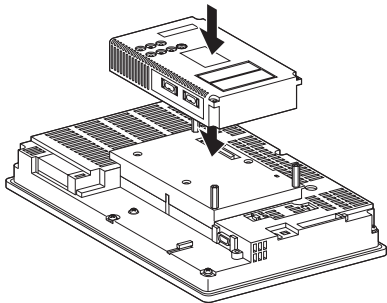

- (7) Fasten the unit fixing brackets (3 places) with tightening torque of 0.36 to 0.48N·m.

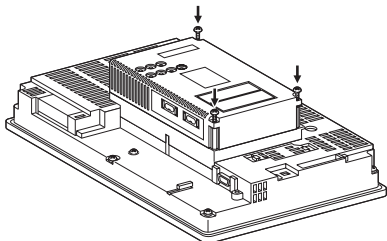

---

---

## 5. Precautions for Laying Cables

---

---

### 5.1 Precautions for cable connection (A9GT-QJ71LP23)

- (1) The distance between stations varies depending on the type of optical fiber cable used.

Type		Distance between stations [m (ft.)]
SI optical fiber cable (Old type: A-2P-□)	L type	500 (1640.5)
	H type	300 (984.3)
SI optical fiber cable		500 (1640.5)
H-PCF optical fiber cable		1000 (3281)
Broad-band H-PCF optical fiber cable		1000 (3281)
QSI optical fiber cable		1000 (3281)

- (2) When connecting an optical fiber cable, the following restrictions on the bending radius must be observed.  
For further details, please ask the supplier where you purchase the cable.
- (3) When laying the optical fiber cable, do not touch the fiber core of the cable connector or module connector, or let dirt or dust collect on it. If oil from the hands, dirt or dust should adhere to the core, the transmission loss will increase, causing a malfunction in the data link.
- (4) When attaching or detaching the optical-fiber cable to/from the module, hold the cable connector securely with the hands.
- (5) Connect the cable connector and module connector securely until you hear a "click" sound.
- (6) Please wire IN/OUT of the connector for the cable correctly.  
After wiring, perform a loop test or station-to-station test or others to confirm if the setting and wiring of A9GT-QJ71LP23 have been done properly.  
For testing methods, refer to the following manuals.
- Type MELSECNET/10 Network system (PLC to PLC network) Reference Manual
  - For QnA/Q4AR MELSECNET/10 Network System Reference Manual
  - Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

It might be generated that a baton abnormal passing cannot be generated when miswiring and the downed bureau which cannot do the loopback of an arbitrary bureau do the row again even by the reclosing of the power supply.

## 5.2 Precautions for cable connection (A9GT-QJ71BR13)

### (1) Restrictions on the cable length between stations

- (a) When connecting between the network modules, the cable lengths indicated in the table below should be used according to the number of stations connected.

A communication error may occur if a cable length other than the lengths indicated in the table is used.



Station-to-station cable length Cable type	Number of stations connected		Number of stations connected	
	2 to 9 stations		10 to 33 stations	
	3C-2V	5C-2V	3C-2V	5C-2V
0 to 1 m (3.28 ft.)	× (cable less than 1m (3.28 ft.) in length cannot be used.)			
1 (3.28 ft.) to 5 m (16.4 ft.)	○	○	○	○
5 (16.4 ft.) to 13 m (42.65 ft.)	○	○	×	×
13 (42.65 ft.) to 17 m (55.78 ft.)	○	○	○	○
17 (55.78 ft.) to 25 m (175.63 ft.)	○	○	×	×
25 (175.63 ft.) to 300 m (98.43 ft.)	○	○	○	○
300 (98.43 ft.) to 500 m (1640.5 ft.)	×	○	×	○

○ : Allowed    × : Not allowed

- (b) If there is the possibility of an increase in the number of stations due to system expansion, install the cables with advance consideration of the restrictions.
- (c) When using a repeater module (models A6BR10 or A6BR10-DC), use the station-to-station cable length indicated by "10 to 33" stations, regardless of the number of stations connected or the number of repeater modules.

(2) Precautions for laying cable

- (a) Coaxial cables must be laid 100mm or more apart from power cables and control cables.
- (b) Consider wiring using double-shielded coaxial cable in places that are subject to large amounts of noise.

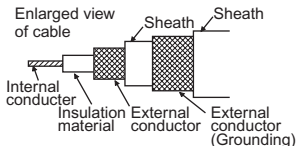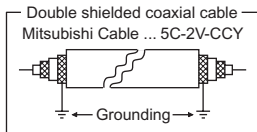


The 5C-2V connector plug is applicable to double-shielded coaxial cable.

Connect the 5C-2V connector plug to the coaxial cable inside a double-shielded coaxial cable. Ground the shielded part outside a double-shielded coaxial cable as shown in the above figure.

- (3) Double shielded coaxial cables have the following restrictions on the bending radius.

Cable type	Allowable bending radius $r$ [mm](in.)	Connector $A$ [mm](in.)
3C-2V	23 (0.91)	50 (1.97)
5C-2V	30 (1.18)	

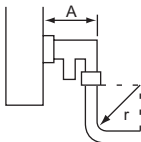

- (4) Do not pull any of the connected coaxial cables.  
This will cause a faulty contact, cable disconnection, or damage to the unit.
- (5) Make sure to connect a terminal resistor to both terminal stations of the coaxial bus type network system.
- (6) The F type connector has the possibility to extract a white oxide according to the use environment.  
However, there is no problem on the function because the oxide is not generated in connected part.

(7) Please wire the cable correctly.


After wiring, perform a station-to-station test or others to confirm if the setting and wiring of A9GT-QJ71BR13 have been done properly. For testing methods, please refer to following manuals.

- Type MELSECNET/10 Network system (PLC to PLC network) Reference Manual
- For QnA/Q4AR MELSECNET/10 Network System Reference Manual
- Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

It might be generated that a baton abnormal passing cannot be generated when miswiring and the downed bureau cannot do the row again even by the reclosing of the power supply.


(8) There are integral type and separate type F-shaped connectors. In the case of the separate type F-shaped connector, tighten the ring of the connector until the ring is tight before connecting the connector to the network module.

If the ring is loose, a communication error may occur.

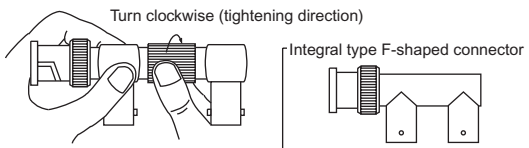

After connecting the F-shaped connector to the network module, retighten its ring periodically.

Retighten it with both hands as shown below.

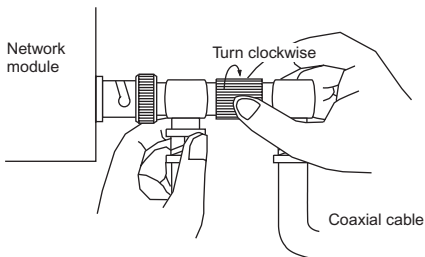

---

---

## 6. Wiring Method

---


---

### (1) A9GT-QJ71LP23

The optical fiber cable is wired in the following manner.

There is no problem even if not wiring in order of the station number.

Define a control station number and a normal station number according to the system specifications.

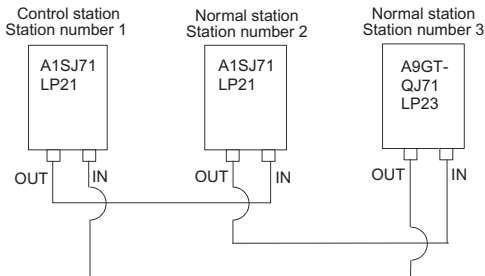


### (2) A9GT-QJ71BR13

The coaxial cable is wired in the following manner.

There is no program even if not wiring in order of the station number.


Define a control station number and a normal station number according to the system specifications.

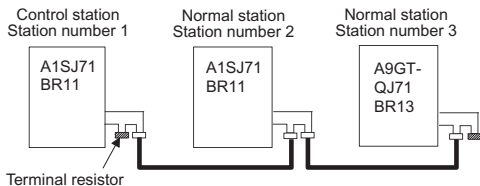




## 7. External Dimensions

(1) GT15-75IF900

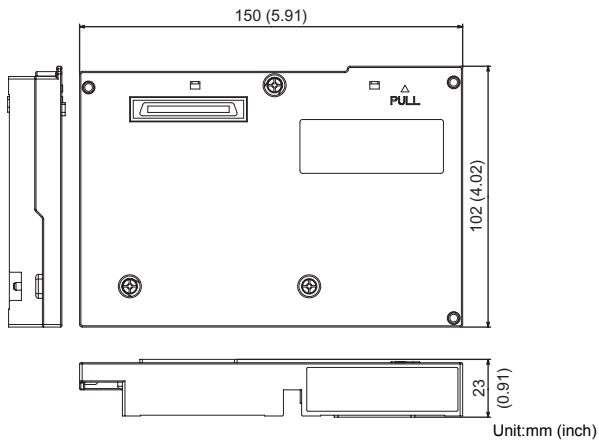

(2) A9GT-QJ71LP23

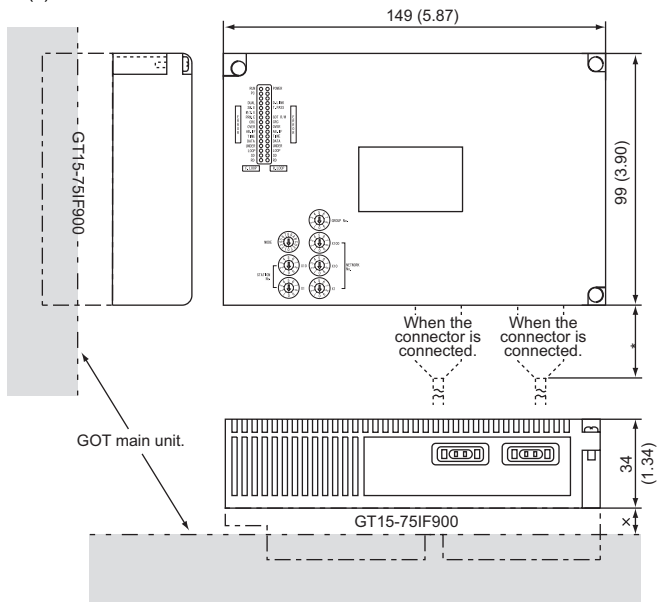


Dimensions of X when mounted to the GOT.

15", 12.1", 10.4"	13.5 (0.53)
8.4"	15.5 (0.61)

Unit:mm (inch)

\*Please contact the Mitsubishi Electric System Service Corporation.

(3) A9GT-QJ71BR13

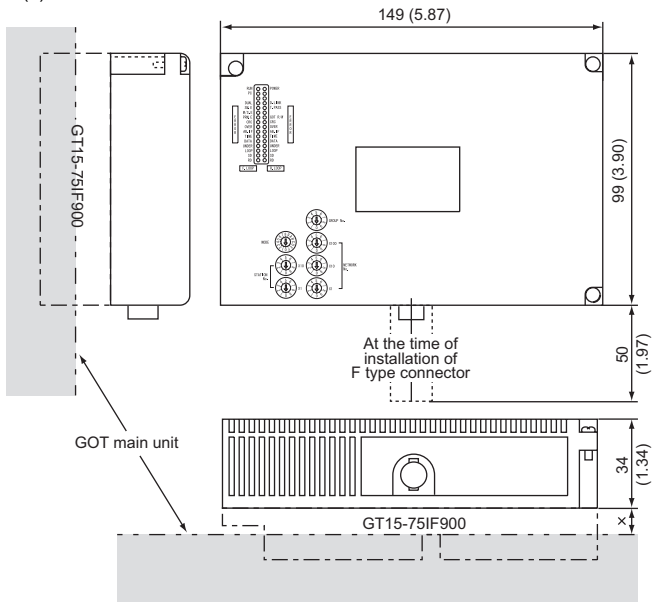

GOT main unit

Dimensions of X when mounted to the GOT.

15", 12.1", 10.4"	13.5 (0.53)
8.4"	15.5 (0.61)

Unit:mm (inch)





**HEADQUARTERS**

MITSUBISHI ELECTRIC EUROPE B.V. **EUROPE**  
 German Branch  
 Gothaer Straße 8  
**D-40880 Ratingen**  
 Phone: +49 (0)2102 / 486-0  
 Fax: +49 (0)2102 / 486-1120

MITSUBISHI ELECTRIC EUROPE B.V. **CZECH REPUBLIC**  
 Czech Branch  
 Radlická 714/113a  
**CZ-158 00 Praha 5**  
 Phone: +420 (0)251 551 470  
 Fax: +420 (0)251-551-471

MITSUBISHI ELECTRIC EUROPE B.V. **FRANCE**  
 French Branch  
 25, Boulevard des Bouvets  
**F-92741 Nanterre Cedex**  
 Phone: +33 (0)1 / 55 68 55 68  
 Fax: +33 (0)1 / 55 68 57 57

MITSUBISHI ELECTRIC EUROPE B.V. **IRELAND**  
 Irish Branch  
 Westgate Business Park, Ballymount  
**IRL-Dublin 24**  
 Phone: +353 (0)1 4198800  
 Fax: +353 (0)1 4198890

MITSUBISHI ELECTRIC EUROPE B.V. **ITALY**  
 Italian Branch  
 Viale Colleoni 7  
**I-20041 Agrate Brianza (MI)**  
 Phone: +39 039 / 60 53 1  
 Fax: +39 039 / 60 53 312

MITSUBISHI ELECTRIC EUROPE B.V. **SPAIN**  
 Spanish Branch  
 Carretera de Rubí 76-80  
**E-08190 Sant Cugat del Vallés (Barcelona)**  
 Phone: 902 131121 // +34 935653131  
 Fax: +34 935891579

MITSUBISHI ELECTRIC EUROPE B.V. **UK**  
 UK Branch  
 Travellers Lane  
**UK-Hatfield, Herts. AL10 8XB**  
 Phone: +44 (0)1707 / 27 61 00  
 Fax: +44 (0)1707 / 27 86 95

MITSUBISHI ELECTRIC CORPORATION **JAPAN**  
 Office Tower "Z" 14 F  
 8-12,1 chome, Harumi Chuo-Ku  
**Tokyo 104-6212**  
 Phone: +81 3 622 160 60  
 Fax: +81 3 622 160 75

MITSUBISHI ELECTRIC AUTOMATION, Inc. **USA**  
 500 Corporate Woods Parkway  
**Vernon Hills, IL 60061**  
 Phone: +1 847 478 21 00  
 Fax: +1 847 478 22 53

**EUROPEAN REPRESENTATIVES**

GEVA **AUSTRIA**  
 Wiener Straße 89  
**AT-2500 Baden**  
 Phone: +43 (0)2252 / 85 55 20  
 Fax: +43 (0)2252 / 488 60

TEHNIKON **BELARUS**  
 Oktyabrskaya 16/5, Off. 703-711  
**BY-220030 Minsk**  
 Phone: +375 (0)17 / 210 46 26  
 Fax: +375 (0)17 / 210 46 26

Koning & Hartman b.v. **BELGIUM**  
 Woluwelaan 31  
**BE-1800 Vilvoorde**  
 Phone: +32 (0)2 / 257 02 40  
 Fax: +32 (0)2 / 257 02 49

INEA BH d.o.o. **BOSNIA AND HERZEGOVINA**  
 Aleja Lipa 56  
**BA-71000 Sarajevo**  
 Phone: +387 (0)33 / 921 164  
 Fax: +387 (0)33 / 524 539

AKHNATON **BULGARIA**  
 4 Andrej Ljapchev Blvd. Pb 21  
**BG-1756 Sofia**  
 Phone: +359 (0)2 / 817 6004  
 Fax: +359 (0)2 / 97 44 06 1

INEA CR d.o.o. **CROATIA**  
 Losinjska 4 a  
**HR-10000 Zagreb**  
 Phone: +385 (0)1 / 36 940 - 01 / -02 / -03  
 Fax: +385 (0)1 / 36 940 - 03

AutoCont C.S. s.r.o. **CZECH REPUBLIC**  
 Technologická 374/6  
**CZ-708 00 Ostrava-Pustkovec**  
 Phone: +420 595 691 150  
 Fax: +420 595 691 199

B:TECH A.S. **CZECH REPUBLIC**  
 U Borové 69  
**CZ-58001 Havlíčkův Brod**  
 Phone: +420 (0)569 777 777  
 Fax: +420 (0)569-777 778

Beijer Electronics A/S **DENMARK**  
 Lykkegårdsvej 17, 1.  
**DK-4000 Roskilde**  
 Phone: +45 (0)46 / 75 76 66  
 Fax: +45 (0)46 / 75 56 26

Beijer Electronics Eesti OÜ **ESTONIA**  
 Pärnu mnt.160i  
**EE-11317 Tallinn**  
 Phone: +372 (0)6 / 51 81 40  
 Fax: +372 (0)6 / 51 81 49

Beijer Electronics OY **FINLAND**  
 Jaakonkatu 2  
**FIN-01620 Vantaa**  
 Phone: +358 (0)207 / 463 500  
 Fax: +358 (0)207 / 463 501

UTEKO A.B.E.E. **GREECE**  
 5, Mavrogenous Str.  
**GR-18542 Piraeus**  
 Phone: +30 211 / 1206 900  
 Fax: +30 211 / 1206 999

MELTRADE Ltd. **HUNGARY**  
 Fertő utca 14.  
**HU-1107 Budapest**  
 Phone: +36 (0)1 / 431-9726  
 Fax: +36 (0)1 / 431-9727

Beijer Electronics SIA **LATVIA**  
 Vestienas iela 2  
**LV-1035 Riga**  
 Phone: +371 (0)784 / 2280  
 Fax: +371 (0)784 / 2281

Beijer Electronics UAB **LITHUANIA**  
 Savanoriu Pr. 187  
**LT-02300 Vilnius**  
 Phone: +370 (0)5 / 232 3101  
 Fax: +370 (0)5 / 232 2980

**EUROPEAN REPRESENTATIVES**

INTEHSIS srl **MOLDOVA**  
 bld. Traian 23/1  
**MD-2060 Kishinev**  
 Phone: +373 (0)22 / 66 4242  
 Fax: +373 (0)22 / 66 4280

Koning & Hartman b.v. **NETHERLANDS**  
 Haarlerbergweg 21-23  
**NL-1101 CH Amsterdam**  
 Phone: +31 (0)20 / 587 76 00  
 Fax: +31 (0)20 / 587 76 05

Beijer Electronics AS **NORWAY**  
 Postboks 487  
**NO-3002 Drammen**  
 Phone: +47 (0)32 / 24 30 00  
 Fax: +47 (0)32 / 84 85 77

MPL Technology Sp. z o.o. **POLAND**  
 Ul. Krakowska 50  
**PL-32-083 Balice**  
 Phone: +48 (0)12 / 630 47 00  
 Fax: +48 (0)12 / 630 47 01

Sirius Trading & Services srl **ROMANIA**  
 Aleea Lacul Morii Nr. 3  
**RO-060841 Bucuresti, Sector 6**  
 Phone: +40 (0)21 / 430 40 06  
 Fax: +40 (0)21 / 430 40 02

Craft Con. & Engineering d.o.o. **SERBIA**  
 Bulevar Svetog Cara Konstantina 80-86  
**SER-18106 Nis**  
 Phone: +381 (0)18 / 292-24-4/5  
 Fax: +381 (0)18 / 292-24-4/5

INEA SR d.o.o. **SERBIA**  
 Izletnicka 10  
**SER-113000 Smederevo**  
 Phone: +381 (0)26 / 617 163  
 Fax: +381 (0)26 / 617 163

AutoCont Control s.r.o. **SLOVAKIA**  
 Radlinského 47  
**SK-02601 Dolny Kubin**  
 Phone: +421 (0)43 / 5868210  
 Fax: +421 (0)43 / 5868210

CS MTrade Slovensko, s.r.o. **SLOVAKIA**  
 Vajanského 58  
**SK-92101 Piestany**  
 Phone: +421 (0)33 / 7742 760  
 Fax: +421 (0)33 / 7735 144

INEA d.o.o. **SLOVENIA**  
 Stegne 11  
**SI-1000 Ljubljana**  
 Phone: +386 (0)1 / 513 8100  
 Fax: +386 (0)1 / 513 8170

Beijer Electronics AB **SWEDEN**  
 Box 426  
**SE-20124 Malmö**  
 Phone: +46 (0)40 / 35 86 00  
 Fax: +46 (0)40 / 35 86 02

Econotec AG **SWITZERLAND**  
 Hinterdorfstr. 12  
**CH-8309 Nürensdorf**  
 Phone: +41 (0)44 / 838 48 11  
 Fax: +41 (0)44 / 838 48 12

GTS **TURKEY**  
 Darülaceze Cad. No. 43 KAT. 2  
**TR-34384 Okmeydanı-Istanbul**  
 Phone: +90 (0)212 / 320 1640  
 Fax: +90 (0)212 / 320 1649

CSC Automation Ltd. **UKRAINE**  
 15, M. Raskova St., Fl. 10, Office 1010  
**UA-02002 Kiev**  
 Phone: +380 (0)44 / 494 33 55  
 Fax: +380 (0)44 / 494-33-66

**EURASIAN REPRESENTATIVES**

Kazpromautomatiks Ltd. **KAZAKHSTAN**  
 Mustafina Str. 7/2  
**KAZ-470046 Karaganda**  
 Phone: +7 7212 / 50 11 50  
 Fax: +7 7212 / 50 11 50

CONSUS **RUSSIA**  
 Promyshlennaya st. 42  
**RU-198099 St. Petersburg**  
 Phone: +7 812 / 325 36 53  
 Fax: +7 812 / 325 36 53

ELECTROTECHNICAL SYSTEMS **RUSSIA**  
 Derbenevskaya st. 11A, Office 69  
**RU-115114 Moscow**  
 Phone: +7 495 / 744 55 54  
 Fax: +7 495 / 744 55 54

ELEKTROSTILY **RUSSIA**  
 Rubzovskaja nab. 4-3, No. 8  
**RU-105082 Moscow**  
 Phone: +7 495 / 545 3419  
 Fax: +7 495 / 545 3419

NPP "URALELEKTRA" **RUSSIA**  
 Sverdlova 11A  
**RU-620027 Ekaterinburg**  
 Phone: +7 343 / 353 2745  
 Fax: +7 343 / 353 2461

**MIDDLE EAST REPRESENTATIVES**

ILAN & GAVISH Ltd. **ISRAEL**  
 24 Shenkar St., Kiryat Arie  
**IL-49001 Petah-Tiqva**  
 Phone: +972 (0)3 / 922 18 24  
 Fax: +972 (0)3 / 924 0761

**AFRICAN REPRESENTATIVE**

CBI Ltd. **SOUTH AFRICA**  
 Private Bag 2016  
**ZA-1600 Isando**  
 Phone: +27 (0)11 / 928 2000  
 Fax: +27 (0)11 / 392 2354