

Fieldbus Independent I/O Modules

8 DO DC 24 V 0.5 A, High-Side Switching 750-530(/xxx-xxx)



Manual

Version 1.0.5



Copyright © 2006 by WAGO Kontakttechnik GmbH & Co. KG All rights reserved.

WAGO Kontakttechnik GmbH & Co. KG

Hansastraße 27 D-32423 Minden

Phone: +49 (0) 571/8 87 - 0 Fax: +49 (0) 571/8 87 - 1 69

E-Mail: info@wago.com

Web: http://www.wago.com

Technical Support

Phone: +49 (0) 571/8 87 - 5 55 Fax: +49 (0) 571/8 87 - 85 55

E-Mail: support@wago.com

Every conceivable measure has been taken to ensure the correctness and completeness of this documentation. However, as errors can never be fully excluded, we would appreciate any information or ideas at any time.

E-Mail: documentation@wago.com

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally trademark or patent protected.



Content

1 Impor	tant Comments	4
-	al Principles	
	Copyright	
	Personnel Qualification	
	ntended Use	
1.2 Sym	ıbols	5
	nber Notation	
1.4 Safe	ty Notes	6
1.5 Sco	De	6
		_
2 I/O M	odules	7
2.1 Digi	tal Output Module	7
2.1.1 7	50-530(/xxx-xxx) [8 DO DC 24 V 0.5 A, High-Side Switching].	7
2.1.1.1	Variations	7
2.1.1.2	View	7
2112	Description	8
2.1.1.3		~
2.1.1.3 2.1.1.4	Display Elements	9
	-	
2.1.1.4	Display Elements	9
2.1.1.4 2.1.1.5	Display Elements Schematic Diagram	9 10



1 Important Comments

To ensure fast installation and start-up of the units described in this manual, we strongly recommend that the following information and explanations are carefully read and abided by.

1.1 Legal Principles

1.1.1 Copyright

This manual is copyrighted, together with all figures and illustrations contained therein. Any use of this manual which infringes the copyright provisions stipulated herein, is not permitted. Reproduction, translation and electronic and photo-technical archiving and amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG. Non-observance will entail the right of claims for damages.

WAGO Kontakttechnik GmbH & Co. KG reserves the right to perform modifications allowed by technical progress. In case of grant of a patent or legal protection of utility patents all rights are reserved by WAGO Kontakttechnik GmbH & Co. KG. Products of other manufacturers are always named without referring to patent rights. The existence of such rights can therefore not be ruled out.

1.1.2 Personnel Qualification

The use of the product detailed in this manual is exclusively geared to specialists having qualifications in PLC programming, electrical specialists or persons instructed by electrical specialists who are also familiar with the valid standards. WAGO Kontakttechnik GmbH & Co. KG declines all liability resulting from improper action and damage to WAGO products and third party products due to non-observance of the information contained in this manual.

1.1.3 Intended Use

For each individual application, the components supplied are to work with a dedicated hardware and software configuration. Modifications are only permitted within the framework of the possibilities documented in the manuals. All other changes to the hardware and/or software and the non-conforming use of the components entail the exclusion of liability on part of WAGO Kontakttechnik GmbH & Co. KG.

Please direct any requirements pertaining to a modified and/or new hardware or software configuration directly to WAGO Kontakttechnik GmbH & Co. KG.



1.2 Symbols



Danger Always abide by this information to protect persons from injury.

Warning

Always abide by this information to prevent damage to the device.



Attention Marginal conditions must always be observed to ensure smooth operation.



ESD (Electrostatic Discharge) Warning of damage to the components by electrostatic discharge. Observe the precautionary measure for handling components at risk.



Note

Routines or advice for efficient use of the device and software optimization.

More information

References on additional literature, manuals, data sheets and internet pages.

1.3 Number Notation

Number Code	Example	Note		
Decimal	100	normal notation		
Hexadecimal	0x64	C notation		
Binary '100' '0110.0100'		within inverted commas, nibble separated with dots		



1.4 Safety Notes



Warning

Switch off the system prior to working on bus modules!

In the event of deformed contacts, the module in question is to be replaced, as its functionality can no longer be ensured on a long-term basis.

The components are not resistant against materials having seeping and insulating properties. Belonging to this group of materials is: e.g. aerosols, silicones, triglycerides (found in some hand creams).

If it cannot be ruled out that these materials appear in the component environment, then additional measures are to be taken:

- installation of the components into an appropriate enclosure

- handling of the components only with clean tools and materials.



Attention

Cleaning of soiled contacts may only be done with ethyl alcohol and leather cloths. Thereby, the ESD information is to be regarded.

Do not use any contact spray. The spray may impair the functioning of the contact area.

The WAGO-I/O-SYSTEM 750 and its components are an open system. It must only be assembled in housings, cabinets or in electrical operation rooms. Access must only be given via a key or tool to authorized qualified personnel.

The relevant valid and applicable standards and guidelines concerning the installation of switch boxes are to be observed.



ESD (Electrostatic Discharge)

The modules are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the modules, ensure that the environment (persons, workplace and packing) is well grounded. Avoid touching conductive components, e.g. gold contacts.

1.5 Scope

This manual describes the Digital Output Module 750-530(/xxx-xxx) 8 DO DC 24 V 0.5 A, High-Side Switching of the modular WAGO-I/O-SYSTEM 750.

Handling, assembly and start-up are described in the manual of the Fieldbus Coupler. Therefore this documentation is valid only in the connection with the appropriate manual.



2 I/O Modules

2.1 Digital Output Module

2.1.1 750-530(/xxx-xxx) [8 DO DC 24 V 0.5 A, High-Side Switching]

8-Channel Digital Output Module DC 24 V 0.5 A, short-circuit-protected, high-side switching

2.1.1.1 Variations

Item-No.	Designation	Description
750-530	8 DO DC 24 V 0.5 A, High-Side Switching	8-Channel Digital Output Module DC 24 V 0.5 A, short-circuit-protected, high-side switching
750-530/025-000	8 DO DC 24 V 0.5 A, High-Side Switching/T	8-Channel Digital Output Module DC 24 V 0.5 A,short-circuit-protected, high-side switching extended temperature range from – 20 °C to +60 °C

2.1.1.2 View

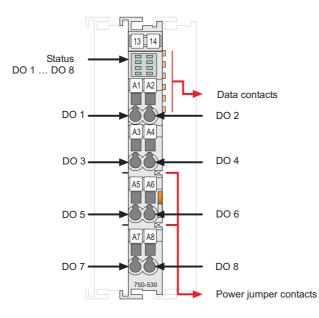


Fig. 2.1.1-1: 8-Channel Digital Output Module 750-530

g053000e



2.1.1.3 Description

The connected load is switched via the digital output from the control system.

The module has eight output channels. Eight actuators may be directly connected using the connections signal output DO 1 to DO 8.



Note

For the connection of inductive loads a protected circuit, e. g. a recovery diode, has to be switched parallel to this load.

The output channels are high-side switching. This means that the status of the output channels is "high" when the 24 V field side supply voltage is internally connected to the output channels.

The supply voltage for the field side is derived from an adjacent supply module by means of power jumper contacts.

The status of the eight short-circuit-protected output channels is indicated via green status LEDs.

An optocoupler is used for electrical isolation between the bus and the field side.

Any configuration of the output modules is possible when designing the fieldbus node. Grouping of module types is not necessary.

The field side supply voltage of 24 V for the output module is derived from adjacent I/O modules or from a supply module. The supply voltage for the field side is made automatically through the individual I/O modules by means of power jumper contacts.



Warning

The maximum current of the internal power jumper contacts is 10 A. When configuring the system it is important not to exceed the maximum/sum current. However, if such a case should occur, another supply module must be added.



Attention

In case of overloads a supply module with fuse (750-601) must be connected on the line side to protect the output modules!

The output module 750-530 can be used with all couplers/controllers of the WAGO-I/O-SYSTEM 750.



2.1.1.4 Display Elements

	LED	Channel	Designation	State	Function
		1	Status DO 1	off	Output DO 1: not active
	green			on	Output DO 1: active
	green	2	Status DO 2	off	Output DO 2: not active
				on	Output DO 2: active
	green	3	Status	off	Output DO 3: not active
			DO 3	on	Output DO 3: active
3 14 DO 2	green	4	Status DO 4	off	Output DO 4: not active
				on	Output DO 4: active
	green	5	Status DO 5	off	Output DO 5: not active
2: Display				on	Output DO 5: active
40002x	green	6	Status DO 6	off	Output DO 6: not active
				on	Output DO 6: active
	green	7	Status DO 7	off	Output DO 7: not active
		7		on	Output DO 7: active
	green	8	Status DO 8	off	Output DO 8: not active
		0		on	Output DO 8: active

Fig. 2.1.1-2: Display Elements g040002x

13

2.1.1.5 Schematic Diagram

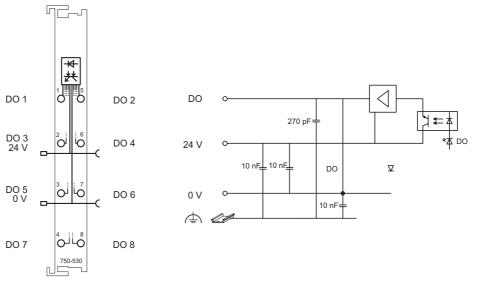


Fig. 2.1.1-3: 8-Channel Digital Output Module 750-530

g053001e



2.1.1.6 Technical Data

Module Spec	ific Data				
Number of ou	tputs	8			
Current consu	mption (internal)	25 mA			
Voltage via po	ower jumper contacts	DC 24 V (-25 % +30 %)			
Type of load		resistive, inductive, lamps			
Switching rate	max.	2 kHz			
Reverse voltag	ge protection	yes			
Output curren	t	0.5 A short-circuit-p	rotected		
Absorbable er (unique switch		0.9 J L _{max.} = 2 W _{max.} /I ²			
Isolation		500 V (System/Field	l)		
Current consu	mption typ. (field side)	15 mA (per module)	+ load		
Internal bit wi	dth	8 Bit out			
Dimensions (r	nm) W x H x L	12 x 64* x 100 * from upper edge o	f 35 DIN rail		
Weight		ca. 50 g			
Standards an	d Regulations (cf. Chap	ter 2.2 of the Couple	er/Controller Manual)		
EMC-Immuni	ty to interference (CE)	acc. to EN 50082-2 (96)			
EMC-Emissio	on of interference (CE)	acc. to EN 50081-1 (93)			
EMC-Immunity to interference (Ship building)		acc. to Germanischer Lloyd (01)			
EMC-Emissio (Ship building	on of interference	acc. to Germanischer Lloyd (01)			
Approvals (c	f. Chapter 2.2 of the Cou	pler/Controller Ma	nual)		
c UL us	_C UL _{US} (UL508)				
ABS	ABS (American Bureau	of Shipping)			
0	BV (Bureau Veritas) (ap	oplied for)			
<u> </u>	DNV (Det Norske Verita	Cl. B			
GL	GL (Germanischer Lloy	Cat. A, B, C, D			
	KR (Korean Register of				
Kagada	LR (Lloyd's Register) (a	Env. 1, 2, 3, 4			
	NKK (Nippon Kaiji Kyo	okai)			
c UUus	_C UL _{US} (UL1604)		Class I Div2 ABCD T4A		
(Ex)	DEMKO		II 3 GD EEx nA II T4		
CE	Conformity Marking				



i

More Information

Detailed references to the approvals are listed in the document "Overview Approvals WAGO-I/O-SYSTEM 750", which you can find on the CD ROM ELECTRONICC Tools and Docs (Item-No.: 0888-0412) or in the internet under: www.wago.com \rightarrow Documentation \rightarrow WAGO-I/O-SYSTEM 750 \rightarrow System Description

2.1.1.7 Process Image

Output bit	B7	B6	B5	B4	B3	B2	B1	B0
Meaning	controls DO 8 –	controls DO 7 –	controls DO 6 –	controls DO 5 –	controls DO 4 –	controls DO 3 –	controls DO 2 –	controls DO 1 –
	Channel 8	Channel 7	Channel 6	Channel 5	Channel 4	Channel 3	Channel 2	Channel 1





WAGO Kontakttechnik GmbH & Co. KG Postfach 2880 • D-32385 Minden Hansastraße 27 • D-32423 Minden Phone: 0571/887 - 0Fax: 0571/887 - 169E-Mail: info@wago.com

Internet: http://www.wago.com