

Cleaning your ProDVX PCAP Touch Screen

1. First, power down the device or ensure your software application can endure false touches while you clean.


2. Make sure no liquids get inside the unit. Do not spray directly on to the Touch Screen. Instead, use wet wipes, a sprayed cloth or a dampened cloth.

3. Use ProDVX Pro Screen Cleaner or select only non- abrasive cleaning wipes or cloths to avoid scratching touchscreens.

4. Avoid highly concentrated alcohol (> 70%), non-diluted bleach or ammonia solutions, as these may damage the surface of the device.

5. Wipe the surfaces with the mentioned cleaning products, and allow them to dry.

6. Wipe touch panel in a “Z” motion, ensuring the cloth comes into contact with the entirety of the Touch Screen surface.

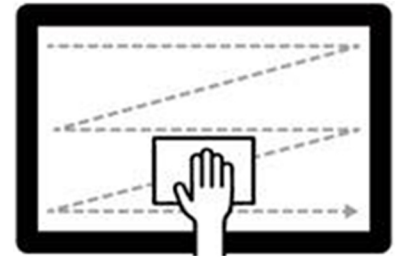

Desinfecting your ProDVX PCAP Touch Screen

1. First, power down the device or ensure your software application can endure false touches while you clean.

2. Dampen a new clean, non-abrasive cloth with a disinfectant (Isopropyl alcohol <70% alcohol or 1: 100 bleach: water solution). Ensure excess liquid is squeezed from the cloth.

3. Disinfect the surfaces by wiping them with the cloth or wipe, and allow the surface to dry.

4. Wipe touch panel in a “Z” motion, ensuring the cloth comes into contact with the entirety of the Touch Screen surface.



FOR INFO PLEASE CONTACT OUR SALESTEAM