



Mitsubishi Programmable Controller

MELSEC iQ-R
series

MELSEC iQ-R MES Interface Module User's Manual (Startup)



-RD81MES96N
-RD81MES96
-SW1DND-RMESIF-E(MX MESInterface-R)

SAFETY PRECAUTIONS

(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

In this manual, the safety precautions are classified into two levels: "⚠️ WARNING" and "⚠️ CAUTION".

 WARNING	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
 CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "⚠️ CAUTION" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

[Design Precautions]

WARNING

- Configure safety circuits external to the programmable controller to ensure that the entire system operates safely even when a fault occurs in the external power supply or the programmable controller. Failure to do so may result in an accident due to an incorrect output or malfunction.
 - (1) Emergency stop circuits, protection circuits, and protective interlock circuits for conflicting operations (such as forward/reverse rotations or upper/lower limit positioning) must be configured external to the programmable controller.
 - (2) When the programmable controller detects an abnormal condition, it stops the operation and all outputs are:
 - Turned off if the overcurrent or overvoltage protection of the power supply module is activated.
 - Held or turned off according to the parameter setting if the self-diagnostic function of the CPU module detects an error such as a watchdog timer error.
 - (3) All outputs may be turned on if an error occurs in a part, such as an I/O control part, where the CPU module cannot detect any error. To ensure safety operation in such a case, provide a safety mechanism or a fail-safe circuit external to the programmable controller. For a fail-safe circuit example, refer to "General Safety Requirements" in the MELSEC iQ-R Module Configuration Manual.
 - (4) Outputs may remain on or off due to a failure of a component such as a relay and transistor in an output circuit. Configure an external circuit for monitoring output signals that could cause a serious accident.
 - In an output circuit, when a load current exceeding the rated current or an overcurrent caused by a load short-circuit flows for a long time, it may cause smoke and fire. To prevent this, configure an external safety circuit, such as a fuse.
 - Configure a circuit so that the programmable controller is turned on first and then the external power supply. If the external power supply is turned on first, an accident may occur due to an incorrect output or malfunction.
 - For the operating status of each station after a communication failure, refer to manuals relevant to the network. Incorrect output or malfunction due to a communication failure may result in an accident.
 - When connecting an external device with a CPU module or intelligent function module to modify data of a running programmable controller, configure an interlock circuit in the program to ensure that the entire system will always operate safely. For other forms of control (such as program modification, parameter change, forced output, or operating status change) of a running programmable controller, read the relevant manuals carefully and ensure that the operation is safe before proceeding. Improper operation may damage machines or cause accidents.
 - Especially, when a remote programmable controller is controlled by an external device, immediate action cannot be taken if a problem occurs in the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
-

[Design Precautions]

WARNING

- Do not write any data to the "system area" and "write-protect area" of the buffer memory in the module. Also, do not use any "use prohibited" signals as an output signal from the CPU module to each module. Doing so may cause malfunction of the programmable controller system. For the "system area", "write-protect area", and the "use prohibited" signals, refer to the user's manual for the module used.
 - If a communication cable is disconnected, the network may be unstable, resulting in a communication failure of multiple stations. Configure an interlock circuit in the program to ensure that the entire system will always operate safely even if communications fail. Incorrect output or malfunction due to a communication failure may result in an accident.
 - To maintain the safety of the programmable controller system against unauthorized access from external devices via the network, take appropriate measures. To maintain the safety against unauthorized access via the Internet, take measures such as installing a firewall.
-

[Design Precautions]

CAUTION

- Do not install the control lines or communication cables together with the main circuit lines or power cables. Keep a distance of 100 mm or more between them. Failure to do so may result in malfunction due to noise.
 - During control of an inductive load such as a lamp, heater, or solenoid valve, a large current (approximately ten times greater than normal) may flow when the output is turned from off to on. Therefore, use a module that has a sufficient current rating.
 - After the CPU module is powered on or is reset, the time taken to enter the RUN status varies depending on the system configuration, parameter settings, and/or program size. Design circuits so that the entire system will always operate safely, regardless of the time.
 - Do not power off the programmable controller or do not reset the CPU module while the settings are being written. Doing so will make the data in the flash ROM or SD memory card undefined. The values need to be set in the buffer memory and written to the flash ROM or the SD memory card again. Doing so may cause malfunction or failure of the module.
 - When changing the operating status of the CPU module from external devices (such as remote RUN/STOP functions), select "Do Not Open in Program" for "Open Method Setting" in the module parameters. If "Open in Program" is selected, an execution of remote STOP causes the communication line to close. Consequently, the CPU module cannot reopen the communication line, and the external device cannot execute the remote RUN.
-

[Installation Precautions]

WARNING

- Shut off the external power supply (all phases) used in the system before mounting or removing the module. Failure to do so may result in electric shock or cause the module to fail or malfunction.
-

[Installation Precautions]

CAUTION

- Use the programmable controller in an environment that meets general specifications written in Safety Guidelines included in the base unit. Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
 - To mount a module, place the concave part(s) located at the bottom onto the guide(s) of the base unit, and push in the module, and make sure to fix the module with screws since this module has no module fixing hook. Incorrect interconnection may cause malfunction, failure, or drop of the module.
 - Tighten the screws within the specified torque range. Undertightening can cause drop of the screw, short circuit, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
 - When using an extension cable, connect it to the extension cable connector of the base unit securely. Check the connection for looseness. Poor contact may cause malfunction.
 - When using an SD memory card, fully insert it into the memory card slot. Check that it is inserted completely. Poor contact may cause malfunction.
 - Securely insert an extended SRAM cassette or a battery-less option cassette into the cassette connector of the CPU module. After insertion, close the cassette cover and check that the cassette is inserted completely. Poor contact may cause malfunction.
 - Do not directly touch any conductive parts and electronic components of the module, SD memory card, extended SRAM cassette, battery-less option cassette, or connector. Doing so can cause malfunction or failure of the module.
-

[Wiring Precautions]

WARNING

- Shut off the external power supply (all phases) used in the system before installation and wiring. Failure to do so may result in electric shock or cause the module to fail or malfunction.
 - After installation and wiring, attach the included terminal cover to the module before turning it on for operation. Failure to do so may result in electric shock.
-

[Wiring Precautions]

CAUTION

- Individually ground the FG and LG terminals of the programmable controller with a ground resistance of 100 ohms or less. Failure to do so may result in electric shock or malfunction.
 - Use applicable solderless terminals and tighten them within the specified torque range. If any spade solderless terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
 - Check the rated voltage and signal layout before wiring to the module, and connect the cables correctly. Connecting a power supply with a different voltage rating or incorrect wiring may cause fire or failure.
 - Connectors for external devices must be crimped or pressed with the tool specified by the manufacturer, or must be correctly soldered. Incomplete connections may cause short circuit, fire, or malfunction.
 - Securely connect the connector to the module. Poor contact may cause malfunction.
 - Do not install the control lines or communication cables together with the main circuit lines or power cables. Keep a distance of 100 mm or more between them. Failure to do so may result in malfunction due to noise.
 - Place the cables in a duct or clamp them. If not, dangling cables may swing or inadvertently be pulled, resulting in malfunction or damage to modules or cables.
In addition, the weight of the cables may put stress on modules in an environment of strong vibrations and shocks.
Do not clamp the extension cables with the jacket stripped. Doing so may change the characteristics of the cables, resulting in malfunction.
 - Check the interface type and correctly connect the cable. Incorrect wiring (connecting the cable to an incorrect interface) may cause failure of the module and external device.
 - Tighten the terminal screws or connector screws within the specified torque range. Undertightening can cause drop of the screw, short circuit, fire, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, fire, or malfunction.
 - When disconnecting the cable from the module, do not pull the cable by the cable part. For the cable with connector, hold the connector part of the cable. For the cable connected to the terminal block, loosen the terminal screw. Pulling the cable connected to the module may result in malfunction or damage to the module or cable.
 - Prevent foreign matter such as dust or wire chips from entering the module. Such foreign matter can cause a fire, failure, or malfunction.
 - A protective film is attached to the top of the module to prevent foreign matter, such as wire chips, from entering the module during wiring. Do not remove the film during wiring. Remove it for heat dissipation before system operation.
-

[Wiring Precautions]

CAUTION

- Programmable controllers must be installed in control panels. Connect the main power supply to the power supply module in the control panel through a relay terminal block. Wiring and replacement of a power supply module must be performed by qualified maintenance personnel with knowledge of protection against electric shock. For wiring, refer to the MELSEC iQ-R Module Configuration Manual.
 - For Ethernet cables to be used in the system, select the ones that meet the specifications in the user's manual for the module used. If not, normal data transmission is not guaranteed.
-

[Startup and Maintenance Precautions]

WARNING

- Do not touch any terminal while power is on. Doing so will cause electric shock or malfunction.
 - Correctly connect the battery connector. Do not charge, disassemble, heat, short-circuit, solder, or throw the battery into the fire. Also, do not expose it to liquid or strong shock. Doing so will cause the battery to produce heat, explode, ignite, or leak, resulting in injury or fire.
 - Shut off the external power supply (all phases) used in the system before cleaning the module or retightening the terminal screws, connector screws, or module fixing screws. Failure to do so may result in electric shock.
-

[Startup and Maintenance Precautions]

CAUTION

- When connecting an external device with a CPU module or intelligent function module to modify data of a running programmable controller, configure an interlock circuit in the program to ensure that the entire system will always operate safely. For other forms of control (such as program modification, parameter change, forced output, or operating status change) of a running programmable controller, read the relevant manuals carefully and ensure that the operation is safe before proceeding. Improper operation may damage machines or cause accidents.
 - Especially, when a remote programmable controller is controlled by an external device, immediate action cannot be taken if a problem occurs in the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
 - Do not disassemble or modify the modules. Doing so may cause failure, malfunction, injury, or a fire.
 - Use any radio communication device such as a cellular phone or PHS (Personal Handy-phone System) more than 25cm away in all directions from the programmable controller. Failure to do so may cause malfunction.
 - Shut off the external power supply (all phases) used in the system before mounting or removing the module. Failure to do so may cause the module to fail or malfunction.
 - Tighten the screws within the specified torque range. Undertightening can cause drop of the component or wire, short circuit, or malfunction. Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
 - After the first use of the product, do not perform each of the following operations more than 50 times (IEC 61131-2/JIS B 3502 compliant).
Exceeding the limit may cause malfunction.
Mounting/removing the module to/from the base unit
Inserting/removing the extended SRAM cassette or battery-less option cassette to/from the CPU module
Mounting/removing the terminal block to/from the module
 - After the first use of the product, do not insert/remove the SD memory card to/from the CPU module more than 500 times. Exceeding the limit may cause malfunction.
 - Do not touch the metal terminals on the back side of the SD memory card. Doing so may cause malfunction or failure of the module.
 - Do not touch the integrated circuits on the circuit board of an extended SRAM cassette or a battery-less option cassette. Doing so may cause malfunction or failure of the module.
 - Do not drop or apply shock to the battery to be installed in the module. Doing so may damage the battery, causing the battery fluid to leak inside the battery. If the battery is dropped or any shock is applied to it, dispose of it without using.
 - Startup and maintenance of a control panel must be performed by qualified maintenance personnel with knowledge of protection against electric shock. Lock the control panel so that only qualified maintenance personnel can operate it.
-

[Startup and Maintenance Precautions]

CAUTION

- Before handling the module, touch a conducting object such as a grounded metal to discharge the static electricity from the human body. Failure to do so may cause the module to fail or malfunction.
-

[Operating Precautions]

CAUTION

- When changing data and operating status, and modifying program of the running programmable controller from an external device such as a personal computer connected to an intelligent function module, read relevant manuals carefully and ensure the safety before operation. Incorrect change or modification may cause system malfunction, damage to the machines, or accidents.
 - Do not power off the programmable controller or reset the CPU module while the setting values in the buffer memory are being written to the flash ROM in the module. Doing so will make the data in the flash ROM or SD memory card undefined. The values need to be set in the buffer memory and written to the flash ROM or SD memory card again. Doing so can cause malfunction or failure of the module.
-

[Disposal Precautions]

CAUTION

- When disposing of this product, treat it as industrial waste.
 - When disposing of batteries, separate them from other wastes according to the local regulations. For details on battery regulations in EU member states, refer to the MELSEC iQ-R Module Configuration Manual.
-

[Transportation Precautions]

CAUTION

- When transporting lithium batteries, follow the transportation regulations. For details on the regulated models, refer to the MELSEC iQ-R Module Configuration Manual.
 - The halogens (such as fluorine, chlorine, bromine, and iodine), which are contained in a fumigant used for disinfection and pest control of wood packaging materials, may cause failure of the product. Prevent the entry of fumigant residues into the product or consider other methods (such as heat treatment) instead of fumigation. The disinfection and pest control measures must be applied to unprocessed raw wood.
-

CONDITIONS OF USE FOR THE PRODUCT

(1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions;

- i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
- ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.

(2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT.

("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
- Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
- Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.

Notwithstanding the above, restrictions Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTS are required. For details, please contact the Mitsubishi representative in your region.

INTRODUCTION

Thank you for purchasing the Mitsubishi Electric MELSEC iQ-R series programmable controllers.

This manual describes the performance specifications, procedure before operation, wiring, and operation examples to use the module listed below.


Before using this product, please read this manual and the relevant manuals carefully and develop familiarity with the functions and performance of the MELSEC iQ-R series programmable controller to handle the product correctly.

When applying the program examples provided in this manual to an actual system, ensure the applicability and confirm that it will not cause system control problems.

Please make sure that the end users read this manual.

Point

The program examples shown in this manual are the examples in which an MES interface module (RD81MES96N or RD81MES96) is assigned to the input/output No. X/Y0 to X/Y1F unless otherwise specified. To use the program examples shown in this manual, the input/output number assignment is required. For details on the assignment of input/output number, refer to the following:

 MELSEC iQ-R Module Configuration Manual

Relevant product



RD81MES96N

RD81MES96

COMPLIANCE WITH THE EMC AND LOW VOLTAGE DIRECTIVES

Method of ensuring compliance



To ensure that Mitsubishi programmable controllers maintain EMC and Low Voltage Directives when incorporated into other machinery or equipment, certain measures may be necessary. Please refer to one of the following manuals.

-  MELSEC iQ-R Module Configuration Manual
-  Safety Guidelines (included in a base unit)

The CE mark on the side of the programmable controller indicates compliance with EMC and Low Voltage Directives.

Additional measures

To ensure that this product maintains EMC and Low Voltage Directives, please refer to one of the following manuals.

-  MELSEC iQ-R Module Configuration Manual
-  Safety Guidelines (included in a base unit)

CONTENTS

SAFETY PRECAUTIONS	1
CONDITIONS OF USE FOR THE PRODUCT	9
INTRODUCTION	10
COMPLIANCE WITH THE EMC AND LOW VOLTAGE DIRECTIVES	10
RELEVANT MANUALS	13
TERMS	14
CHAPTER 1 PART NAMES	16
CHAPTER 2 SPECIFICATIONS	19
2.1 Performance Specifications	19
Hardware specifications	19
Software specifications	20
2.2 Access Specifications for a CPU Module	25
Accessible CPU modules	26
Accessible routes	28
Accessible devices	33
Access units	37
2.3 Access Specifications for a Database	40
Accessible databases and supported software	40
Access type	41
2.4 Data Specifications	43
Data category	43
Data type	44
Device tag component or variable	47
Constant	49
Macro	50
CHAPTER 3 FUNCTION LIST	51
3.1 Function Overview	51
3.2 Function List of an MES Interface Module	52
3.3 Function List of MES Interface Function Configuration Tool	53
3.4 Function List of DB Connection Service	55
3.5 Function List of DB Connection Service Setting Tool	55
3.6 Function List of Project File Conversion Tool	55
CHAPTER 4 PROCEDURE BEFORE OPERATION	56
4.1 Starting a Server	56
DB Connection Service/DB Connection Service Setting Tool	57
4.2 Starting an MES Interface Module and a Configuration Personal Computer	59
MES Interface Function Configuration Tool	61
Parameter settings	67
4.3 SD Memory Card	69
Connectable SD memory cards (sold separately)	69
Insertion/removal method of an SD memory card	69
Considerations for using an SD memory card	70

CHAPTER 5	SYSTEM CONFIGURATION	72
5.1	System Configuration	72
	Overall system configuration	72
	Software configuration of MX MESInterface-R	74
	System configuration when installing	74
	System configuration for the initial setting	75
5.2	Operating Environment	78
	Configuration personal computer	78
	Server (Database server/Application server)	78
5.3	Considerations for System Configuration	79
5.4	Supported Software Packages	81
CHAPTER 6	WIRING	82
6.1	Ethernet Cable	82
	Connectable twisted pair cables (sold separately)	82
	Wiring of an Ethernet cable	82
	Wiring considerations	83
CHAPTER 7	INSTALLATION AND UNINSTALLATION	84
7.1	Installation Procedure	85
	Environment after installation	86
7.2	Uninstallation Procedure	86
	Environment after uninstallation	86
CHAPTER 8	OPERATION EXAMPLE	87
8.1	Overview	87
8.2	Setup	88
	System configuration	88
	Device setup	89
8.3	Creating a Database Table	91
	Database table creation procedure	91
8.4	ODBC Setting	93
	ODBC setting procedure	93
8.5	MES Interface Function Setting	94
	Parameter setting procedure	94
	Operation check	111
APPENDIX		113
Appendix 1	External Dimensions	113
Appendix 2	ODBC Setting	114
INDEX		122
REVISIONS		124
WARRANTY		125
TRADEMARKS		126


RELEVANT MANUALS

Manual name [manual number]	Description	Available form
MELSEC iQ-R MES Interface Module User's Manual (Startup) [SH-081422ENG] (this manual)	Specifications, procedure before operation, wiring, and operation examples of an MES interface module	Print book e-Manual PDF
MELSEC iQ-R MES Interface Module User's Manual (Application) [SH-081423ENG]	Functions, MES Interface Function Configuration Tool, DB Connection Service, parameter setting, troubleshooting, input/output, and buffer memory of an MES interface module	Print book e-Manual PDF
GX Works3 Operating Manual [SH-081215ENG]	System configurations, parameter settings, and operation methods for the online function in GX Works3	e-Manual PDF

This manual does not include detailed information on the following:

- General specifications
- Applicable CPU modules and the number of mountable modules
- Applicable remote head modules and the number of mountable modules
- Installation

For details, refer to the following:

 MELSEC iQ-R Module Configuration Manual

Point


e-Manual refers to the Mitsubishi Electric FA electronic book manuals that can be browsed using a dedicated tool.

e-Manual has the following features:

- Required information can be cross-searched in multiple manuals.
- Other manuals can be accessed from the links in the manual.
- Hardware specifications of each part can be found from the product figures.
- Pages that users often browse can be bookmarked.
- Sample programs can be copied to an engineering tool.


TERMS

Unless otherwise specified, this manual uses the following terms.

Term	Description
Account	A right to use MES interface module or a server, or an ID necessary for their use.
Action	A unit for processing defined in a job. There are three kinds of actions: DB communication action for communicating with a database, operation action for calculating values of device tag component, and external communication action for executing programs in an application server. The DB communication action is a processing unit for sending one SQL statement (Select, Update, Insert, Multiple Select, or Delete) or one DB procedure execution request. The operation action is a processing unit for performing a maximum of 20 binary operations.
Configuration personal computer	A personal computer to set various settings required for operating MES interface module. This computer can be shared with a server.
Data source	Connection information which is necessary for accessing data using ODBC. With Windows, a data source name is assigned to connection information for management. The database is accessed via ODBC by specifying the data source name with the information linkage function.
Database (DB) or relational database (RDB)	Data management method that follows relational data model logic. A piece of data is expressed as a collection of multiple items (fields) and a data collection is expressed as a table. Data can be easily merged and selected using key data.
DB buffering	A function that temporarily stores SQL statements, that failed to be sent due to a communication error, to an SD memory card, and resends them when the communications have been recovered.
DB procedure	A program that combines sequential processing procedures into one program against the database, and saves it to the database management system. This performs processing based on arguments received from MES interface module, and returns the results to MES interface module.
Device memory or device	Various kinds of memory data in a CPU module. There are devices handled in each bit and in each word.
Device tag (Tag)	Data table that contains a set of information (component) required to access device data in each CPU module on a network. MES interface module collects device data for each tag at an interval defined in the tag.
Device tag component (component)	A generic term for components (device data) which configures a device tag. Data that contains communication routes, data types, devices, etc. required to access device data in each CPU module.
Engineering tool	A tool used for setting up programmable controllers, programming, debugging, and maintenance. For the supported tools, refer to the following:  MELSEC iQ-R Module Configuration Manual
FX5CPU	A generic term for MELSEC iQ-F series CPU modules.
FXCPU	A generic term for MELSEC-F series CPU modules.
Handshake	A generic term for single handshakes and multiple handshakes. For highly reliable processing, devices in a CPU module are used for managing processing between the CPU module and MES interface module.
High-speed access	A generic term for the following access types. <ul style="list-style-type: none"> • High-speed access (interval specification) • High-speed access (each scan)
Item	A setting group unit that each setting type in the edit items has.
Job	A unit of process for linking information by a MES interface module.
LCPU	A generic term for MELSEC-L series CPU modules.
MES	An abbreviation for Manufacturing Execution Systems. A system for controlling and monitoring the plant status in real time to optimize production activities. The system enables to speed up responses to changes of a production plan and situation that lead to efficient production processes and optimization of production activities.
MES Interface Function Configuration Tool	An abbreviation for MELSEC iQ-R series MES Interface Function Configuration Tool.
MES interface module	An abbreviation for RD81MES96 and RD81MES96N MES interface modules.
MX MESInterface-R	A product name for SW1DND-RMESIF-E.
Network module	A generic term for the following modules: <ul style="list-style-type: none"> • CC-Link IE Controller Network module • CC-Link IE Field Network module • MELSECNET/H network module • Ethernet interface module • CC-Link module
QCPU (Q mode)	A generic term for MELSEC-Q series CPU modules and MELSEC-Q series C Controller modules.

Term	Description
RCPU	A generic term for MELSEC iQ-R series CPU modules and MELSEC iQ-R series C Controller modules.
RnENCPU	A generic term for R04ENCPU, R08ENCPU, R16ENCPU, R32ENCPU, and R120ENCPU.
RnPCPU	A generic term for R08PCPU, R16PCPU, R32PCPU, and R120PCPU.
Server	A generic term for a database server and application server. A database server is a computer with a relational database which links information with an MES interface module. An application server is a computer with a program which runs upon request from an MES interface module.
Server service	A generic term for the services of a server on which DB Connection Service is installed. There are a database server service and an application server service. A database server service is a service for accessing a database. An application server service is a service for linking with a program.
SQL	An abbreviation for Structured Query Language. A database manipulation language that is used for operating a relational database.
Trigger buffering	When trigger conditions (conditions for data transmission) of multiple jobs are satisfied at the same time, their data and times are buffered in a internal memory of a module so that actions (data operation/transmission) can be executed later using the buffered data. Even if the frequency of data transmission triggers is high, jobs are executed without missing any trigger.
Trigger condition	Startup conditions for job operation.
Update settings	Processing that updates the settings in MES interface module using MES Interface Function Configuration Tool.
Variable (temporary variable)	A variable that can be used for saving values selected from a database temporarily, and for writing operation values to a database or device tag components. There are two types of variables: local variable which has variable area for each job and global variable which can be used for other jobs since it has a common variable area for all jobs.
Windows 8 or later	A generic term for Windows 8, Windows 8.1, and Windows 10.


For definitions of terms for safety CPUs, refer to the following:

 MELSEC iQ-R CPU Module User's Manual (Application)


1 PART NAMES

This chapter shows the part names of an MES interface module.

RD81MES96N

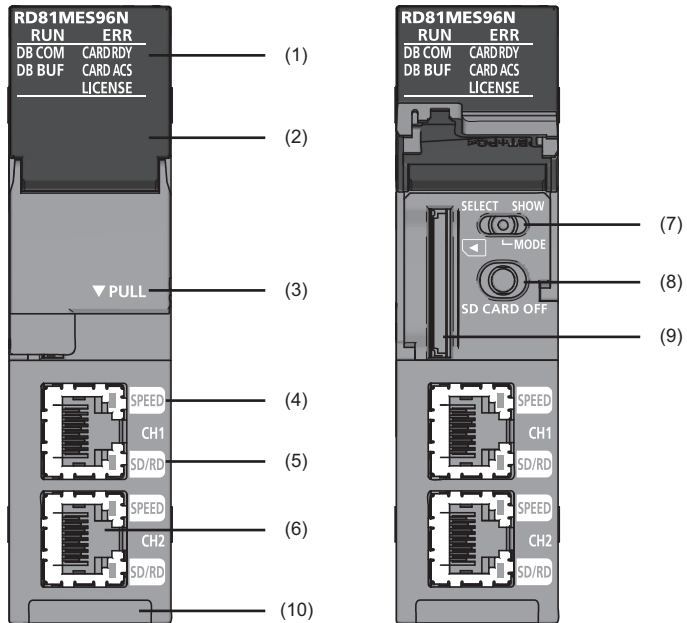

RD81MES96

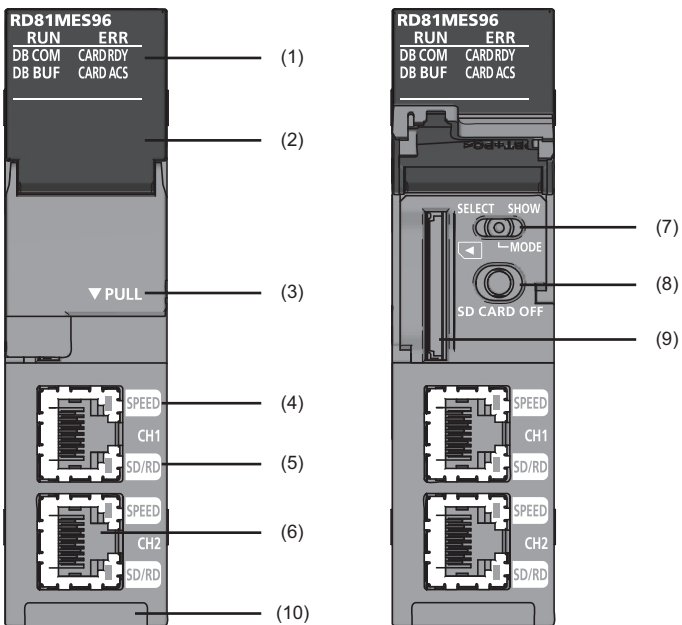

No.	Name	Description	
		RD81MES96N	RD81MES96
(1)	RUN LED	Indicates the operating status. <ul style="list-style-type: none"> • ON: In operation • Flashing: Checking module, selecting the module for online module change (Flashes for 10 seconds when checking modules by clicking the [Module Confirmation] button in the "MES Interface Module Search" screen of MES Interface Function Configuration Tool.) • OFF: Watchdog timer error (hardware failure), module replacement allowed in the process of the online module change 	
	ERR LED	Indicates the error status of an MES interface module. <ul style="list-style-type: none"> • ON: Module continuation error or watchdog timer error (hardware failure) • Flashing: Module stop error • OFF: In normal status 	
	DB COM LED	Indicates the connection status with a database. <ul style="list-style-type: none"> • ON: Database normal connection status (Communication is normally being established with all databases excluding unconnected databases.) • Flashing: Database communication error status (A communication error is detected in communication with some or all databases.) • OFF: Database unconnected status (Communication has never been established with any database after powering ON, resetting a CPU module, or updating the setting.) 	
	DB BUF LED	Indicates the execution status of DB buffering. <ul style="list-style-type: none"> • ON: Executing DB buffering (Turns ON when the DB buffering setting is enabled and while buffering, or when either DB buffering setting 1 or 2 is buffering.) • Flashing: DB buffer full (Flashes when the DB buffering setting is enabled and the buffer is full (no capacity), or when either DB buffering setting 1 or 2 is buffer full.) • OFF: DB buffering unexecuted (The DB buffering setting is disabled, or the DB buffering setting is enabled and the buffer is empty.) 	
	CARD RDY LED	Indicates the availability of SD memory card. <ul style="list-style-type: none"> • ON: Accessible status • Flashing: In preparation or formatting • OFF: Inaccessible status (removable status) For the considerations for using an SD memory card, refer to the following: 📖 Page 70 Considerations for using an SD memory card	
	CARD ACS LED	Indicates the access status of an SD memory card. <ul style="list-style-type: none"> • ON: Accessing • OFF: Not accessed 	
	LICENSE LED	Indicates the certification status of a license when using an option function that requires license certification. <ul style="list-style-type: none"> • ON: Certification succeeded • Flashing: Temporarily authenticated • OFF: No licenses 	—
(2)	Dot matrix LED	Displays the contents of each display mode or the results of the self-diagnostic test. The following contents are displayed in each display mode. <ul style="list-style-type: none"> • User specification character: Scrolled and displayed by the width of approximately 3 characters (3.3 characters). • Error code: Displayed in four digits in hexadecimal (When multiple errors occur, only the latest error code is displayed.) • IP address: Scrolled and displayed by 4 characters in decimal. • DB buffer use rate: Displayed in three digits in decimal + %. For the display when performing the self-diagnostic test, refer to the following: 📖 MELSEC iQ-R MES Interface Module User's Manual (Application)	
(3)	Slot cover	A cover of the SD memory card slot and the switches. Open this cover to insert/remove an SD memory card or to operate the switches. Close the cover unless inserting/removing an SD memory card or operating the switches to prevent foreign material intrusion such as dust.	
(4)	SPEED LED(CH1, CH2)	Indicates the communication speed and the link status for Ethernet. <ul style="list-style-type: none"> • ON (orange): Linking-up (1000 Mbps) • ON (green): Linking-up (100 Mbps) • OFF: Linking-down or linking-up (10 Mbps) 	
(5)	SD/RD LED(CH1, CH2)	Indicates the data sending/receiving status for Ethernet. <ul style="list-style-type: none"> • ON: Sending/receiving data • OFF: Data not sent/received 	

No.	Name	Description	
		RD81MES96N	RD81MES96
(6)	Ethernet port (CH1, CH2) ^{*1}	A port for connecting to an Ethernet device (IEEE802.3, 1000BASE-T/100BASE-TX/10BASE-T standards-compliant)	
(7)	Dot matrix LED display mode switch (SELECT/MODE/SHOW switch)	A switch for switching the display of dot matrix LED. <ul style="list-style-type: none"> • MODE: To display the display mode name that is currently selected. • SELECT: To select (switch) the display mode Order: USR → ENo. → IP1 → IP2 → BUF1 → BUF2 → USR • SHOW: To display the contents of the selected display mode (☞ Page 18 Dot matrix LED display) Put this display mode switch to 'SHOW' during operation, and move it only when switching the display mode. 	
(8)	SD memory card lock switch (SD CARD OFF button)	A switch for disabling access to an SD memory card to remove it. Removing an SD memory card is prohibited while the CARD RDY LED is ON or flashing. For the procedures for inserting and removing an SD memory card, refer to the following: ☞ Page 69 Insertion/removal method of an SD memory card	
(9)	SD memory card slot	A slot to insert an SD memory card (SD, SDHC standards-compliant: 2 GB (SD) to 16 GB (SDHC))	
(10)	Product information marking	Displays the product information (16 digits) of a module.	

*1 Only CH1 can be connected to MES Interface Function Configuration Tool with direct connection.

Dot matrix LED display

The following table shows the contents of the display mode displayed on the dot matrix LED when switching the display mode to 'SHOW'.

Display mode name	Description
USR	Displays the characters specified in the action. Substitute characters to display on the S_MATRIXLED_DISP (dot matrix LED display) of the system variable in the action. For details on the action, refer to the following: ☞ MELSEC iQ-R MES Interface Module User's Manual (Application)
ENo.	To display an error code.
IP1	To display the IP address of Ethernet port CH1.
IP2	To display the IP address of Ethernet port CH2.
BUF1	To display the use rate of DB buffer 1.
BUF2	To display the use rate of DB buffer 2.

Point

The following display switching of dot matrix LED can be set by using MES Interface Function Configuration Tool.

- Default display mode at power ON (Initial value: USR)
- The display mode is switched to ENo. (error code) forcibly when an error occurs.
- ENo. (error code) is highlighted.

2 SPECIFICATIONS


This chapter explains the specifications of an MES interface module.

2.1 Performance Specifications

This section shows the performance specifications of hardware (MES interface module) and software (MX MESInterface-R).

Hardware specifications

The following table shows the specifications of an MES interface module.

Item		Specification		
SD memory card slot	Interface	SD memory card/SDHC memory card (2 GB to 16 GB)		
	Power supply	+3.3 VDC, up to 200 mA		
Ethernet port	Number of channels	2		
	Interface ^{*1}	1000BASE-T	100BASE-TX	10BASE-T
	Data transmission rate	1000 Mbps	100 Mbps	10 Mbps
	Number of cascaded stages ^{*2}	—	Maximum 2 stages	Maximum 4 stages
	Communication mode	Full-duplex/half-duplex		
	Transmission method	Base band		
	Maximum segment length ^{*3}	100 m (length between a hub and a node)		
	Applicable connector for external wiring	RJ45		
	Supported function	<ul style="list-style-type: none"> • Auto-negotiation (automatic recognition of 1000BASE-T/100BASE-TX/10BASE-T) • Auto-MDI/MDI-X (automatic recognition of a straight/crossing cable) 		
Number of occupied I/O points		32 points/slot (I/O assignment: Intelli. 32 points)		
Clock		Acquired from a CPU module (CPU No.1 in a multiple CPU system).  Page 20 Basic operation specification		
5 VDC internal current consumption		1.25 A		
External dimensions	Height	106 mm		
	Width	27.8 mm		
	Depth	110 mm		
Weight		0.25 kg		

*1 1000BASE-T/100BASE-TX/10BASE-T, and full-duplex/half-duplex communication mode are identified by an MES interface module depending on the hub.

For connection with a hub not having the auto-negotiation function, set the setting on the hub side according to the communication mode.

*2 It is for a repeater hub.

For a switching hub, consult the manufacturer of the hub used.

*3 For the maximum segment length (length between hubs), consult the manufacturer of the switching hub used.

Software specifications

The following table shows the specifications of MX MESInterface-R.

Item	Description	Reference
Basic operation specification	Specification for the operation (job), startup condition for the job (trigger condition), operation unit of a job (action), and network information.	Page 20 Basic operation specification
Device memory input/output specification	Specification for the accessible target device types and access units (device tags).	Page 22 Device memory input/output
DB input/output specification	Specification for the accessible databases, access units (access table/procedure, access field/procedure argument), and buffering of output data (DB buffering) at the time of disconnection.	Page 23 DB input/output
Variable input/output specification	Specification for user variables (local variables, global variables) which can be defined freely, system variables to refer to system information, and data types of variable.	Page 24 Variable input/output
Data operation and processing specification	Specification for the operation processing such as addition and subtraction.	Page 24 Data operation and processing
External communication client	Specification for the communication from an MES interface module to external devices.	Page 24 External communication client
Security	Specification for security.	Page 24 Security

Basic operation specification

Item		Specification	
		RD81MES96N	RD81MES96
Job (number of settings)	Maximum	64 jobs	
Action (number of settings)	Maximum	1920 actions	
	For one job	30 actions <ul style="list-style-type: none"> • Main processing: 20 actions • Pre/post-processing: 10 actions 	
Trigger condition	For one job	2 events/condition	
	Configuration type	<ul style="list-style-type: none"> • Single event • Multiple events • Condition combination event • Precondition × Event • Single handshake • Multiple handshake 	<ul style="list-style-type: none"> • Single event • Multiple events • Condition combination event • Precondition × Event • Single handshake
	Event/condition type	<ul style="list-style-type: none"> • Condition (value monitoring) • Condition (period of time) • Event (value changed) • Event (fixed time) • Event (fixed cycle) (timer interval/time interval) • Event (module monitoring) (MES interface module/control CPU) 	
	Condition combination type	<ul style="list-style-type: none"> • OR combination • AND combination 	
	Trigger buffering count	192 times (A value is cleared due to power interruption/reset/setting update.)	
Time information handling (time information) ^{*1}	Time	Acquired from a CPU module (CPU No.1 in a multiple CPU system).	
	Daylight saving time		
	Time zone		
Ethernet	Connection method	IPv4	
	Number of channels	2 channels (CH1/CH2) (Note that they cannot be connected to a same network, and no routing function between CH1 and CH2.)	
	Number of default gateways	1 (It can be registered only in CH1 or CH2.)	
MES Interface Function Configuration Tool	Number of pieces that can be connected simultaneously	5 (Maximum number of connections to a single MES interface module)	

*1 When using the daylight saving time function of a CPU module for an RD81MES96, use an RD81MES96 the firmware version of which is '03' or later. If using one the firmware version of which is '02' or earlier, it may cause the malfunction due to the time information difference with the CPU module.
For information on the firmware version of a CPU module, refer to the manual of a CPU module used.

Device memory input/output

Item		Specification	
		RD81MES96N	RD81MES96
Access target device	Maximum	64 devices	16 devices
	Access target device type	<ul style="list-style-type: none"> • RCPUCPU • QCPU (Q mode) • LCPUCPU • FX5CPUCPU • FXCPUCPU 	<ul style="list-style-type: none"> • RCPUCPU • QCPU (Q mode) • LCPUCPU
Device tag	Maximum	64 device tags	
	Access type	<ul style="list-style-type: none"> • General access • High-speed access (interval specification) • High-speed access (each scan) 	
	Shortest access interval	Each scan	
	Access interval (general access)	<ul style="list-style-type: none"> • 1 to 9 × 100 ms • 1 to 3600 sec. 	
	Access interval (high-speed access (interval specification))	<ul style="list-style-type: none"> • 1 to 9 ms • 1 to 9 × 10 ms • 1 to 9 × 100 ms • 1 to 60 sec. 	
	Access interval (high-speed access (each scan))	<ul style="list-style-type: none"> • Each scan 	
Device tag component	Maximum	65536 components/project (64 tags × 1024 components) ^{*1}	
	Maximum (for one device tag)	1024 components	
	Maximum (for one job)	20480 components ^{*2}	
Number of data points (Device tag component)	Maximum number of points (per project) ^{*3}	131072 (total number without array tag setting) 2621440 (total number with array tag setting)	
	Maximum number of points (for one device tag component) ^{*3}	40960 (at Multiple Select)	
Number of data points (Job) ^{*4}	Maximum number of points (per project) ^{*1,*3}	131072 (total number excluding the data assignment settings of the Multiple Select setting) 2949120 (total number only for the data assignment settings of the Multiple Select)	
	Maximum number of points (for one job) ^{*1,*3}	46080 ^{*2} The total size of character string type: 2048 characters/job (total of the device tag, variable, constant, and macro)	
Access data	Data type	<ul style="list-style-type: none"> • Bit • Word [unsigned]/Bit string [16-bit] • Double word [unsigned]/Bit string [32-bit] • Word [signed] • Double word [signed] • 16bit BCD • 32bit BCD • Single-precision real number • Double-precision real number • Character string [Unicode] • Character string [ASCII/SJIS] 	

*1 For high-speed access, up to 8192 components (points) can be set.

*2 When the trigger buffering is enabled, the maximum is 8192 components (points).

*3 A double word device is counted as 2 points.

*4 Counted redundantly when using a device tag component in multiple jobs.

Not counted redundantly when using multiple device tag components in a job.

DB input/output

Item	Specification	
	RD81MES96N	RD81MES96
Access target server	Database type	<ul style="list-style-type: none"> • Oracle • Microsoft SQL Server • Microsoft Access • MySQL • PostgreSQL
	Access type	<ul style="list-style-type: none"> • Connection via service • Direct DB connection
	Maximum number of settings	16 servers
Access table/procedure	DB communication type	<ul style="list-style-type: none"> • Select • Insert • Update (Data can be inserted if no update target data exist.) • Delete • Multiple Select • Stored Procedure
	Maximum number of settings (for one project)	64 tables/procedures
	Maximum number of settings (for one job)	20 tables/procedures
	Maximum number of settings (for one action)	1 table/procedure
	Maximum number of settings (per access table)	Total length of DB field name: 16384 characters
Access field/procedure argument	Maximum number of settings (per project) ^{*1}	65536 settings
	Maximum number of settings (for one job) ^{*1}	<ul style="list-style-type: none"> • When the trigger buffering is disabled: 20480 settings • When the trigger buffering is enabled: 8192 settings Note that the following limits apply: <ul style="list-style-type: none"> • Date and time type access field/procedure argument: Up to 50 settings • The total number of characters of character string type: Up to 2048 characters (The total number of characters of character string type for the device tag, variable, and constant)
	Maximum number of settings for access field (for one table) ^{*2}	1024 fields
	Maximum number of settings for access procedure argument (for one procedure) ^{*2}	256 settings
	Data type	<ul style="list-style-type: none"> • Integer • Real number^{*3} • Real number [floating point]^{*4} • Real number [fixed point]^{*4} • Character string [Unicode]^{*5} • Character string [Unicode(NCHAR)]^{*6} • Character string [Unicode(CHAR)]^{*6} • Date and time
DB buffer	Number of settings	2 settings
	Maximum capacity	2048 MB (up to 1024 MB for each buffer)

*1 Maximum number of settings in the job setting.

*2 Maximum number of settings in the access table/procedure settings.

*3 A data type when a real number is set for an access procedure argument.

*4 A data type when a real number is set for an access field.

*5 A data type when a character string is set for an access procedure argument.

*6 A data type when a character string is set for an access field.

Variable input/output

Item		Specification
Variable type	Type	<ul style="list-style-type: none"> Local variable (retains data only at a job execution and can be used in a same job.) Global variable (retains data until the power supply is turned OFF or a CPU module is reset, and can be used between different jobs.) System variable
Data type	Type	<ul style="list-style-type: none"> Bit Word [unsigned]/Bit string [16-bit] Double word [unsigned]/Bit string [32-bit] Word [signed] Double word [signed] Single-precision real number Double-precision real number Character string [Unicode]
Capacity	Maximum number of settings (per project)	<ul style="list-style-type: none"> Local variable: 1024 words (2048 bytes)^{*1} Global variable: 4096 words (8192 bytes)^{*1} System variable: A defined variable is used.
	Maximum number of settings (for one job) ^{*2}	<ul style="list-style-type: none"> Local variable: 1024 words (2048 bytes) Global variable: 512 words (1024 bytes)

*1 The number of settings depends on the data size. However, 2 bytes are used even when the data type is bit.

*2 The total number of characters of character string type for one job is up to 2048 characters.

Data operation and processing

Item		Specification
Operator	Substitution	—
	Arithmetic operation	5 types
	Character string operation	8 types
	Bit operation	5 types
	Type conversion	4 types
Maximum number of operation settings	Maximum	38400 settings (600 settings × 64 jobs)
	For one job	600 settings (20 settings × 30 actions)
	For one action	20 settings

External communication client

Item		Specification
External communication client (program execution)	Number of characters for execution command	Up to 127 characters
	Function	<ul style="list-style-type: none"> Return value evaluation Execution completion standby

Security

Item		Specification
Security (user authentication)	Number of accounts	16 accounts

2.2 Access Specifications for a CPU Module

This section shows the access specifications for a CPU module.

Accessible CPU modules

RD81MES96N

Series		Model name	Access type
RCPU*1	Programmable controller CPU	R00CPU, R01CPU, R02CPU, R04CPU, R04ENCPU, R08CPU, R08ENCPU, R16CPU, R16ENCPU, R32CPU, R32ENCPU, R120CPU, R120ENCPU	<ul style="list-style-type: none"> • General access • High-speed access (interval specification) • High-speed access (each scan)
	Process CPU (process mode)*2	R08PCPU, R16PCPU, R32PCPU, R120PCPU	<ul style="list-style-type: none"> • General access
	Safety CPU	R08SFCPU, R16SFCPU, R32SFCPU, R120SFCPU	
	C Controller module*3	R12CCPU-V	
QCPU (Q mode)	Programmable controller CPU	Q00JCPU, Q00UJCPU, Q00CPU, Q00UCPU, Q01CPU, Q01UCPU, Q02CPU, Q02HCPU, Q02UCPU, Q03UDCPU, Q03UDECPU, Q03UDVCPU, Q04UDHCPU, Q04UDEHCPU, Q04UDVCPU, Q06HCPU, Q06UDHCPU, Q06UDEHCPU, Q06UDVCPU, Q10UDHCPU, Q10UDEHCPU, Q12HCPU, Q13UDHCPU, Q13UDEHCPU, Q13UDVCPU, Q20UDHCPU, Q20UDEHCPU, Q25HCPU, Q26UDHCPU, Q26UDEHCPU, Q26UDVCPU, Q50UDEHCPU, Q100UDEHCPU	
	Process CPU	Q02PHCPU, Q04UDPVCPU, Q06PHCPU, Q06UDPVCPU, Q12PHCPU, Q13UDPVCPU, Q25PHCPU, Q26UDPVCPU	
	C Controller module*3	Q12DCCPU-V*4, Q24DHCCPU-V, Q24DHCCPU-LS, Q24DHCCPU-VG, Q26DHCCPU-LS	
LCPU	Programmable controller CPU	L02SCPU, L02SCPU-P, L02CPU, L02CPU-P, L06CPU, L06CPU-P, L26CPU, L26CPU-P, L26CPU-BT, L26CPU-PBT	
FX5CPU		FX5U-32MR/ES, FX5U-32MT/ES, FX5U-32MT/ESS, FX5U-64MR/ES, FX5U-64MT/ES, FX5U-64MT/ESS, FX5U-80MR/ES, FX5U-80MT/ES, FX5U-80MT/ESS, FX5U-32MR/DS, FX5U-32MT/DS, FX5U-32MT/DSS, FX5U-64MR/DS, FX5U-64MT/DS, FX5U-64MT/DSS, FX5U-80MR/DS, FX5U-80MT/DS, FX5U-80MT/DSS, FX5UC-32MT/D, FX5UC-32MT/DSS, FX5UC-32MT/DS-TS, FX5UC-32MT/DSS-TS, FX5UC-64MT/D, FX5UC-64MT/DSS, FX5UC-96MT/D, FX5UC-96MT/DSS	
FX3CPU		FX3U-16MR/ES, FX3U-16MT/ES, FX3U-16MT/ESS, FX3U-32MR/ES, FX3U-32MT/ES, FX3U-32MT/ESS, FX3U-32MS/ES, FX3U-48MR/ES, FX3U-48MT/ES, FX3U-48MT/ESS, FX3U-64MR/ES, FX3U-64MT/ES, FX3U-64MT/ESS, FX3U-64MS/ES, FX3U-80MR/ES, FX3U-80MT/ES, FX3U-80MT/ESS, FX3U-128MR/ES, FX3U-128MT/ES, FX3U-128MT/ESS, FX3U-16MR/DS, FX3U-16MT/DS, FX3U-16MT/DSS, FX3U-32MR/DS, FX3U-32MT/DS, FX3U-32MT/DSS, FX3U-48MR/DS, FX3U-48MT/DS, FX3U-48MT/DSS, FX3U-64MR/DS, FX3U-64MT/DS, FX3U-64MT/DSS, FX3U-80MR/DS, FX3U-80MT/DS, FX3U-80MT/DSS, FX3U-32MR/UA1, FX3U-64MR/UA1, FX3UC-16MT/D, FX3UC-16MT/DSS, FX3UC-32MT/D, FX3UC-32MT/DSS, FX3UC-64MT/D, FX3UC-64MT/DSS, FX3UC-96MT/D, FX3UC-96MT/DSS, FX3UC-32MT-LT, FX3UC-32MT-LT-2, FX3UC-16MR/D-T, FX3UC-16MR/DS-T, FX3G-14MR/ES, FX3G-14MT/ES, FX3G-14MT/ESS, FX3G-24MR/ES, FX3G-24MT/ES, FX3G-24MT/ESS, FX3G-40MR/ES, FX3G-40MT/ES, FX3G-40MT/ESS, FX3G-60MR/ES, FX3G-60MT/ES, FX3G-60MT/ESS, FX3G-14MR/DS, FX3G-14MT/DS, FX3G-14MT/DSS, FX3G-24MR/DS, FX3G-24MT/DS, FX3G-24MT/DSS, FX3G-40MR/DS, FX3G-40MT/DS, FX3G-40MT/DSS, FX3G-60MR/DS, FX3G-60MT/DS, FX3G-60MT/DSS, FX3GC-32MT/D, FX3GC-32MT/DSS, FX3S-10MR/ES, FX3S-10MT/ES, FX3S-10MT/ESS, FX3S-14MR/ES, FX3S-14MT/ES, FX3S-14MT/ESS, FX3S-20MR/ES, FX3S-20MT/ES, FX3S-20MT/ESS, FX3S-30MR/ES, FX3S-30MT/ES, FX3S-30MT/ESS, FX3S-30MR/ES-2AD, FX3S-30MT/ES-2AD, FX3S-30MT/ESS-2AD, FX3S-10MR/DS, FX3S-10MT/DS, FX3S-10MT/DSS, FX3S-14MR/DS, FX3S-14MT/DS, FX3S-14MT/DSS, FX3S-20MR/DS, FX3S-20MT/DS, FX3S-20MT/DSS, FX3S-30MR/DS, FX3S-30MT/DS, FX3S-30MT/DSS	

*1 When using high-speed access, use a CPU module supporting the sequence scan synchronization sampling function.

For a CPU module supporting the sequence scan synchronization sampling function, refer to the manual for the CPU module.


*2 Process CPUs (redundant mode) are not supported.

*3 Cannot be used as a relay station.

*4 Only a module with a serial number of which the first five digits are 12042 or higher can be accessed.

Point

When using a multiple CPU system, refer to the following:

 MELSEC iQ-R Module Configuration Manual

RD81MES96

Series		Model name	Access type
RCPU ^{*1}	Programmable controller CPU	R00CPU ^{*2} , R01CPU ^{*2} , R02CPU ^{*2} , R04CPU, R04ENCPU ^{*3} , R08CPU, R08ENCPU ^{*3} , R16CPU, R16ENCPU ^{*3} , R32CPU, R32ENCPU ^{*3} , R120CPU, R120ENCPU ^{*3}	<ul style="list-style-type: none"> • General access • High-speed access (interval specification) • High-speed access (each scan)
	Process CPU (process mode) ^{*3,*4}	R08PCPU, R16PCPU, R32PCPU, R120PCPU	<ul style="list-style-type: none"> • General access
	Safety CPU ^{*5}	R08SFCPU, R16SFCPU, R32SFCPU, R120SFCPU	
	C Controller module ^{*3,*6}	R12CCPU-V	
QCPU (Q mode) ^{*3}	Programmable controller CPU	Q00JCPU, Q00UJCPU, Q00CPU, Q00UCPU, Q01CPU, Q01UCPU, Q02CPU, Q02HCPU, Q02UCPU, Q03UDCPU, Q03UDECPU, Q03UDVCPU, Q04UDHCPU, Q04UDEHCPU, Q04UDVCPU, Q06HCPU, Q06UDHCPU, Q06UDEHCPU, Q06UDVCPU, Q10UDHCPU, Q10UDEHCPU, Q12HCPU, Q13UDHCPU, Q13UDEHCPU, Q13UDVCPU, Q20UDHCPU, Q20UDEHCPU, Q25HCPU, Q26UDHCPU, Q26UDEHCPU, Q26UDVCPU, Q50UDEHCPU, Q100UDEHCPU	
	Process CPU	Q02PHCPU, Q04UDPVCPU, Q06PHCPU, Q06UDPVCPU, Q12PHCPU, Q13UDPVCPU, Q25PHCPU, Q26UDPVCPU	
	C Controller module ^{*6}	Q12DCCPU-V ^{*7} , Q24DHCCPU-V, Q24DHCCPU-LS, Q24DHCCPU-VG, and Q26DHCCPU-LS ^{*5}	
LCPU ^{*3}	Programmable controller CPU	L02SCPU, L02SCPU-P, L02CPU, L02CPU-P, L06CPU, L06CPU-P, L26CPU, L26CPU-P, L26CPU-BT, L26CPU-PBT	

*1 When using high-speed access, use a CPU module supporting the sequence scan synchronization sampling function and an MES interface module the firmware version of which is '03' or later.

For a CPU module supporting the sequence scan synchronization sampling function, refer to the manual for the CPU module.

*2 Use an MES interface module the firmware version of which is '07' or later.

*3 Use an MES interface module the firmware version of which is '03' or later.

*4 Process CPUs (redundant mode) are not supported.


*5 Use an MES interface module the firmware version of which is '05' or later.

*6 Cannot be used as a relay station.

*7 Only a module with a serial number of which the first five digits are 12042 or higher can be accessed.

Point


When using a multiple CPU system, refer to the following:

 MELSEC iQ-R Module Configuration Manual

Accessible routes

The following figure shows accessible routes from an MES interface module.

- ← : Access route from an MES interface module
- - - : Connection from an Ethernet port of an MES interface module
- - - : Connection by specifying the network number and the station number of a target station
- - - : Connection by specifying the start I/O No. of a module to be routed and the station number of a target station

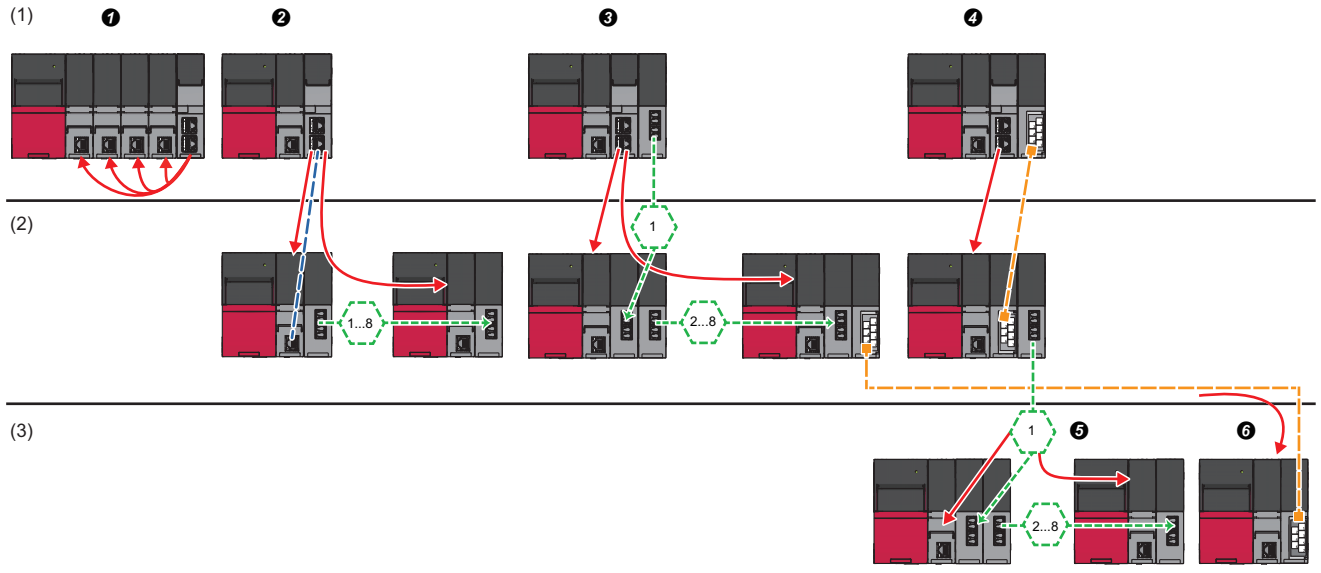

Accessible route		Reference	
(1)	Own station (control CPU, another CPU in a multiple CPU system)	Page 29 Own station (control CPU, another CPU in a multiple CPU system)	
(2)	Another station via a single network	2 Access via an Ethernet port of an MES interface module	Page 30 Access via an Ethernet port of an MES interface module
		3 Access by specifying the network number and the station number of a target station (CC-Link IE Controller Network module, CC-Link IE Field Network module, MELSECNET/H network module, or Ethernet interface module)	Page 31 Access by specifying the network number and the station number of a target station
		4 Access by specifying the start I/O No. of a module to be routed and the station number of a target station (CC-Link module)	Page 31 Access by specifying the start I/O number of a module to be routed and the station number of a target station
(3)	Another station via a co-existence network	5 Access from the station accessed in (4) by specifying the network number and the station number of a target station	Page 32 Access by specifying the network number and the station number via another station on CC-Link
		6 Access from the station accessed in (3) by specifying the start I/O No. of a module that is routed through and the station number of a target station	Page 32 Accessing from another station specified by the network number and the station number via CC-Link

Own station (control CPU, another CPU in a multiple CPU system)

The following table shows the accessibility to a CPU module of a station on which an MES interface module is mounted.

○: Accessible, —: No combination

Access route	Access target device type (series)						
	RCPU		QCPU (Q mode)		LCPU	FX5CPU	FXCPU
	Program mable controller CPU/ Process CPU/ Safety CPU	C Controller module	Program mable controller CPU/ Process CPU	C Controller module	Program mable controller CPU		
Control CPU	○	○*1	—	—	—	—	—
Another CPU in a multiple CPU system	○*2 (CPU No.1 to 4)	○ (CPU No.1 to 4)	—	—	—	—	—

*1 Can be accessed only when using an RD81MES96.

*2 No combination with RnENCPU.

Another station via a single network

■ Access via an Ethernet port of an MES interface module

A target device can be accessed via an Ethernet port of an MES interface module in the status where the target device is connected to a network.

For the communication destination from an Ethernet port of an MES interface module, an Ethernet interface module or a CPU module (Ethernet port) can be specified.

For accessing a target station, direct access and access via another system^{*1} are available.

*1 It is not available when the series of a target device and a system to be routed differ.

(Example) Access is available when the series of a target device and a system to be routed are 'QCPU'.

○: Accessible, —: No combination

Access route			Access target device type (series)						
			RCPU		QCPU (Q mode)		LCPU	FX5CPU	FXCPU
			Program mable controller CPU/ Process CPU/ Safety CPU	C Controller module	Program mable controller CPU/ Process CPU	C Controller module	Program mable controller CPU		
Ethernet	Ethernet port of an MES interface module → Ethernet interface module ^{*2}	Direct	○ ^{*3,*4} (CPU No.1 to 4)	—	○ (CPU No.1 to 4)	—	○	—	○ ^{*5,*6}
		Via another system	CC-Link IE Controller Network	○ (CPU No.1 to 4)	○ (CPU No.1 to 4)	○ (CPU No.1 to 4)	—	—	—
			CC-Link IE Field Network	—			○		
			MELSECNET/H network	—			—		
	Ethernet ^{*7}	—	—	○	—				
	Ethernet port of an MES interface module → CPU module (Ethernet port)	Direct	○ (CPU No.1 to 4)	○ ^{*8} (CPU No.1 to 4)	○ (CPU No.1 to 4)	○	○ ^{*5}	—	
		Via another system	CC-Link IE Controller Network			—	—	—	
			CC-Link IE Field Network			—	○	○ ^{*5}	
			MELSECNET/H network			—	—	—	
		Ethernet ^{*7}	—			—	○	—	

*2 'Ethernet interface block' for accessing an FXCPU.

*3 It can access to an RnENCPU only in a single CPU system.

*4 No combination with the MELSECNET/H network for process CPUs and safety CPUs.

*5 Can be accessed only when using an RD81MES96N.

*6 When using an FX3U-ENET-ADP as an Ethernet interface block, use Version 1.21 or later.

*7 It is also supported by a QCPU (Q mode) for which the MELSOFT connection extended setting was set.

*8 To access an Ethernet port of Q12DCCPU-V (Basic mode) directly, MELSOFT connection is required to be permitted in the Q12DCCPU-V (Basic mode) setting.

For details on the setting, refer to the following:

📖 C Controller Module User's Manual (Utility Operation, Programming)

■ Access by specifying the network number and the station number of a target station

A target device can be accessed via a relay station when the target device is connected within eight networks from a station, on which an MES interface module is mounted, and can be identified by the network number and the station number (or CPU number).

○: Accessible, —: No combination

Access route	Access target device type (series)						
	RCPU		QCPU (Q mode)		LCPU	FX5CPU	FXCPU
	Program mable controller CPU/ Process CPU/ Safety CPU	C Controller module	Program mable controller CPU/ Process CPU	C Controller module	Program mable controller CPU		
CC-Link IE Controller Network	○ ^{*1,*2}	○	○	○	—	—	—
CC-Link IE Field Network	(CPU No.1 to 4)	(CPU No.1 to 4)	(CPU No.1 to 4)	(CPU No.1 to 4)	○	○ ^{*4}	
MELSECNET/H network		—			—	—	
Ethernet ^{*3}				—	○		

*1 It can access to an RnENCPU only in a single CPU system.

*2 No combination with the MELSECNET/H network for process CPUs and safety CPUs.

*3 It is also supported by a QCPU (Q mode) for which the MELSOFT connection extended setting was set.

*4 Can be accessed only when using an RD81MES96N.

■ Access by specifying the start I/O number of a module to be routed and the station number of a target station

The following table shows the accessible routes to connect with a target device and a station on which an MES interface module is mounted directly.

○: Accessible, —: No combination

Access route	Access target device type (series)						
	RCPU		QCPU (Q mode)		LCPU	FX5CPU	FXCPU
	Program mable controller CPU/ Process CPU/ Safety CPU	C Controller module	Program mable controller CPU/ Process CPU	C Controller module	Program mable controller CPU		
CC-Link	○ ^{*1}	○	○	○	○	○ ^{*2}	—
	(CPU No.1 to 4)	(CPU No.1 to 4)	(CPU No.1 to 4)	(CPU No.1 to 4)			

*1 It can access to an RnENCPU only in a single CPU system.

*2 Can be accessed only when using an RD81MES96N.

Another station via a co-existence network

■ Access by specifying the network number and the station number via another station on CC-Link

The following table shows the accessible route to a target station from a station, on which an MES interface module is mounted by specifying the network number and the station number of the target station. In this route, another station on CC-Link is accessed first (first route), then a target station is accessed from there.

○: Accessible, —: No combination

First access route	Second access route (co-existence network)	Access target device type (series)							
		RCPU		QCPU (Q mode)		LCPU	FX5CPU	FXCPU	
		Programmable controller CPU/ Process CPU/ Safety CPU	C Controller module	Programmable controller CPU/ Process CPU	C Controller module	Programmable controller CPU			
CC-Link	CC-Link IE Controller Network	○ ^{*1,*2} (CPU No.1 to 4)	○	○ (CPU No.1 to 4)	○ (CPU No.1 to 4)	○	—	—	—
	CC-Link IE Field Network		○			○	○ ^{*4}		
	MELSECNET/H network		—			—	—		
	Ethernet ^{*3}		—			○	—		

*1 It can access to an RnENCPU only in a single CPU system.

*2 No combination with the MELSECNET/H network for process CPUs and safety CPUs.

*3 It is also supported by a QCPU (Q mode) for which the MELSOFT connection extended setting was set.

*4 Can be accessed only when using an RD81MES96N.

■ Accessing from another station specified by the network number and the station number via CC-Link

The following table shows the accessible route to a target station from a station, on which an MES interface module is mounted, by specifying the start I/O No. of a module that is routed through and the station number of the target station. In this route, another station on CC-Link is accessed first by specifying the network number and the station number (first route), then the target device is accessed from there.

○: Accessible, —: No combination

First access route	Second access route (co-existence network)	Access target device type (series)									
		RCPU		QCPU (Q mode)		LCPU	FX5CPU	FXCPU			
		Programmable controller CPU/ Process CPU/ Safety CPU	C Controller module	Programmable controller CPU/ Process CPU	C Controller module	Programmable controller CPU					
CC-Link IE Controller Network	CC-Link	○ ^{*1,*2} (CPU No.1 to 4)	○	○ (CPU No.1 to 4)	○ (CPU No.1 to 4)	○ (CPU No.1 to 4)	○	○ ^{*4}	—		
CC-Link IE Field Network			○							○	
MELSECNET/H network			—							—	
Ethernet ^{*3}			—							○	

*1 It can access to an RnENCPU only in a single CPU system.

*2 No combination with the MELSECNET/H network for process CPUs and safety CPUs.

*3 It is also supported by a QCPU (Q mode) for which the MELSOFT connection extended setting was set.

*4 Can be accessed only when using an RD81MES96N.

Accessible devices

The following table shows the accessible devices.

RD81MES96N

○: Accessible, ×: Not accessible, —: No device

Device name (device)	Access target device type (series)							
	RCPU			QCPU (Q mode)		LCPU	FX5CPU	FXCPU
	Programmable controller CPU/ Process CPU ^{*1} /Safety CPU ^{*1,*2}		C Controller module	Program mable controller CPU/ Process CPU	C Controller module	Program mable controller CPU		
	General access	High-speed access						
Function input (FX)	×	×	—	×	—	×	—	—
Function output (FY)	×	×	—	×	—	×	—	—
Function register (FD)	×	×	—	×	—	×	—	—
Special relay (SM)	○	○	○	○	○	○	○	—
Special register (SD)	○	○	○	○	○	○	○	—
Input relay (X)	○	○	○	○	○	○	○	○
Output relay (Y)	○	○	○	○	○	○	○	○
Internal relay (M) (Auxiliary relay)	○	○	○	○	○	○	○	○
Latch relay (L)	○	○	—	○	—	○	○	—
Annunciator (F)	○	○	—	○	—	○	○	—
Edge relay (V)	○	○	—	○	—	○	—	—
Link relay (B)	○	○	○	○	○ ^{*3}	○	○	—
Data register (D)	○	○	○	○	○	○	○	○
Link register (W)	○	○	○	○	○ ^{*3}	○	○	—
Timer	Contact (TS)	○	○	—	○	—	○	○
	Coil (TC)	○	○	—	○	—	○	○
	Current value (T/ TN)	○	○	—	○	—	○	○
Long timer	Contact (LTS)	○	○	—	—	—	—	—
	Coil (LTC)	○	○	—	—	—	—	—
	Current value (LT/ LTN)	○	○	—	—	—	—	—
Counter	Contact (CS)	○	○	—	○	—	○	○
	Coil (CC)	○	○	—	○	—	○	○
	Current value (C/ CN)	○	○	—	○	—	○	○
Long counter	Contact (LCS)	○	○	—	—	—	○	—
	Coil (LCC)	○	○	—	—	—	○	—
	Current value (LC/ LCN)	○	○	—	—	—	○	—
Retentive timer	Contact (STS, SS ^{*4})	○	○	—	○	—	○	—
	Coil (STC, SC ^{*4})	○	○	—	○	—	○	—
	Current value (ST/ STN, ST/SN ^{*4})	○	○	—	○	—	○	—
Long retentive timer	Contact (LSTS)	○	○	—	—	—	—	—
	Coil (LSTC)	○	○	—	—	—	—	—
	Current value (LST/ LSTN)	○	○	—	—	—	—	—
Link special relay (SB)	○	○	—	○	—	○	○	—

Device name (device)		Access target device type (series)							
		RCPU		C Controller module	QCPU (Q mode)		LCPU	FX5CPU	FXCPU
		Programmable controller CPU/ Process CPU ^{*1} /Safety CPU ^{*1,*2}			Program mable controller CPU/ Process CPU	C Controller module			
General access	High-speed access								
Link special register (SW)		○	○	—	○	—	○	○	—
Step relay (S)		×	×	—	×	—	×	×	—
Direct input (DX)		—	—	—	—	—	—	—	—
Direct output (DY)		—	—	—	—	—	—	—	—
Index register (Z, V ^{*5})		○	○	—	○	—	○	○	○
Long index register (LZ)		○	○	—	—	—	—	○	—
File register	(R)	○	○	—	○	—	○	○	○
	(ZR)	○	○	○	○	—	○	—	—
	(ERnR)	—	—	—	—	—	—	—	×
Link direct device	Link input (JnX)	○	—	○	○	○	○	—	—
	Link output (JnY)	○	—	○	○	○	○	—	—
	Link relay (JnB)	○	—	○	○	○	—	—	—
	Link special relay (JnSB)	○	—	○	○	○	○	—	—
	Link register (JnW)	○	—	○	○	○	○	—	—
	Link special register (JnSW)	○	—	○	○	○	○	—	—
Module access device	Module access device/intelligent function module device (UnG)	○	×	○	○	○	○	○	—
	Multiple CPU shared device (U3EnG)	—	—	—	○	○	—	—	—
CPU buffer memory access device	CPU buffer memory access device (U3EnG)	○	×	○	—	—	—	—	—
	CPU buffer memory access device (fixed cycle communication area) (U3EnHG)	○ ^{*6}	×	○	—	—	—	—	—
Refresh data register (RD)		○	○	—	—	—	—	—	—

*1 Process CPUs and safety CPUs do not support high-speed access.

*2 Safety devices cannot be accessed.

*3 Q12DCCPU-V (Basic mode) has no device.

*4 A device name for QCPUs (Q mode) and LCPUs

*5 Can be set only for FXCPUs.

*6 RnENCPUs and safety CPUs have no device.

RD81MES96

○: Accessible, ×: Not accessible, —: No device

Device name (device)		Access target device type (series)					
		RCPU		C Controller module	QCPU (Q mode)		LCPU
		Programmable controller CPU/Process CPU ^{*1} /Safety CPU ^{*1,*2}			Programmable controller CPU/Process CPU	C Controller module	Programmable controller CPU
General access	High-speed access						
Function input (FX)		×	×	—	×	—	×
Function output (FY)		×	×	—	×	—	×
Function register (FD)		×	×	—	×	—	×
Special relay (SM)		○	○	○	○	○	○
Special register (SD)		○	○	○	○	○	○
Input relay (X)		○	○	○	○	○	○
Output relay (Y)		○	○	○	○	○	○
Internal relay (M)		○	○	○	○	○	○
Latch relay (L)		○	○	—	○	—	○
Annunciator (F)		○	○	—	○	—	○
Edge relay (V)		○	○	—	○	—	○
Link relay (B)		○	○	○	○	○ ^{*3}	○
Data register (D)		○	○	○	○	○	○
Link register (W)		○	○	○	○	○ ^{*3}	○
Timer	Contact (TS)	○	○	—	○	—	○
	Coil (TC)	○	○	—	○	—	○
	Current value (T/TN)	○	○	—	○	—	○
Long timer	Contact (LTS)	×	×	—	—	—	—
	Coil (LTC)	×	×	—	—	—	—
	Current value (LT/LTN)	×	×	—	—	—	—
Counter	Contact (CS)	○	○	—	○	—	○
	Coil (CC)	○	○	—	○	—	○
	Current value (C/CN)	○	○	—	○	—	○
Long counter	Contact (LCS)	×	×	—	—	—	—
	Coil (LCC)	×	×	—	—	—	—
	Current value (LC/LCN)	×	×	—	—	—	—
Retentive timer	Contact (STS, SS ^{*4})	○	○	—	○	—	○
	Coil (STC, SC ^{*4})	○	○	—	○	—	○
	Current value (ST/STN, ST/SN ^{*4})	○	○	—	○	—	○
Long retentive timer	Contact (LSTS)	×	×	—	—	—	—
	Coil (LSTC)	×	×	—	—	—	—
	Current value (LST/LSTN)	×	×	—	—	—	—
Link special relay (SB)		○	○	—	○	—	○
Link special register (SW)		○	○	—	○	—	○
Step relay (S)		×	×	—	×	—	×
Direct input (DX)		—	—	—	—	—	—
Direct output (DY)		—	—	—	—	—	—
Index register (Z)		○	○	—	○	—	○
Long index register (LZ)		×	×	—	—	—	—
File register	(R)	○	○	—	○	—	○
	(ZR)	○	○	○	○	—	○
	(ERnR)	—	—	—	—	—	—

Device name (device)		Access target device type (series)					
		RCPU			QCPU (Q mode)		LCPU
		Programmable controller CPU/Process CPU ^{*1} /Safety CPU ^{*1,*2}		C Controller module	Programmable controller CPU/Process CPU	C Controller module	Programmable controller CPU
General access	High-speed access						
Link direct device	Link input (Jn\X)	○	—	○	○	○	○
	Link output (Jn\Y)	○	—	○	○	○	○
	Link relay (Jn\B)	○	—	○	○	○	—
	Link special relay (Jn\SB)	○	—	○	○	○	○
	Link register (Jn\W)	○	—	○	○	○	○
	Link special register (Jn\SW)	○	—	○	○	○	○
Module access device	Module access device/intelligent function module device (Un\G)	○	×	○	○	○	○
	Multiple CPU shared device (U3En\G)	—	—	—	○	○	—
CPU buffer memory access device	CPU buffer memory access device (U3En\G)	○	×	○	—	—	—
	CPU buffer memory access device (fixed cycle communication area) (U3En\HG)	○ ^{*5}	×	○	—	—	—
Refresh data register (RD)		×	×	—	—	—	—

*1 Process CPUs and safety CPUs do not support high-speed access.

*2 Safety devices cannot be accessed.

*3 Q12DCCPU-V (Basic mode) has no device.

*4 A device name for QCPUs (Q mode) and LCPUs

*5 RnENCPUs and safety CPUs have no device.

Access units

The following table shows the number of accessible device points (access units) in one process (one scanning) when accessing the device memory in a CPU module.

Note that the device memory is accessed in device tag component units when setting any of the following jobs in which only continuous array tags are used and operating an RD81MES96N.

☞ Page 38 Job setting 1, Page 38 Job setting 2, Page 38 Job setting 3

Access units differ from those shown in the following table when setting any of the jobs shown in the above sections and operating an RD81MES96N. (☞ Page 38 Setting a job in which only continuous array tags are used and operating an RD81MES96N)

Access target device type (series)		Device reading		Device writing
		General access	High-speed access	
RCPU	Programmable controller CPU	118 points ^{*2} 58 points ^{*3}	8192 points	78 points ^{*2} 38 points ^{*3}
	Process CPU		Not supported.	
	C Controller module			
QCPU (Q mode) ^{*1}		96 points ^{*2}		96 points ^{*2}
LCPU		48 points ^{*3}		48 points ^{*3}
FX5CPU		58 points ^{*2} 29 points ^{*3}		38 points ^{*2} 19 points ^{*3}
FXCPU		128 points		128 points

*1 Access units differ depending on the module type. When data inconsistency is a problem, select "Single Handshake" or "Multiple Handshake" for a trigger condition.

*2 For access without using an Ethernet port of an MES interface module

*3 For access by using an Ethernet port of an MES interface module

Setting a job in which only continuous array tags are used and operating an RD81MES96N

When setting any of the following jobs in which only continuous array tags are used and operating an RD81MES96N, the device memory is accessed in device tag component units.

☞ Page 38 Job setting 1, Page 38 Job setting 2, Page 38 Job setting 3

The following table shows the access units when setting any of the jobs shown in the above sections and operating an RD81MES96N.

Access target device type (series)		Device reading		Device writing
		General access	High-speed access	
RCPU	Programmable controller CPU	960 points	8192 points	949 points
	Process CPU		Not supported.	
	C Controller module			
QCPU (Q mode)*1		480 points		480 points
LCPU				
FX5CPU				469 points
FXCPU		32 points*2 64 points*3		32 points*2 64 points*3

*1 Access units differ depending on the module type. When data inconsistency is a problem, select "Single Handshake" or "Multiple Handshake" for a trigger condition.

*2 For access without using an Ethernet port of an RD81MES96N

*3 For access by using an Ethernet port of an RD81MES96N

Precautions

When accessing the device memory in device tag component units, device values may be obtained from multiple sequence scans and applied, which may cause data inconsistency.

When data inconsistency is a problem, refer to the following:

☞ Page 39 When data inconsistency is a problem

■Job setting 1

Action	Details
Operation action (substitution)	Either of the following conditions is satisfied. <ul style="list-style-type: none"> All device tag components are devices other than bit devices. The array sizes of all device tag components are multiples of 16.

■Job setting 2

Action	Details
DB communication action (Multiple Select)	All device tag components are devices other than bit devices.
Operation action (substitution)	Either of the following conditions is satisfied. <ul style="list-style-type: none"> All device tag components are devices other than bit devices. The array sizes of all device tag components are multiples of 16.

■Job setting 3

Action	Details
DB communication action (Multiple Select)	All of the following conditions are satisfied. <ul style="list-style-type: none"> All device tag components are bit devices. The array sizes of all device tag components are multiples of 16. The checkbox of "Clear the unsubstituted assignment data to 0" is selected for "Operation Setting at the No. of Selected Records Insufficient".
Operation action (substitution)	Either of the following conditions is satisfied. <ul style="list-style-type: none"> All device tag components are devices other than bit devices. The array sizes of all device tag components are multiples of 16.

Reading/writing in access units

When the number of accessed device points is equal to the access unit or less, device values in a same sequence scan are obtained and applied.

When the number of device points exceeds the access unit, device values may be obtained from multiple sequence scans and applied, which may cause data inconsistency.

■When data inconsistency is a problem

Set the following when a sequence program and the data needs to be synchronized and data inconsistency is a problem.

- Set the number of device points accessed at the same time to the access unit or less.
- Change the access type to high-speed access. (Only for device reading)
- Select "Single Handshake" or "Multiple Handshake" for "Configuration Type" for a trigger condition.

2.3 Access Specifications for a Database

This section shows the access specifications when an MES interface module accesses a database of a server.

Accessible databases and supported software


The following table shows the database type and supported software that can be accessed by an MES interface module.

Database type	Accessible database type ^{*1}	Supported software ^{*1}	Supported edition	
Database server	Oracle®	Oracle 11g	Express Edition	Only 64-bit version is supported.
			Standard Edition	
			Enterprise Edition	
		Oracle 12c	Standard Edition	
			Enterprise Edition	
			Enterprise Edition	
		Oracle 18c	Express Edition	
			Standard Edition	
			Enterprise Edition	
	Microsoft SQL Server®	SQL Server 2008 R2 ^{*2}	Express Edition	
			Standard Edition	
			Enterprise Edition	
		SQL Server 2012	Express Edition	
			Standard Edition	
			Enterprise Edition	
		SQL Server 2014	Express Edition	
			Standard Edition	
			Enterprise Edition	
		SQL Server 2016	Express Edition	
			Standard Edition	
			Enterprise Edition	
SQL Server 2017		Express Edition		
		Standard Edition		
		Enterprise Edition		
Microsoft Access®	Access 2010 ^{*3}	—	Only 32-bit version is supported.	
	Access 2013 ^{*3}	—		
	Access 2016 ^{*3}	—		
MySQL®	MySQL ^{*4}	Community Edition ^{*5}	Only 64-bit version is supported.	
		Standard Edition		
PostgreSQL	PostgreSQL ^{*4}	—		

*1 Use a same language version for the operating system and software.

*2 IA-64 cannot be used.

*3 Can be accessed when selecting "Connection via Service" for "Access Type".

 Page 41 Connection via service

*4 An open source database. The operation has been checked in the following versions.

MySQL: 5.7.10 (only for connection via service), 5.7.15 (only for connection via service), 5.7.25

PostgreSQL: 9.4.5 (only for connection via service), 9.5.4 (only for connection via service), 9.6.12, 10.7

*5 To use Community Edition, use the ODBC driver of MariaDB.


Access type

The following access types can be selected for accessing a database server from an MES interface module.

- Connection via service
- Direct DB connection

Connection via service

A database is accessed via DB Connection Service installed on a database server.

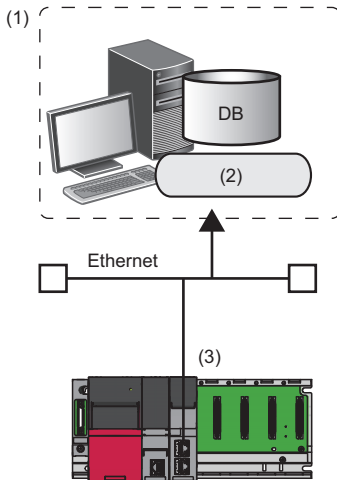

- (1) Database server
- (2) DB Connection Service
- (3) MES interface module


Point

The advantages of selecting "Connection via Service" for "Access Type" are as follows:

- An RD81MES96 can be replaced with an RD81MES96N without changing the settings of an MES interface module and database server.
- A startup time and troubleshooting time can be reduced in a system in which both an RD81MES96 and an RD81MES96N are included, because a database is accessed by using a same access type.

Direct DB connection

A database is accessed directly without using DB Connection Service.

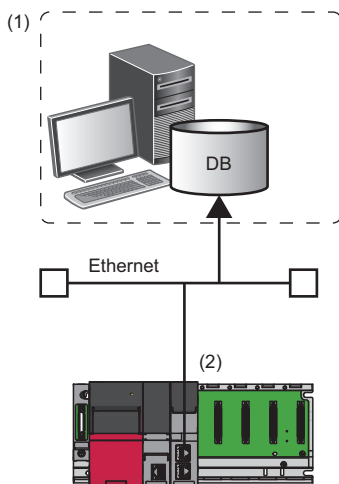

(1) Database server

(2) MES interface module (RD81MES96N)

Point

The advantages of selecting "Direct DB Connection" for "Access Type" are as follows:

- No need to install DB Connection Service on a database server.
- A database that runs on Linux can be accessed.

The operations have been checked in the following operating systems.

Oracle: Oracle Linux 7, Red Hat Enterprise Linux 7, SUSE Linux Enterprise Server 12

SQL Server, MySQL, and PostgreSQL: Ubuntu 16.04 LTS, Red Hat Enterprise Linux 7, SUSE Linux Enterprise Server 12

Precautions


A time until an MES interface module starts will be increased compared with when selecting "Connection via Service". When selecting "Direct DB Connection" for "Access Type", run the system by fully verifying the processing time.

2.4 Data Specifications

This section shows the specifications of data category and data type handled by an MES interface module.

Data category

The following shows the data category handled by an MES interface module.

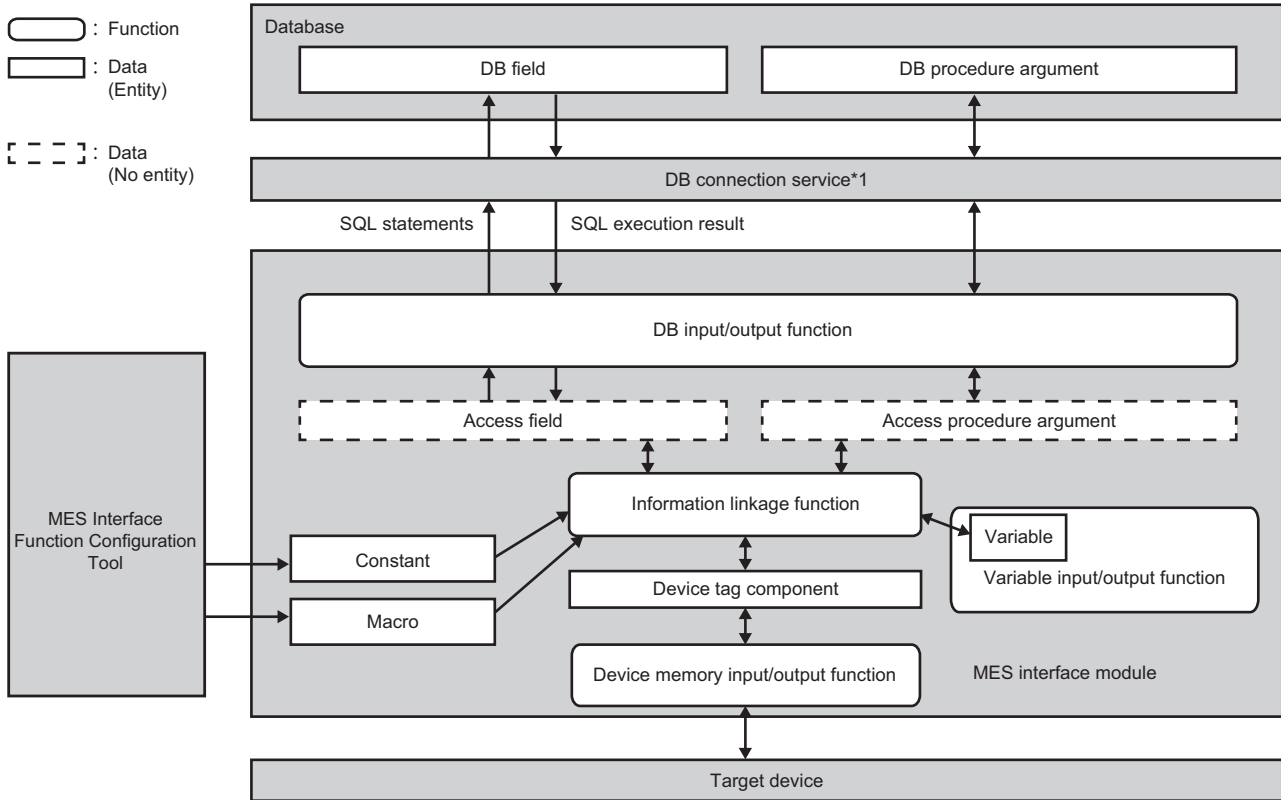

*1 When "Direct DB Connection" is selected for "Access Type", DB Connection Service is not used for access.

☞ Page 42 Direct DB connection

Data category	Description	Reference
Device tag component	Data associated with data in an access target device such as a CPU module.	Page 47 Device tag component or variable
Variable	Data used for storing the operation result in an MES interface module. <ul style="list-style-type: none"> Local variable: Used for sending and receiving data between operations in a same action, and actions in a same job. Global variable: Used for sending and receiving data between jobs. System variable: Used for retaining system information and controlling hardware. 	
Constant	A value set in MES Interface Function Configuration Tool.	Page 49 Constant
Macro	A special value set in MES Interface Function Configuration Tool. Since any value is not determined at the setting, MES Interface Function Configuration Tool specifies a macro name not a value.	Page 50 Macro
Access field	Data associated with the DB field. A concept used for checking the setting, and it has no entity.	—
Access procedure argument	Data associated with the DB procedure argument. A concept used for checking the setting, and it has no entity.	
DB field	A data component stored in the table of database. Associated with the access field.	
DB procedure argument	An argument of a stored procedure defined in a database. Associated with the access procedure argument.	

Data type

The following table lists the data type that can be specified in an MES interface module according to the data category and the data type classification.

Numerical value

■RD81MES96N

Data category		Numerical value			
		Integer		Real number	
Device tag component		<ul style="list-style-type: none"> • Bit • Word [unsigned]/Bit string [16-bit] • Double word [unsigned]/Bit string [32-bit] • Word [signed] • Double word [signed] • 16bit BCD • 32bit BCD 		<ul style="list-style-type: none"> • Single-precision real number • Double-precision real number 	
Variable		<ul style="list-style-type: none"> • Bit • Word [unsigned]/Bit string [16-bit] • Double word [unsigned]/Bit string [32-bit] • Word [signed] • Double word [signed] 		<ul style="list-style-type: none"> • Single-precision real number • Double-precision real number 	
Constant		Integer		Real number	
Macro		Any of the data types of the device tag component or variable is determined for each macro.			
Access field		Integer		Real number [floating point]	Real number [fixed point]
Access procedure argument		Integer		Real number	
DB field DB procedure argument	Oracle ^{*1}	—	<ul style="list-style-type: none"> • NUMBER(p) • NUMBER(p, 0) 	<ul style="list-style-type: none"> • NUMBER • BINARY_FLOAT • BINARY_DOUBLE 	<ul style="list-style-type: none"> • NUMBER(p, s)^{*2}
	Microsoft SQL Server	<ul style="list-style-type: none"> • bit • tinyint • smallint • int • bigint 	<ul style="list-style-type: none"> • decimal • numeric • decimal(p) • numeric(p) • decimal(p, 0) • numeric(p, 0) 	<ul style="list-style-type: none"> • real • float 	<ul style="list-style-type: none"> • decimal(p, s) • numeric(p, s)
	Microsoft Access	<ul style="list-style-type: none"> • Yes/No type • Number: Byte • Number: Integer • Number: Long Integer 	<ul style="list-style-type: none"> • Number: Decimal 	<ul style="list-style-type: none"> • Number: Single • Number: Double 	<ul style="list-style-type: none"> • Number: Decimal^{*2}
	MySQL	<ul style="list-style-type: none"> • TINYINT [UNSIGNED] • SMALLINT [UNSIGNED] • MEDIUMINT [UNSIGNED] • INT [UNSIGNED] • BIGINT [UNSIGNED] 	<ul style="list-style-type: none"> • DECIMAL[(M[,0])] [UNSIGNED] 	<ul style="list-style-type: none"> • FLOAT [UNSIGNED] • DOUBLE [UNSIGNED] 	<ul style="list-style-type: none"> • DECIMAL(M,D) [UNSIGNED]^{*2}
	PostgreSQL	<ul style="list-style-type: none"> • smallint • integer • bigint 	<ul style="list-style-type: none"> • numeric(p[,0]) 	<ul style="list-style-type: none"> • numeric(p,s) • real • double precision 	<ul style="list-style-type: none"> • numeric(p, s)^{*2}

■RD81MES96

Data category		Numerical value	
		Integer	Real number
Device tag component		<ul style="list-style-type: none"> • Bit • Word [unsigned]/Bit string [16-bit] • Double word [unsigned]/Bit string [32-bit] • Word [signed] • Double word [signed] • 16bit BCD • 32bit BCD 	<ul style="list-style-type: none"> • Single-precision real number • Double-precision real number

Data category		Numerical value		
		Integer		Real number
Variable		<ul style="list-style-type: none"> • Bit • Word [unsigned]/Bit string [16-bit] • Double word [unsigned]/Bit string [32-bit] • Word [signed] • Double word [signed] 		<ul style="list-style-type: none"> • Single-precision real number • Double-precision real number
Constant		Integer		Real number
Macro		Any of the data types of the device tag component or variable is determined for each macro.		
Access field		Integer		Real number [floating point]
Access procedure argument		Integer		Real number
DB field DB procedure argument	Oracle ^{*1}	—	<ul style="list-style-type: none"> • NUMBER(p) • NUMBER(p, 0) 	<ul style="list-style-type: none"> • NUMBER(p, s) • NUMBER • BINARY_FLOAT • BINARY_DOUBLE
	Microsoft SQL Server	<ul style="list-style-type: none"> • bit • tinyint • smallint • int • bigint 	<ul style="list-style-type: none"> • decimal • numeric • decimal(p) • numeric(p) • decimal(p, 0) • numeric(p, 0) 	<ul style="list-style-type: none"> • real • float
	Microsoft Access	<ul style="list-style-type: none"> • Yes/No type • Number: Byte • Number: Integer • Number: Long Integer 	<ul style="list-style-type: none"> • Number: Decimal 	<ul style="list-style-type: none"> • Number: Decimal • Number: Single • Number: Double
	MySQL	<ul style="list-style-type: none"> • TINYINT [UNSIGNED] • SMALLINT [UNSIGNED] • MEDIUMINT [UNSIGNED] • INT [UNSIGNED] • BIGINT [UNSIGNED] 	<ul style="list-style-type: none"> • DECIMAL[(M[,0])] [UNSIGNED] 	<ul style="list-style-type: none"> • DECIMAL(M,D) [UNSIGNED] • FLOAT [UNSIGNED] • DOUBLE [UNSIGNED]
	PostgreSQL	<ul style="list-style-type: none"> • smallint • integer • bigint 	<ul style="list-style-type: none"> • numeric(p[,0]) 	<ul style="list-style-type: none"> • numeric[(p,s)] • real • double precision

Character string, date and time

Data category		Character string		Date and time	
Device tag component		<ul style="list-style-type: none"> • Character string [Unicode] • Character string [ASCII/SJIS] 		—	
Variable		<ul style="list-style-type: none"> • Character string [Unicode] 			
Constant		<ul style="list-style-type: none"> • Character string [Unicode] 			
Macro		Any of the data types of the device tag component or variable is determined for each macro.			
Access field		<ul style="list-style-type: none"> • Character string [Unicode(NCHAR)] 	<ul style="list-style-type: none"> • Character string [Unicode(CHAR)] 	Date and time [without time zone]	Date and time [with time zone]
Access procedure argument		<ul style="list-style-type: none"> • Character string [Unicode] 		Date and time [without time zone]	—
DB field DB procedure argument	Oracle ^{*1}	<ul style="list-style-type: none"> • NCHAR • NVARCHAR2 	<ul style="list-style-type: none"> • CHAR • VARCHAR2 	<ul style="list-style-type: none"> • DATE • TIMESTAMP[(p)] 	<ul style="list-style-type: none"> • TIMESTAMP[(p)] WITH TIME ZONE^{*3}
	Microsoft SQL Server	<ul style="list-style-type: none"> • nchar • nvarchar 	<ul style="list-style-type: none"> • char • varchar 	<ul style="list-style-type: none"> • smalldatetime • datetime • datetime2[(p)] 	<ul style="list-style-type: none"> • datetimeoffset[(p)]^{*3}
	Microsoft Access ^{*4}	—	<ul style="list-style-type: none"> • Text type (short text^{*5}) 	<ul style="list-style-type: none"> • Date/Time 	—
	MySQL	<ul style="list-style-type: none"> • [NATIONAL] CHAR[(M)] • [NATIONAL] VARCHAR(M) • CHAR[(M)]^{*6} • VARCHAR(M)^{*6} 	<ul style="list-style-type: none"> • CHAR[(M)]^{*7} • VARCHAR(M)^{*7} 	<ul style="list-style-type: none"> • DATETIME[(fsp)] • TIMESTAMP[(fsp)] 	—
	PostgreSQL	—	<ul style="list-style-type: none"> • character[(n)] • character varying[(n)] 	<ul style="list-style-type: none"> • timestamp[(p)] [without time zone] 	—

*1 The data type (DATE) in Oracle can store the date from January 1st in 4712 B.C. to December 31st in 9999 A.D. in Julian calendar. However, the date in B.C cannot be handled in an MES interface module.

*2 The data type 'real number [floating point]' of an access field is also supported.

*3 Cannot be specified for a DB procedure argument.

*4 Cannot be used for a DB procedure argument.

*5 Notation in Access 2013 and Access 2016.

*6 Can be specified when the character set setting in a field of a database is utf8.

*7 Can be specified when the character set setting in a field of a database is not utf8.

Device tag component or variable

The following tables show the data type specifications for a device tag component or variable according to the classification.

Data type

Integer

Data type	Variable
Bit	2 bytes
Word [unsigned]/Bit string [16-bit]	2 bytes
Double word [unsigned]/Bit string [32-bit]	4 bytes
Word [signed]	2 bytes
Double word [signed]	4 bytes
16bit BCD	—
32bit BCD	—

Real number

Data type	Variable
Single-precision real number	4 bytes
Double-precision real number	8 bytes

Character string


Data type	Character string length	Character code	Variable
Character string [Unicode]	1 to 255 characters	UTF-16LE ^{*1,*2,*3}	2 bytes/character
Character string [ASCII/SJIS]	1 to 255 characters	Windows Codepage 932	—

*1 The character other than BMP (U+10000 to U+10FFFF) cannot be used and it has no BOM.

*2 UTF-16LE has no BOM.

*3 Combining characters cannot be used.

System variable list

Variable name	Data type	Write	Description	Description of a value
S_SERVER_STATUS01 to S_SERVER_STATUS16 (Connection status of an access target server)	Word [unsigned]/Bit string [16-bit]	Not writable	Displays a connection status to each access target server.	<ul style="list-style-type: none"> • 0: Not connected • 1: Connecting • 2: Disconnecting
S_DEVICE_STATUS01 to S_DEVICE_STATUS64**1 (Connection status of an access target device)	Word [unsigned]/Bit string [16-bit]	Not writable	Displays a connection status to each access target device.	<ul style="list-style-type: none"> • 0: Not connected • 1: Connecting • 2: Disconnecting
S_MATRIXLED_DISP (Dot matrix LED display)	Character string [Unicode] 32 characters	Writable	Displays the user specification character string of the dot matrix LED. Substitute characters to display in the action. For details on the action, refer to the following:  MELSEC iQ-R MES Interface Module User's Manual (Application)	Usable characters: U+0020 to U+007E*2 (The initial value is null character.)
S_MATRIXLED_MODE (Dot matrix LED display mode)	Word [unsigned]/Bit string [16-bit]	Writable	Displays the dot matrix LED display mode.	<ul style="list-style-type: none"> • 0: USR (user specification character) (initial value) • 1: ENo. (Error code) • 2: IP1 (CH1 IP address) • 3: IP2 (CH2 IP address) • 4: BUF1 (DB buffer 1 use rate) • 5: BUF2 (DB buffer 2 use rate)

*1 'S_DEVICE_STATUS17' to 'S_DEVICE_STATUS64' can be used for an RD81MES96N only.

*2 When specifying a character other than a usable one, it is converted into a period (U+002E) and displayed.

Constant

The following tables show the data type specifications for a constant according to the classification.

Data type

The data type of the constant is checked by MES Interface Function Configuration Tool not an MES interface module.

Integer

Data type	Usable characters	Minimum value	Maximum value	Maximum number of characters
Integer	-, 0, 1, 2, 3, 4, 5, 6, 7, 8, 9	-2147483648 (Minimum value of a signed 32-bit integer)	4294967295 (Maximum value of an unsigned 32-bit integer)	11 characters

Real number

Data type	Usable characters	Minimum of the absolute values	Maximum of the absolute values	Maximum number of significant digits in the mantissa part	Maximum number of characters
Real number	-, E, .(decimal point), 0, 1, 2, 3, 4, 5, 6, 7, 8, 9	2.22507385850721E-308	1.79769313486231E308	15 digits	22 characters*1

*1 '-123.456789012345e-222' and '0.00000123456789012345' etc. can be set. '1.23456789012345000000' etc. cannot be set.

Character string

Data type	Usable characters	Maximum length of character string
Character string [Unicode]	Printable characters including the blank (U + 0020) (Escape sequences are handled without converting into control characters. (\n etc.))	255 characters

Macro

The data, of which a value is not determined at the job setting such as a date and time when the trigger condition is satisfied, is set with a macro name and replaced to data in an MES interface module.

The following tables show the specifications for a macro according to the classification.

Macro list

■Time at trigger monitoring

Data type	Description
Date and time	A date and time when the monitoring of a trigger condition starts.

■Time at trigger ON

Data type	Description
Date and time	A date and time when the trigger condition of a job is satisfied.

■Job execution start date and time

Data type	Description
Date and time	A date and time when the first action of a job starts.

■Server date and time

Data type	Description
Date and time	<p>A server date and time at DB field insertion/update.</p> <ul style="list-style-type: none"> • Outputs the value as an identifier of the macro to DB Connection Service. • MES interface module does not have a data type since the value is not used. • It is handled as a date and time when checking the setting of the data assignment function in MES Interface Function Configuration Tool.

■Failure Action No.

Data type	Description
Word [unsigned]/Bit string [16-bit]	<p>An action number executed when a processing failed.</p> <ul style="list-style-type: none"> ■Upper 8 bits (processing type) <ul style="list-style-type: none"> • 1: Pre-processing • 2: Main processing • 3: Post-processing ■Lower 8 bits (action number) <ul style="list-style-type: none"> • 1 to 20: Action number

■Date and time character string

Data type	Description		
Character string [Unicode] Up to 64 characters	<p>A character string converted the time, when the trigger condition is satisfied, based on the specified format.</p> <p>Specifies a format character string when using macro.</p> <p>The following characters in the format character strings are replaced with numerical values. (Example) YYYY-MM-DD hh:mm:ss.fff OFFSET → 2015-02-01 13:05:43.532 +09:00</p> <table border="0"> <tr> <td style="vertical-align: top;"> <ul style="list-style-type: none"> ■Characters to be replaced • YYYY • YY • MM • DD • hh • mm • ss • fff • OFFSET </td> <td style="vertical-align: top;"> <ul style="list-style-type: none"> ■Values to be replaced (When a value has a small number of the digits, '0' is added to the head.) • Year (4 digits) • Year (last 2 digits) • Month (01 to 12) • Day (01 to 31) • Hour (00 to 23) • Minute (00 to 59) • Second (00 to 59) • Decimal part of second: Millisecond (000 to 999) • UTC offset [+]-xx:xx </td> </tr> </table>	<ul style="list-style-type: none"> ■Characters to be replaced • YYYY • YY • MM • DD • hh • mm • ss • fff • OFFSET 	<ul style="list-style-type: none"> ■Values to be replaced (When a value has a small number of the digits, '0' is added to the head.) • Year (4 digits) • Year (last 2 digits) • Month (01 to 12) • Day (01 to 31) • Hour (00 to 23) • Minute (00 to 59) • Second (00 to 59) • Decimal part of second: Millisecond (000 to 999) • UTC offset [+]-xx:xx
<ul style="list-style-type: none"> ■Characters to be replaced • YYYY • YY • MM • DD • hh • mm • ss • fff • OFFSET 	<ul style="list-style-type: none"> ■Values to be replaced (When a value has a small number of the digits, '0' is added to the head.) • Year (4 digits) • Year (last 2 digits) • Month (01 to 12) • Day (01 to 31) • Hour (00 to 23) • Minute (00 to 59) • Second (00 to 59) • Decimal part of second: Millisecond (000 to 999) • UTC offset [+]-xx:xx 		

3 FUNCTION LIST


This chapter shows the function list of a MES interface module, MES Interface Function Configuration Tool, Project File Conversion Tool, DB Connection Service, and DB Connection Service Setting Tool.

For details on each function, refer to the following:

📖 MELSEC iQ-R MES Interface Module User's Manual (Application)

3.1 Function Overview

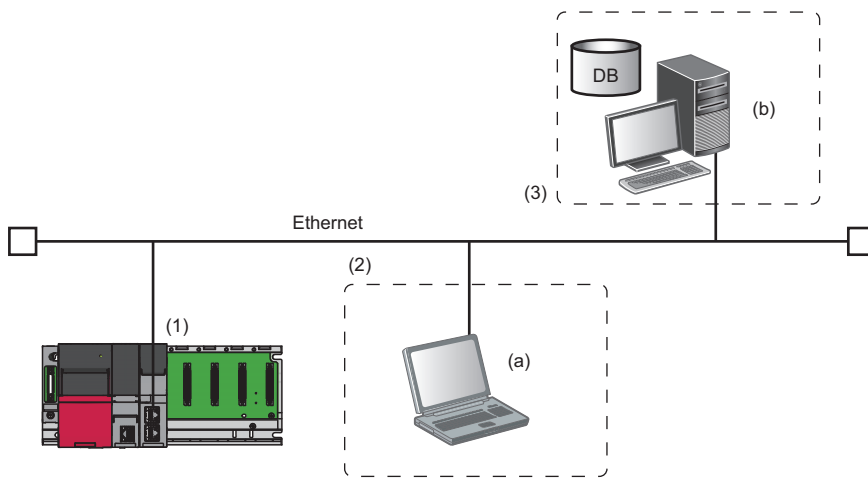

A MES interface module links information between production equipment and host information systems by using each function of MES Interface Function Configuration Tool, Project File Conversion Tool, DB Connection Service, and DB Connection Service Setting Tool.



Name		Description	Reference
(1)	MES interface module	A module to link information between production equipment and host information systems.	Page 52 Function List of an MES Interface Module
(2)	Configuration personal computer	(a) MES Interface Function Configuration Tool	A tool to set various settings required for operating an MES interface module.
		Project File Conversion Tool	A tool to convert MELSEC-Q series MES Interface module project file to MELSEC iQ-R series MES Interface module project file.
(3)	Server	(b) DB Connection Service	Software to link information between MES interface module and a database.
		DB Connection Service Setting Tool	A tool to set the settings for DB Connection Service.

3.2 Function List of an MES Interface Module

This section shows the function list of an MES interface module.

Function		Description		
Data input/output function	Device memory input/output function	Device memory input function	A function to read data in the device memory. Data used for trigger judgment is read, and then data used for job is read.	
		Device memory output function	A function to write data written in the device tag in the job to the device memory.	
	DB input/output function	DB record input/output function	A function to read/write data in the database of the host information system.	
		DB buffering function	A function to buffer data sent to the database, and resend it after recovery, when the data can not be linked due to the disconnection of the network between MES interface module and the database or failure of the database etc.	
	Variable input/output function	System variable input/output function	A function to read/write data of the system variable storing operating status of the module such as the status of an MES interface module.	
		User variable input/output function	A function to read/write data to a user variable (local variable/global variable) which can be registered arbitrarily. <ul style="list-style-type: none"> Local variable: can be used in a same job Global variable: can be used between jobs 	
External communication client function	Program execution function	A function to execute programs on the application server via DB Connection Service.		
Information linkage function	Trigger condition monitoring function	A function to monitor values of the time or device tag components etc., and start jobs when trigger conditions are changed from false to true (the condition is satisfied).		
	Job execution control function	A function to control the job execution such as the availability of the job execution depending of the number of executable jobs at the same time.		
	Trigger buffering function	A function to buffer information required for the job execution to trigger information as the trigger buffer.		
	One-shot execution function	A function to execute arbitrary jobs at arbitrary timing.		
	Data operation and processing function	A function to perform the substitution ^{*1} , basic arithmetic operations, remainder, and character string operation of device tag component values.		
	Data linkage function	Data assignment function	A function to assign and link the device tag, DB data, and variable which are read by using the data input/output function.	
	Communication test function	A function to check the communication settings between a MES interface module and access target device or access target server.		
	DB information browse function ^{*2}	A function to receive a request from MES Interface Function Configuration Tool and access a database, and acquire DB table names, DB field names, data types of DB fields, stored procedure names, and argument information of a stored procedure.		
External communication server function	REST server function	A function that allows to perform job-related operations and acquire job information from an REST client. Also supports the XML process function for the MELSEC-Q Series MES interface module.		
Security function	User authentication function	A function to prevent illegal access to a MES interface module by setting a user name and password.		
Other functions	SD memory card management function	A function to format an SD memory card.		
	Self-diagnostic function	A function to diagnose whether an MES interface module operates normally.		
	Online module change function	A function to replace a module to another without stopping a running system. For the procedure, refer to the following:  MELSEC iQ-R Online Module Change Manual		
	Firmware update function ^{*2}	A function to update the firmware of an MES interface module. For details, refer to the following:  MELSEC iQ-R Module Configuration Manual		
	Initialization function ^{*2}	A function to initialize firmware update prohibition passwords retained in an MES interface module.		

*1 Array tag components can be substituted only for an RD81MES96N.

*2 Can be used only for an RD81MES96N.

3.3 Function List of MES Interface Function Configuration Tool

This section shows the function list of MES Interface Function Configuration Tool.

Function	Description	
Project file function	New	To create a new project file.
	Open	To open a project file.
	Save	To save a project file.
	Import	To import individual settings of another project file. The setting items imported can be selected.
	Open CSV files	To open a CSV file and apply data to a project being edited.
	Save CSV files	To save a project being edited to a CSV file.

Function		Description		
Information linkage setting function	Project setting function	To display the home screen of MES Interface Function Configuration Tool to start setting.		
	Network setting function	To set two Ethernet ports and a common host name.		
	Device access setting function	Target device setting	To specify a device type or a CPU number in a multiple CPU system, and set a network communication route to access from an MES interface module.	
		Device tag setting	To set a logic name for the device memory of an access target device as a device tag component. A group of a device tag component can also be set as a device tag. For a device tag component, global labels and common device comments set with an engineering tool can be imported.	
	Server access setting function	Target server setting	To set the type of a server, network information, and user authentication information.	
		Access table/procedure setting	To set a logic name for the table/procedure and field/procedure arguments of a database as an access table/procedure and access field/procedure arguments.	
	DB information browse function	Browse DB table information	To set a DB table name of an access target table by communicating with a database and browsing a DB table name.	
		Browse DB field information	To set a DB field name and data type of an access target table by communicating with a database and browsing a DB field name and data type.	
		Browse DB procedure information	To set a stored procedure name and argument information by communicating with a database and browsing a stored procedure name and stored procedure argument information.	
	Job setting function	Job configuration setting	To set the necessity of the pre/post-processing etc.	
		Trigger condition setting	To set a condition to start a job. Trigger buffering can also be set when trigger conditions are satisfied at a time.	
		Read data setting at trigger judgment	To set a method and interval for reading data required to evaluate a trigger condition. Whether to include other data used in a job can also be set.	
		Pre-processing setting	To set the pre-processing performed before DB communication.	
		Main-processing setting	To set the main-processing to perform DB communication.	
		Post-processing setting	To set the post-processing performed after DB communication.	
		Verification setting	To set a function used when verifying a job, such as job execution inhibition or log output.	
	Action setting function	DB communication action setting	To set a target table and type of DB communication (Select etc.), and data assignment of DB communication data and an MES interface module.	
		External communication action setting	To set a target server for program execution or a command actually executed etc.	
		Operation action setting	To set an operation type (basic arithmetic operations etc.) and target data (a device tag or variable) in an MES interface module for operation.	
	Option setting function	Variable setting	To set the following variables as a variable of an MES interface module. • Local variable using the area for a job • Global variable using the user area of the buffer memory	
DB buffer setting		To set the capacity, method to resend data in a DB buffer, notification related to other DB buffers, and request for using the DB buffering function.		
Security setting		To set the user authentication for connecting to an MES interface module.		
Dot matrix LED setting		To set the settings related to the dot matrix LED display.		
Online function	Online data operation function	To perform the following operations to an MES interface module. • Specify Connection Destination: To set an MES interface module of a connection destination. • Read: To read a setting from an MES interface module, and overwrite a project file being edited. • Write: To write a project file being edited to an MES interface module. • Verify: To verify the contents of a project file being edited with those of a setting in an MES interface module. • Update setting: To apply a written setting to an MES interface module.		
	Diagnostic function	To check the various kinds of information of an MES interface module and the detailed contents, such as actual values, for each action of jobs and diagnose them or take measures.		
	Management function	Firmware update management*1	To display and change the prohibition state of the firmware update set in an MES interface module.	
	One-shot execution function	To request one-shot execution of a job specified for an MES interface module and display the detailed log.		

Function	Description	
Help function	MELSEC iQ-R MES interface module help	To open MELSEC iQ-R MES Interface Module User's Manual.
	Connection to MITSUBISHI ELECTRIC FA Global Website	To connect to MITSUBISHI ELECTRIC FA Global Website.
	Version information	To display the version information of MES Interface Function Configuration Tool.

*1 Can be used only when an RD81MES96N is connected.

3.4 Function List of DB Connection Service

This section shows the function list of DB Connection Service.

Function	Description
DB connection function	To receive a DB communication request from an MES interface module, perform a DB communication via ODBC, and return the result of a DB communication to an MES interface module.
Program execution function	To receive a program execution request from an MES interface module and execute a command directly to an application server. To return an execution result to an MES interface module.
DB information browse function	To acquire and return the table information or stored procedure information of a database in response to a request from the table/procedure information browse function of MES Interface Function Configuration Tool.
Security function	To restrict an IP address and service port to limit connectable MES interface modules or applications.
Log output function	To output a communication log with an MES interface module or an SQL failure log when SQL execution fails.

3.5 Function List of DB Connection Service Setting Tool

This section shows the function list of DB Connection Service Setting Tool.

Function	Description
DB Connection Service setting function	To set and change the settings of DB Connection Service.
Import/export function	To import from and export to a file of DB Connection Service setting information.
Help function	To display the product information of DB Connection Service Setting Tool and connect to MITSUBISHI ELECTRIC FA Global Website.

3.6 Function List of Project File Conversion Tool

This section shows the function list of Project File Conversion Tool.

Function	Description
Project file conversion function	To convert a project file of a MELSEC-Q series MES interface module to one of a MELSEC iQ-R series MES interface module.

4 PROCEDURE BEFORE OPERATION

This chapter shows the procedure before operation of an MES interface module.

Operating procedure

1. Starting a server

Start a server used as a database server or application server.


(☞ Page 56 Starting a Server)

2. Starting an MES interface module and a configuration personal computer

Start an MES interface module, and a configuration personal computer on which MES Interface Function Configuration Tool is used.

(☞ Page 59 Starting an MES Interface Module and a Configuration Personal Computer)

4.1 Starting a Server

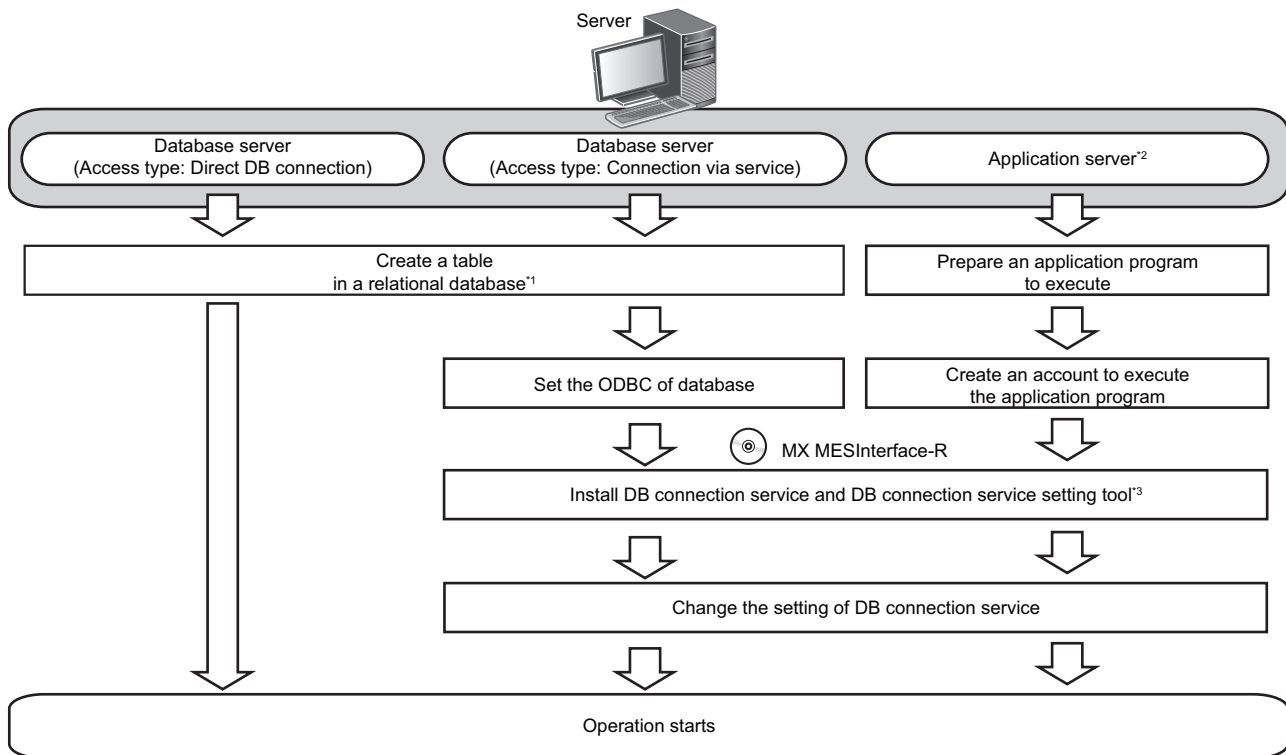

*1 Install a relational database, and restart a server then create a table.

*2 Set it when using the program execution function. (☞MELSEC iQ-R MES Interface Module User's Manual (Application))

*3 ☞ Page 84 INSTALLATION AND UNINSTALLATION

Point

- Be sure to log on to an application server with a created account for application program execution once before using the program execution function on the application server.
- For using an application server when using the program execution function, log on with an account other than a created one for the application program execution function.

DB Connection Service/DB Connection Service Setting Tool

The information linkage function of an MES interface module can be used by installing DB Connection Service on a server. For details on DB Connection Service and DB Connection Service Setting Tool, refer to the following:

 MELSEC iQ-R MES Interface Module User's Manual (Application)


Point

- DB Connection Service must be installed on all database servers and application servers accessed from an MES interface module.
- When using DB Connection Service on an application server, an account for application program execution must be created in advance.
- The settings of DB Connection Service are changed in DB Connection Service Setting Tool.

4

ODBC setting for database

When using DB Connection Service on a database server, the ODBC setting for a database used must be set in advance. For the ODBC setting method, refer to the following:

 Page 114 ODBC Setting

■ ODBC driver

Only the ODBC driver installed at the same time as the installation of the database can be used except for the cases below. 'Microsoft Access Driver(*.mdb)', 'Microsoft ODBC for Oracle', and 'SQL Server' which are supplied with the operating system cannot be used.

- When connecting the database of Oracle using any of the following DB Connection Services, the 32-bit version of Oracle Client for the ODBC setting and the ODBC driver of Oracle need to be installed. Install them as necessary.
The DB Connection Service which is stored to MX MESInterface-R whose software version is '1.03D' or earlier.
The DB Connection Service (32-bit) which is stored to MX MESInterface-R whose software version is '1.04E' or later.
- When using PostgreSQL for a database, install an ODBC driver.

■ ODBC Data Source Administrator

- When the installation method of Access is Click-to-Run (C2R), install Microsoft Access database engine 2010 first, then start "ODBC Data Source Administrator".

Startup method

Operating procedure

1. Select DB Connection Service Setting Tool.

Click [MELSOFT] ⇒ [MESInterface]^{*2} ⇒ [DB connection service setting tool] from Windows Start^{*1}.

*1 Select [All apps] on the Start screen or [Start] ⇒ [All Programs]/[All apps].


*2 Does not appear in Windows 8 or later.

2. When using an operating system with the user account control function, a warning message relating to 'DBCnctConf.exe' appears. Click "Allow" or the [Yes] button.

Point

- To prevent a warning message from being displayed, refer to the following:
 - MELSEC iQ-R MES Interface Module User's Manual (Application)
- The setting contents of DB Connection Service, which is currently in operation, are displayed during startup.

Screen configuration

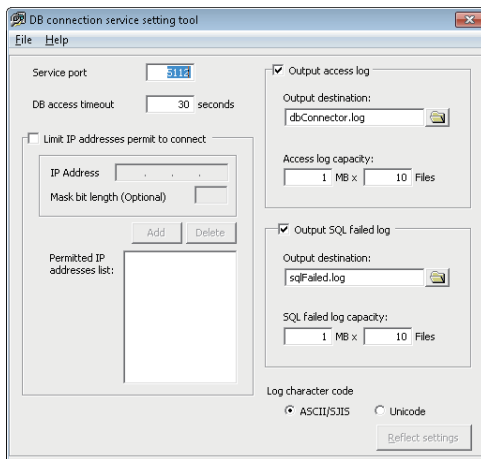

Menu configuration


The following table lists the commands assigned to the menu bar.

Menu name		Description
File	Import	To import a saved file.
	Export	To export setting contents of DB Connection Service Setting Tool to a file.
	End	To end DB Connection Service Setting Tool.
Help	Product information	To display the product information of DB Connection Service Setting Tool.
	Connection to MITSUBISHI ELECTRIC FA Global Website	To display MITSUBISHI ELECTRIC FA Global Website.

4.2 Starting an MES Interface Module and a Configuration Personal Computer

Point 

Start a server before starting an MES interface module and a configuration personal computer.

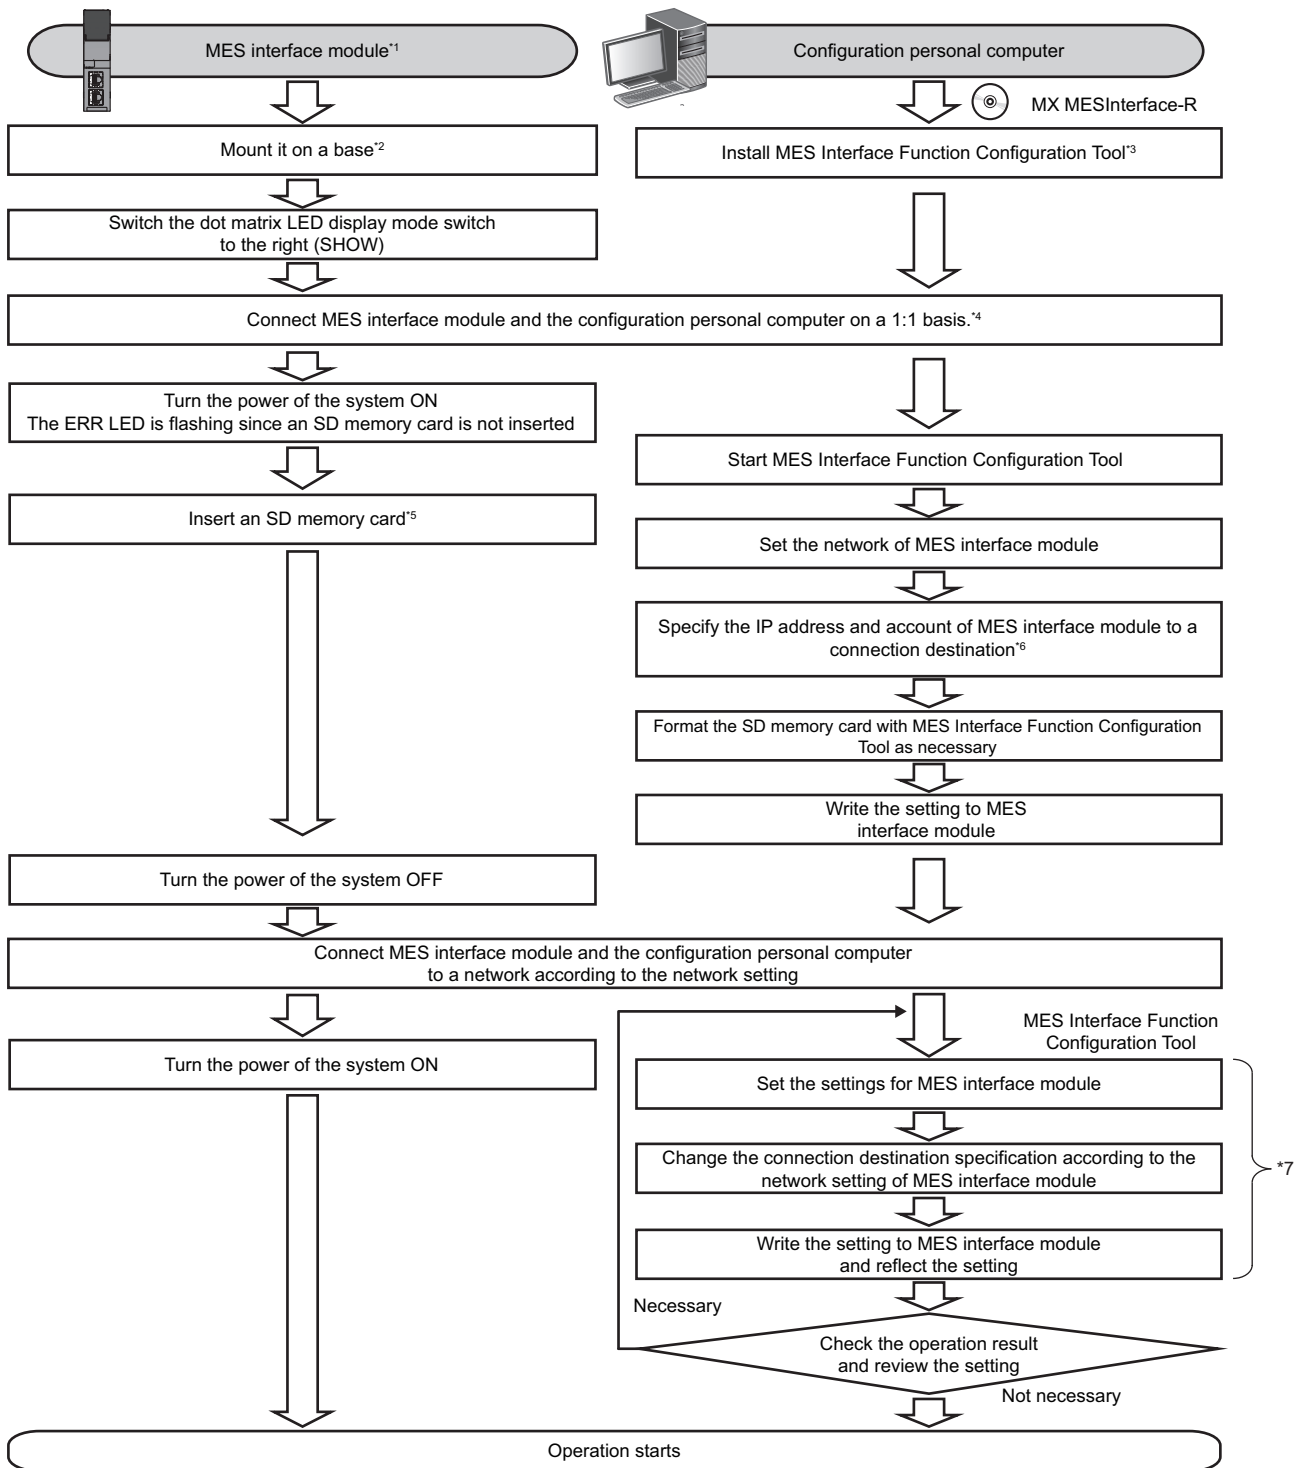

- *1 Perform the self-diagnostic test as necessary. (MELSEC iQ-R MES Interface Module User's Manual (Application))
- *2 Do not use an electric screwdriver to attach and remove module fixing screws.
- *3 Page 84 INSTALLATION AND UNINSTALLATION
- *4 Use the Ethernet port (CH1) on MES interface module.
- *5 Page 69 Insertion/removal method of an SD memory card
- *6 Specify the following (the default network setting and security setting) for connection in the connection destination specification of MES Interface Function Configuration Tool.
 - Connection destination setting
IP address: 192.168.3.3
 - User authentication setting (optional)
Use the user authentication : Select the checkbox.
User name: RD81MES96
Password: MITSUBISHI
- *7 Perform these steps to change the setting of an MES interface module.

MES Interface Function Configuration Tool

MES Interface Function Configuration Tool is a tool to set various settings required for operating an MES interface module. Various operations such as checking each status and the working history, and stopping or restarting MES interface module can be performed.

For details on MES Interface Function Configuration Tool, refer to the following:

📖 MELSEC iQ-R MES Interface Module User's Manual (Application)

Startup method

Operating procedure


1. Select MES Interface Function Configuration Tool.

🖱️ Click [MELSOFT] ⇒ [MESInterface]^{*2} ⇒ [MELSEC iQ-R Series MES Interface Function Configuration Tool] from Windows Start^{*1}.

*1 Select [All apps] on the Start screen or [Start] ⇒ [All Programs]/[All apps].

*2 Does not appear in Windows 8 or later.

Screen configuration

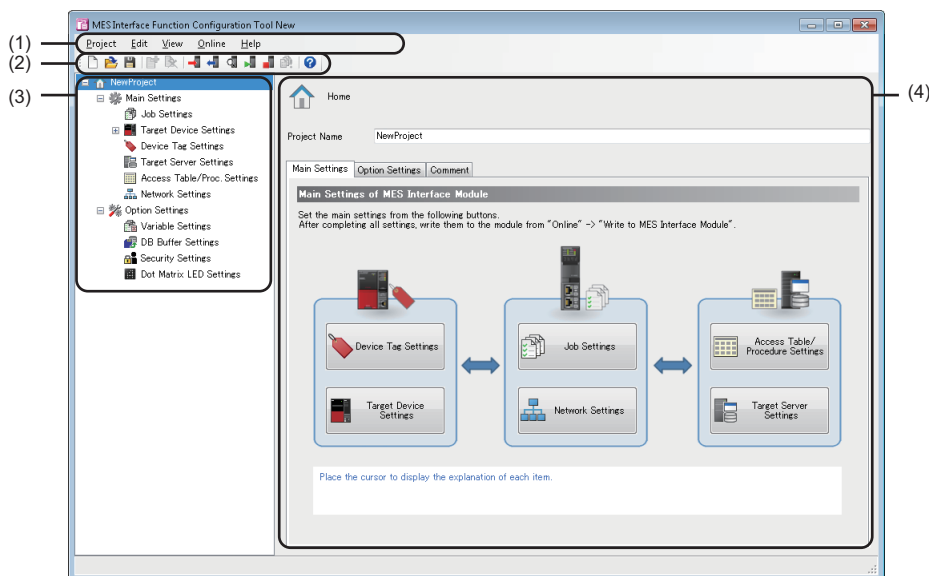

- (1) Menu bar
- (2) Toolbar
- (3) Edit item tree
- (4) Setting editing screen

■ Menu configuration

The following table lists the commands assigned to the menu bar.

Menu name		Description	
Project	New	To discard a project being edited and create a new project.	
	Open	To open a project file saved in the local disk.	
	Save	To overwrite and save an edited project to a file.	
	Save As	To save an edited project under a new file name.	
	Import	Project File	To import a setting of a project file saved in the local disk by selecting a setting item.
	Recently used Project file	To select and open a project file which was recently used in MES Interface Function Configuration Tool.	
	Exit	To exit MES Interface Function Configuration Tool.	
Edit	Add Item	To add an item to a setting selected in the edit item tree. The index of the item to be added is the smallest number of each item.	
	Delete Item	To delete an item selected in the edit item tree.	
	Add CopyItem	To copy and add an item selected in the edit item tree. The index of the item to be added is the smallest number of each item.	
	Update Data Related to Global Label	To update data to the latest value when a value of an import source global label is changed.	
View	Toolbar	To select whether to display the toolbar.	
	Status bar	To select whether to display the status bar.	
Online	Specify Connection Destination	To set the settings for connecting to an MES interface module.	
	Read from MES Interface Module	To read a setting from an MES interface module.	
	Write to MES Interface Module	To write a setting to an MES interface module.	
	Verify with MES Interface Module	To compare a setting written to an MES interface module with one in MES Interface Function Configuration Tool.	
	Update setting of MES Interface Module	To apply a written setting to an MES interface module.	
	Diagnose MES Interface Module	To connect to an MES interface module and perform the module diagnostics and various operations.	
	Manage MES Interface Module	To display information on an MES interface module and perform operations to displayed information.	
	One-shot Execution	To execute the one-shot to a selected job after the message "Executes the one-shot. Do you really want to continue?" appears. An execution result is notified in the detailed log display regardless of the verification setting.	
	Communication Test to Target Device	To perform a communication test for a selected access target device.	
	Communication Test to Target Server	To perform a communication test for a selected access target server.	
Help	MELSEC IQ-R MES Interface Module Help	To open the user's manual of an MES interface module.	
	Connection to MITSUBISHI ELECTRIC FA Global Website	To display MITSUBISHI ELECTRIC FA Global Website.	
	Version Information	To display the version information (product information) of MES Interface Function Configuration Tool.	


■ Toolbar configuration

The following table lists the commands assigned to the toolbar.

Character string for the tooltip display	Items displayed on the status bar	Description
New (Ctrl+N)	Creates new project.	To discard a project being edited and create a new project.
Open (Ctrl+O)	Opens existing project.	To open a saved project file.
Save (Ctrl+S)	Overwrites and saves the project.	To overwrite and save an edited project to a file.
Add Item (Ctrl+Ins)	Adds the setting item.	To add a setting item of a type selected in the edit item tree.
Delete Item (Ctrl+Del)	Deletes the setting item.	To delete a setting item selected in the edit item tree.
Write to MES Interface Module	Writes the settings to MES interface module.	To write a setting to an MES interface module.
Read from MES Interface Module	Reads the settings from MES interface module.	To read a setting from an MES interface module.
Diagnose MES Interface Module	Displays the diagnostic screen.	To connect to an MES interface module and perform the diagnostics and various operations.
Restart the MES Interface Function	The MES interface function is restarted.	To connect to an MES interface module and restart the stopped MES interface function.
Stop the MES Interface Function	The MES interface function is stopped.	To connect to an MES interface module and stop the operating MES interface function.
One-Shot Execution	Performs the one-shot execution.	To execute the one-shot of a job.
Open MELSEC iQ-R MES Interface Module Help	Opens MELSEC iQ-R MES interface module help.	To open the user's manual of an MES interface module.

Operations in the edit item tree

The edit item tree shows overall project settings in a tree.

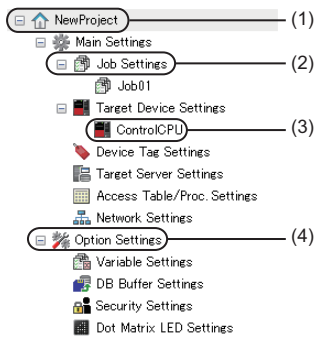


- (1) Project root
- (2) Setting category
- (3) Item
- (4) Setting group

■Selecting an item

1. The items are displayed by double-clicking the project root or each setting category.
2. The editing screen of the selected item is displayed on the detailed setting editing screen by selecting the displayed item.


■Adding an item

1. The item is added by selecting the item to be added or the setting category, and performing any of the following operations.
 - Click Add Item ()
 - Select [Edit] ⇒ [Add Item]
2. When the item is added successfully, the added item is selected automatically and the screen is switched to the editing screen of the added item.

Point

Refer to the description of each item since the number of items which can be added is limited depending on the setting type.

■Deleting an item

1. The item is deleted by selecting the item to be deleted and performing any of the following operations.
 - Click Delete Item ()
 - Select [Edit] ⇒ [Delete Item]

Point

- The item cannot be deleted if the selected item is being used in other item.
Check where the item is being used and stop using it in other item according to the displayed error dialog box before deleting.
- The first item (default name: ControlCPU) on the list in the "Target Device Settings" cannot be deleted.

■ Copying and adding an item

1. Select an item to be added and select [Edit] ⇒ [Add copyItem] to copy and add the item.
2. When the item is added successfully, the added item is selected automatically and the screen is switched to the editing screen of the added item.

Point

Refer to the description of each item since the number of items which can be added is limited depending on the setting type.

■ Moving an item

1. The item is moved by dragging and dropping.

Point

- The item can be moved only within each setting: "Job Settings", "Target Device Settings", "Device Tag Settings", "Target Server Settings", and "Access Table/Procedure Settings".
 - The first item (default name: ControlCPU) on the list in the "Target Device Settings" cannot be deleted.
-

Common operation

The following shows the common operations of MES Interface Function Configuration Tool.


■Data setting in the data selection control tree

Perform a simple assignment for the single item such as device tag, variable, and constant.

Operating procedure

1. Click the cell to enter the data.

(Example) "DB Communication Action Setting" screen

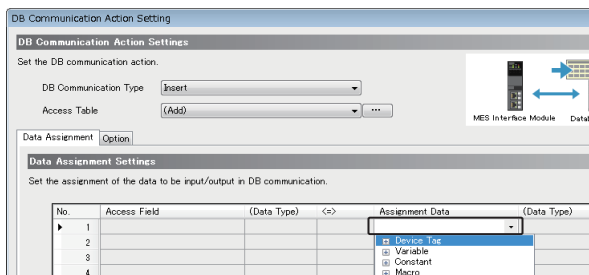

2. Select the data to be set.

Item			Description
Device Tag	(Device tag name)	(Device tag component name)	Set the selected device tag component.
		[Edit]	To open the "Device Tag Settings" screen of a selected device tag.
	[Add]		To open a new "Device Tag Settings" screen.
Variable	Local Variable	(Local variable name)	Set the selected local variable.
		[Edit]	To open the "Variable Settings" screen.
	Global Variable	(Global variable name)	Set the selected global variable.
		[Edit]	To open the "Variable Settings" screen.
System Variable	(System variable name)	Set the selected system variable.	
Constant	[Integer]		To open the "Integer Type Constant Settings" screen.
	[Real Number]		To open the "Real Number Type Constant Settings" screen.
	[Character String (Unicode)]		To open the "Character String Type Constant Settings" screen.
Macro	Time at Trigger Monitoring		Set the selected macro.
	Time at Trigger ON		
	Job Execution Start Date and Time		
	Server Date and Time		
	Failure Action No.		
	[Date and Time Character String]		To open the "Date and Time Character String Macro Settings" screen.

- Constant/Macro Settings

Set the constant/macro to be used as a data.

Operating procedure

1. Click "[Integer]", "[Real Number]", "[Character String (Unicode)]", or "[Date and Time Character String]" in the data selection control tree to enter a setting value.
2. Click the [OK] button.

Parameter settings

The mode setting, module operations forced change setting, target device response monitoring time setting and module READY signal delay time setting of MES interface module are set in the parameter setting of the engineering tool.

For details on the parameter setting, refer to the following:

📖 MELSEC iQ-R MES Interface Module User's Manual (Application)

Point

- CW Configurator does not support it.

Startup method

4

Operating procedure

1. Start an engineering tool.

🖱️ Select [MELSOFT] ⇒ [GX Works3]^{*2} ⇒ [GX Works3] from Windows Start^{*1}.

*1 Select [All apps] on the Start screen or [Start] ⇒ [All Programs]/[All apps].

*2 Does not appear in Windows 8 or later.


Parameter settings

Operating procedure


1. Create a new project.

🖱️ Select [Project] ⇒ [New] from the menu.

2. Select an item for each "Series", "Type", and "Program Language", and click the [OK] button.

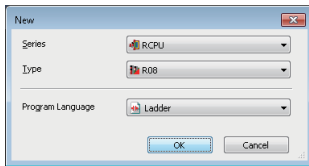

3. Set whether to use module labels and sample comments, and click the [OK] button.

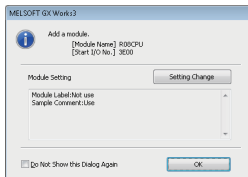


4. Display the "Add New Module" screen.

🖱️ Select "Parameter" on the Navigation window, right-click the "Module Information" and select [Add New Module].


5. Add an MES interface module.

- Select "Information Module" for "Module Type" and "RD81MES96N" or "RD81MES96" for "Module Name" in the "Add New Module" screen.

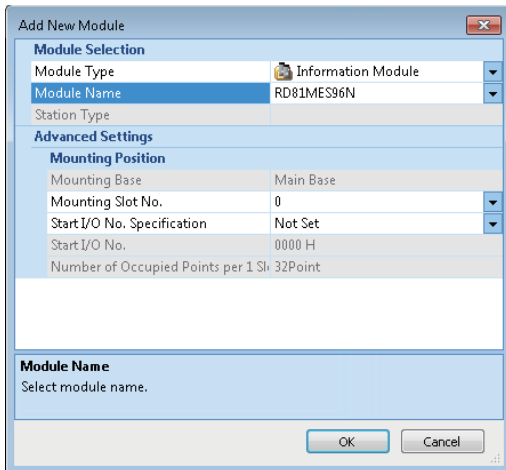

Item	Description
Module Type	Select the "Information Module".
Module Name	Select "RD81MES96N" or "RD81MES96".
Mounting Slot No.	Select the slot number where an MES interface module is mounted.
Start I/O No. Specification	Select "Not Set" when not specifying the start I/O No. of MES interface module, otherwise, select "Set".
Start I/O No.	When selecting "Set" in the "Start I/O No. specification", enter the start I/O No. of MES interface module.

6. Set whether to use module labels and sample comments, and click the [OK] button.

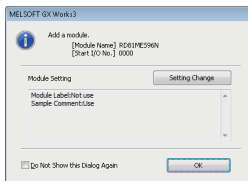

7. Set the module parameter of MES interface module.

- Select "Parameter" ⇒ "Module Information" ⇒ "(module name)" on the Navigation window.

8. Write the setting to the CPU module from the engineering tool after completing the parameter setting.

9. Reflect the setting by resetting or powering OFF → ON the CPU module.

4.3 SD Memory Card

This section shows an SD memory card to insert and use in an MES interface module.

Connectable SD memory cards (sold separately)

The following table shows the connectable SD memory cards.

For using an SD memory card, make sure to refer to the following: (Page 70 Considerations for using an SD memory card)


Model name	Description	Manufacturer
NZ1MEM-2GBSD	SD memory card 2 GB	MITSUBISHI ELECTRIC
NZ1MEM-4GBSD	SD memory card 4 GB	
NZ1MEM-8GBSD	SD memory card 8 GB	
NZ1MEM-16GBSD	SD memory card 16 GB	

Insertion/removal method of an SD memory card

Make sure to stop the file access when removing or replacing the SD memory card.


If the power is OFF and the file access is not stopped, turn the power ON and stop the file access.

Insertion procedure

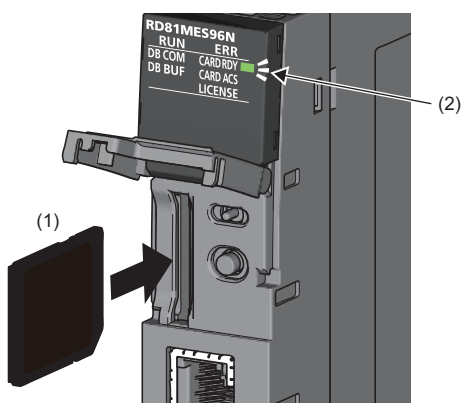

1. Insert an SD memory card (1) straight into the SD memory card slot with its cutout pointed down.
Make sure it is not uplifted after inserting it.
If it is inserted insufficiently, it may cause malfunction due to poor contact.
2. The CARD RDY LED (2) keeps flashing until the SD memory card is ready to be used. Once the CARD RDY LED (2) turns ON, the SD memory card can be used.

Removal procedure

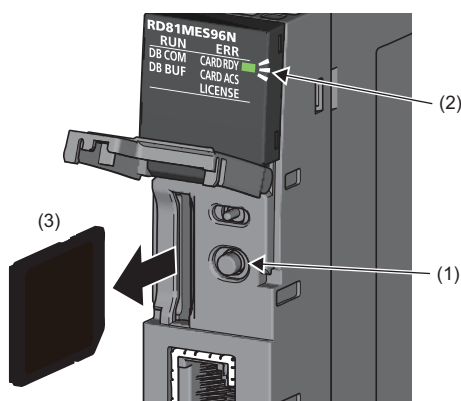

1. Press the SD memory card lock switch (1) for one second or longer to stop the SD memory card access.
2. The CARD RDY LED (2) is flashing while stopping the file access, and it turns OFF once the processing is completed.
3. Push the SD memory card (3) in once, and pull it out straight.

Considerations for using an SD memory card

- For inserting and removing an SD memory card while the power is ON, follow the procedure.
Failure to do so, the data in the SD memory card may be damaged.
- If any of the functions is accessing an SD memory card when removing the SD memory card, the CARD RDY LED will turn OFF after the function completes accessing.
Therefore, a time until the CARD RDY LED turns OFF may differ depending on a function.

SD memory card to be used

Use a connectable SD memory card. (👉 Page 69 Connectable SD memory cards (sold separately))

If other SD memory cards are used, the data may be corrupted in the SD memory card or the system may stop.

When using an SD memory card used for other uses, make sure to format the card with MES Interface Module Configuration Tool. (📖 MELSEC iQ-R MES Interface Module User's Manual (Application))

Formatting an SD memory card

Format the SD memory card with the SD memory card diagnostics on MES Interface Configuration Function Tool.

(📖 MELSEC iQ-R MES Interface Module User's Manual (Application))

Do not format an SD memory card with standard format commands of an operating system such as Windows.

Power-OFF or Reset of a CPU module

When the CPU module is powered OFF or reset while writing data to an SD memory card, the processing to write data to the SD memory card may not be completed. It may cause a loss of data during DB buffering, corruption of data in the SD memory card that is being accessed, or occurrence of a file system error. The file is automatically recovered when the MES interface module is powered ON again, but it will not succeed in some cases.

The operation, powering OFF or resetting the CPU module after stopping file access, should be considered. For the important data, create backups periodically.

Do not power OFF or reset the CPU module since an SD memory card can be formatted while stopping the file access.

Removing or replacing an SD memory card

Make sure to stop the file access before removing or replacing the SD memory card. (If the power is OFF and the file access is not stopped, turn the power ON and stop the file access.)

Otherwise, the data in the SD memory card being accessed may be corrupted or a file system failure may occur.

Check that the SD memory card is not being formatted since it can be formatted while stopping the file access.

The setting of MES interface module is saved in the SD memory card. Therefore, write the setting after replacing the SD memory card as necessary.

Files in an SD memory card

Do not edit a file or folder in an SD memory card directly by inserting the card in a personal computer.

Make sure to use an SD memory card by inserting in an MES interface module.

SD memory card life

An SD memory card has a life (a limit on the number of times for writing data). For details, refer to the specification of an SD memory card to use.

Generally, an SD memory card life depends on the free capacity. Set the DB buffering capacity, which should be set by a user, so that the SD memory card has a sufficient free capacity. (An SD memory card can be used for long time with enough capacity.)


5 SYSTEM CONFIGURATION

This chapter explains the system configuration of MES interface module.

5.1 System Configuration

Overall system configuration

The following figure shows the overall system configuration when using a MES interface module.

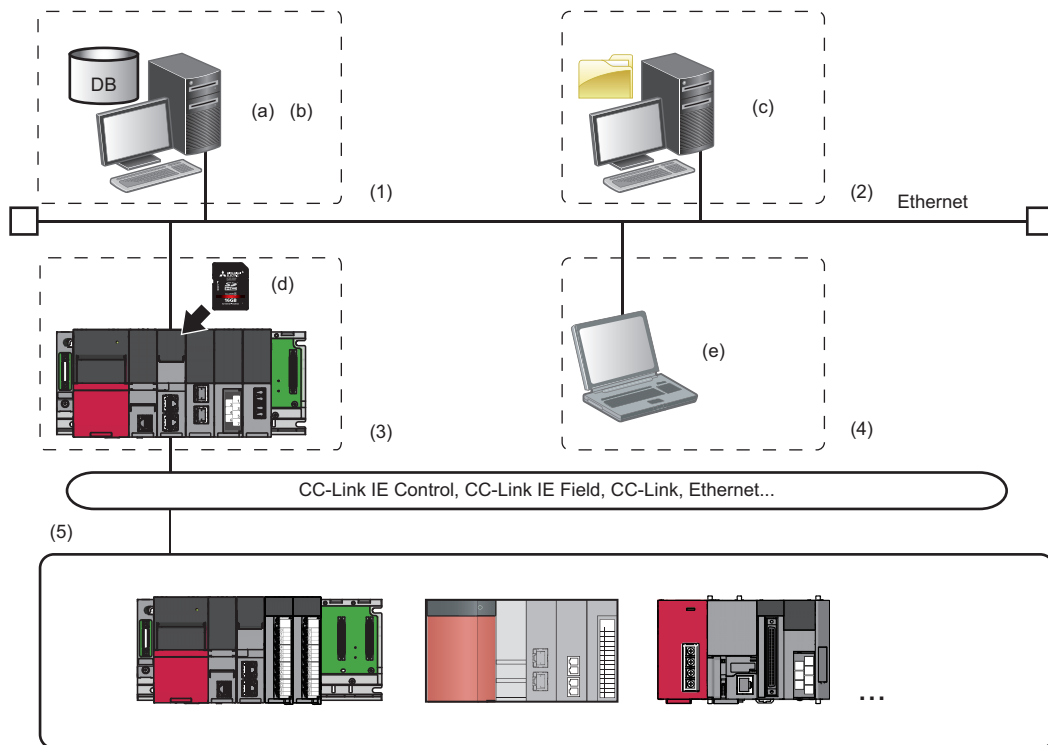


System configuration		Network		
(1)	Database server	(a)	<ul style="list-style-type: none"> • DB Connection Service^{*1} • DB Connection Service Setting Tool^{*1} 	Ethernet
		(b)	<ul style="list-style-type: none"> • Oracle • Microsoft SQL Server • Microsoft Access • MySQL • PostgreSQL 	Ethernet
(2)	Application server	(c)	<ul style="list-style-type: none"> • DB Connection Service • DB Connection Service Setting Tool 	Ethernet
(3)	MES interface module	(d)	SD memory card (required)	CC-Link IE Control, CC-Link IE Field, CC-Link, Ethernet etc.
(4)	Configuration personal computer	(e)	<ul style="list-style-type: none"> • MES Interface Function Configuration Tool^{*2} • Project File Conversion Tool 	Ethernet
(5)	Programmable controller			CC-Link IE Control, CC-Link IE Field, CC-Link, Ethernet etc.

*1 No need to install it when "Direct DB Connection" is selected as an access route.

*2 When connecting to an RD81MES96N, use MES Interface Function Configuration Tool stored in MX MESInterface-R the software version of which is '1.10L' or later.

Point 

-
- All devices and systems (such as a server, configuration personal computer, and target device) which are connectable via Ethernet can be connected to both Ethernet ports (CH1/CH2) of a MES interface module.
 - Ethernet ports (CH1/CH2) cannot be connected to a same network.
 - MES interface modules can be connected only by using LAN connection. Connection via the Internet is not available.
 - For available CPU modules and the number of mountable ones, refer to the following:

 MELSEC iQ-R Module Configuration Manual

Software configuration of MX MESInterface-R

The following table shows the software stored in MX MESInterface-R.


Item	Description	
MX MESInterface-R	MES Interface Function Configuration Tool	Software that runs in a configuration personal computer and is used to set various settings required for operating a MES interface module. In addition to the configuration, the following operations are performed. <ul style="list-style-type: none"> • Checking the operating status and working history of the MES interface function • Stopping/restarting the operation of the MES interface function • Creating settings of the MES interface function without modules
	Project File Conversion Tool	Software that runs in a configuration personal computer and converts a MELSEC-Q series MES Interface module project file to a MELSEC iQ-R series MES Interface module project file. This tool is automatically installed when MES Interface Function Configuration Tool is installed.
	DB Connection Service	Software that runs in a server and links a database with a MES interface module. (Required when linking with a database via ODBC of a personal computer with Windows.)
	DB Connection Service Setting Tool	Software that runs in a server and is used to change the operation of DB Connection Service.

System configuration when installing

The following shows the system configuration when installing each piece of software stored in MX MESInterface-R.

When installing MES Interface Function Configuration Tool


Install MES Interface Function Configuration Tool in a configuration personal computer.

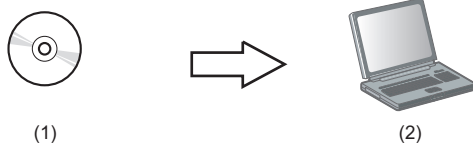

- (1) MX MESInterface-R: MES Interface Function Configuration Tool
 (2) Configuration personal computer: Commercially available product

When installing DB Connection Service and DB Connection Service Setting Tool

Install DB Connection Service and DB Connection Service Setting Tool in the server.

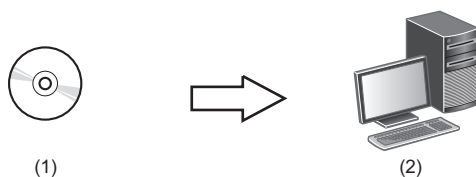

- (1) MX MESInterface-R: DB Connection Service/DB Connection Service Setting Tool
 (2) Server: Commercially available product

System configuration for the initial setting


The following shows the system configuration for the initial setting, maintenance, and inspection.

Direct connection



- (1) MES interface module
- (2) Ethernet (twisted pair cable)
- (3) Configuration personal computer

Connection via a hub

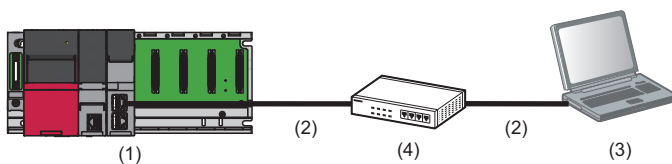

- (1) MES interface module
- (2) Ethernet (twisted pair cable)
- (3) Configuration personal computer
- (4) Hub

A MES interface module and a configuration personal computer can be connected directly or via a hub.

- For direct connection, the Ethernet port (CH1) of a MES interface module can directly be connected to a personal computer on a 1:1 basis with an Ethernet cable (twisted pair cable) without a hub. The IP address of a MES interface module does not need to be specified.
- For connection via a hub, the IP address of a MES interface module needs to be specified.

Point


- For initial setting, only Ethernet port (CH1) can be used.
For using the Ethernet port (CH2), set the network in the "Network Settings" in MES Interface Function Configuration Tool. (MELSEC iQ-R MES Interface Module User's Manual (Application))

Network setting for connection


The following shows the network setting for a configuration personal computer when connecting the computer to an MES interface module via a hub.

Operating procedure

1. Set the network setting for a configuration personal computer to the same network address as MES interface module.

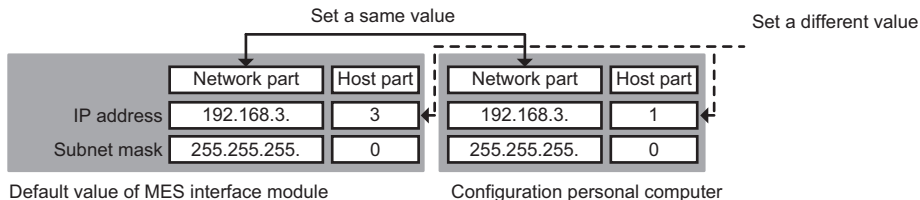

2. Set the network setting for the configuration personal computer on the "Internet Protocol Version 4 (TCP/IPv4) Properties" screen.

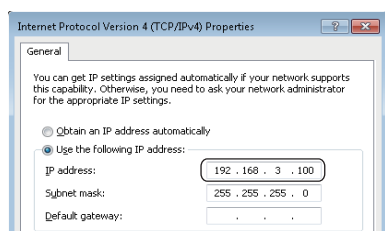

Considerations for direct connection

■When connecting with LAN

Do not communicate by connecting to LAN line directly.

This may increase the line load and affect the communications of other devices.

■When connecting via a hub

Do not set the direct connection while MES interface module and the configuration personal computer are connected via a hub.

■When applying to the condition where communication cannot be performed

The direct connection may not be performed in the following situations.

If it cannot connect, review the settings of MES interface module and the configuration personal computer.

- When all the bits of the MES interface module IP address corresponding to the '0' parts of the configuration personal computer subnet mask are ON or OFF
 - MES interface module IP address: 64.64.255.255
 - Configuration personal computer IP address: 64.64.1.1
 - Subnet mask on the configuration personal computer side: 255.255.0.0
- When all the bits of the MES interface module IP address corresponding to the host address of each class for the configuration personal computer IP address are ON or OFF
 - MES interface module IP address: 64.64.255.255
 - Configuration personal computer IP address: 192.168.0.1
 - Subnet mask on the configuration personal computer side: 255.0.0.0



- The IP addresses of each class are as follows:
Class A: 0.x.x.x to 127.x.x.x, Class B: 128.x.x.x to 191.x.x.x, Class C: 192.x.x.x to 223.x.x.x
- Host addresses of each class are the '0' parts below.
Class A: 255.0.0.0, Class B: 255.255.0.0, Class C: 255.255.255.0

■When the Windows firewall setting is enabled

Disable the Windows firewall setting.

■When multiple IP addresses are enabled at the same time

The setting for direct connection cannot be set in the configurations where multiple IP addresses are enabled at the same time as shown below.

- When an IP address is assigned to each Ethernet port of the configuration personal computer with multiple Ethernet ports
- When a wireless LAN setting is enabled in addition to Ethernet port of the configuration personal computer
- When multiple IP addresses are assigned to one network device (Ethernet port) of the configuration personal computer

5.2 Operating Environment

Configuration personal computer

The following table shows the operating environment of MES Interface Function Configuration Tool and Project File Conversion Tool.

Item	Description
Personal computer	A personal computer on which Microsoft® Windows® operates
CPU	Intel® Core™ 2 Duo 2 GHz or more recommended
Memory requirements	64-bit OS: 2 GB or more recommended 32-bit OS: 1 GB or more recommended
Display	Resolution 1024 × 768 pixels or higher
Free hard disk space	512 MB or more
Disk drive	DVD-ROM disk drive
Communication Interface	Ethernet (IPv4) 1000BASE-T/100BASE-TX/10BASE-T
Operating system (English version) (32-bit version and 64-bit version are supported.)	Windows 10 (Home, Pro, Enterprise, Education) Windows 8.1, Windows 8.1 (Pro, Enterprise) Windows 8, Windows 8 (Pro, Enterprise) Windows 7 (Home Premium, Professional, Ultimate, Enterprise)

Server (Database server/Application server)

The following table shows the operating environment of DB Connection Service and DB Connection Service Setting Tool.

Item	Description
Personal computer	A personal computer on which Microsoft Windows operates
CPU	Intel Core2 Duo Processor 2 GHz or more recommended
Memory requirements	Recommended 2GB or more
Display	Resolution 1024 × 768 pixels or higher
Free hard disk space	512 MB or more
Disk drive	DVD-ROM disk drive
Communication Interface	Ethernet (IPv4) 1000BASE-T/100BASE-TX/10BASE-T
Operating system (English version) (Only 64-bit version is supported.)	Windows Server® 2019 (Standard) Windows Server 2016 (Standard) Windows 10 (Pro, Enterprise) Windows 8.1 (Pro, Enterprise) Windows Server 2012 R2 (Standard) Windows 8 (Pro, Enterprise) Windows Server 2012 (Standard) Windows 7 (Professional, Ultimate, Enterprise) Windows Server 2008 R2 (Standard)

For accessible databases, refer to the following:

 Page 40 Access Specifications for a Database

5.3 Considerations for System Configuration

Considerations for using operating systems

■ User authority

For using MX MESInterface-R, logging on to the personal computer as a user with the administrator authority is recommended.

- Installation and uninstallation are available only for a user logging on with the administrator authority.
- When using a configuration personal computer, MX MESInterface-R can be used by a standard user or a user with the administrator authority.
- When using a server, MX MESInterface-R can be used only by a user with the administrator authority.

■ Functions that cannot be used

When the following functions are used, this product may not run properly.

- Application start-up in Windows compatibility mode
- Fast user switching
- Remote desktop
- Power save mode (standby, hibernate, sleep)
- Windows XP Mode
- Windows Touch or Touch
- Modern UI
- Client Hyper-V
- Server Core installation (when using a server)
- Virtual environment (VMware®, Windows Virtual PC)
- Tablet mode
- Virtual desktop

In the following cases, the screen of this product may not work properly.

- The size of the text and/or other items on the screen are other than default (such as 96 DPI, 100%, and 9 pt).
- The resolution of the screen is changed in operation.
- Windows theme is changed in operation.
- The multi-display is set.

■ .NET Framework

- If .NET Framework 4.0 and redistributable package of Visual C++ 2010 SP1 (x86) are not installed on the personal computer on which MES Interface Function Configuration Tool is to be installed, the free space of the approximately 500 MB is required in the system drive to install them.
- For Windows 10, if .NET Framework 4.6 Advanced Services is invalid, it needs to be valid.
- For Windows 8 and Windows 8.1, if .NET Framework 4.5 Advanced Services is invalid, it needs to be valid.

■ Others

- When the Windows firewall setting is enabled, the module search function and the direct connection function may not operate properly. Disable the Windows firewall setting.

Considerations for using databases

■Restrictions for using databases

- For using a relational database, a license according to the number of MES interface modules is usually required. (Varies depending on the relational database type and license format.)
For details, consult the relational database vendor.
- The redundant relational database cannot be used.

■When using SQL Server

- Set "SQL Server and Windows Authentication Mode" for the server authentication.
- 🔗 Right-click the server to be used in the object explorer of SQL Server Management Studio ⇒ [Properties]. Select "SQL Server and Windows Authentication Mode" for the "Server authentication" in the "Security" on the "Server Properties" screen, then restart the SQL Server.
- An output argument, an input/output argument, and a return value of the stored procedure that returns a result set cannot be acquired.
- When installing a software version '1.01B' or earlier of MX MESInterface-R, set the collation sequence of SQL Server to the default (SQL_Latin1_General_CP1_CI_AS).
This is not applied when installing a software version '1.02C' or later of MX MESInterface-R.
- When MX MESInterface-R whose software version is "1.03D" or earlier is installed, use SQL Server with any of the following condition:
 - The owner of the database file created with SQL Server is an SQL Server authenticated user.
 - The server administrator authentication (sysadmin) is not added to the server role of the user whose field information is to be referenced.However, this restriction is not applicable when MX MESInterface-R whose software version is "1.04E" or later is installed.

■When using Access

- Using in the following environments is not recommended.
 - Where under overload
 - Where high reliability, such as non-stop operation for 24 hours, is requiredFor details, refer to the website of Microsoft.
blogs.technet.microsoft.com/officesupportjp/2017/02/08/ace_memory
- The number of fields that can be updated in one communication action is up to 127.
- Multiple accesses cannot be made to one file.
(The access from multiple MES interface modules cannot be made.)

■When using MySQL

- It is an open source database. For the software versions in which the operation has been checked, refer to the following section.
(🔗 Page 40 Accessible databases and supported software)

■When using PostgreSQL

- It is an open source database. For the software versions in which the operation has been checked, refer to the following section.
(🔗 Page 40 Accessible databases and supported software)

■When handling "(Blank)" DB fields

- For the considerations when handling a DB field for which "(Blank)" was set, refer to the following manual.

📖 MELSEC iQ-R MES Interface Module User's Manual (Application)

5.4 Supported Software Packages

This section shows the software packages supported by each MES interface module.

MES interface module	Software package		Software version
RD81MES96N	GX Works3		'1.060N' or later
	MX MESInterface-R	MES Interface Function Configuration Tool	'1.10L' or later
		DB Connection Service and DB Connection Service Setting Tool	'1.00A' or later
RD81MES96	GX Works3		'1.020W' or later
	MX MESInterface-R	MES Interface Function Configuration Tool	'1.00A' or later
		DB Connection Service and DB Connection Service Setting Tool	'1.00A' or later

6 WIRING

6.1 Ethernet Cable

This section shows the specifications of connectable Ethernet cables when connecting the Ethernet port (CH1/CH2) to peripheral devices.

Connectable twisted pair cables (sold separately)

The twisted pair cable compliant with IEEE802.3 1000BASE-T/100BASE-TX/10BASE-T standards can be used.

Transmission rate	Unshielded twisted pair cable (UTP cable) Shielded twisted pair cable (STP cable)	
	Straight cable	Crossing cable
1000 Mbps	Category 5e or higher	Category 5e
100 Mbps	Category 5 or higher	Category 5 or 5e
10 Mbps	Category 3 or higher	Category 3 to 5e

Considerations for 1000BASE-T/100BASE-TX connection

In a high-speed communication (100 Mbps/1000 Mbps) with 1000BASE-T/100BASE-TX connection, a communication error may occur due to the high frequency noise generated from a device other than MES interface module system depending on the installation environment.

The following shows the measures to be taken on MES interface module side to prevent the influence of high frequency noise when configuring a network system.

- Do not bundle a cable with the main circuit or power cable, or do not place it near those lines.
- Place a cable in a duct.
- In the environment where a cable is susceptible to noise, use the STP cable.
- Change the target device connected with MES interface module to one which communicates at 10 Mbps, and decrease the data transmission rate.

Wiring of an Ethernet cable

The following shows the connecting and disconnecting methods of an Ethernet cable to MES interface module.

Connecting procedure

1. Check the insertion direction, and insert an Ethernet cable into the Ethernet port on MES interface module until it clicks.
2. Check if the cable securely is connected by pulling it slightly.
3. Check if the SPEED LED lighting status of the Ethernet port connected with the Ethernet cable. (☞ Page 16 PART NAMES)

Point

- The time required from when an Ethernet cable is connected to when the SPEED LED turns ON may vary. Normally, the LED turns ON in a few seconds. However, it may take longer because the linking-up processing is repeated due to the device condition on the line.
- When the SPEED LED does not turn ON, check if the connected Ethernet cable has any failure.
- The SPEED LED is turned OFF when connecting with an Ethernet device on the network of which the transmission rate is 10 Mbps. Check the communication state by executing the PING test etc.

Disconnecting procedure

1. Pull out the Ethernet cable while pinching a clip on the connector.

Wiring considerations

- To establish a reliable system and fully use the functions of MES interface module, a wiring that does not easily receive the effects of noise is required.
- Sufficient safety measures must be taken when constructing the IEEE802.3 1000BASE-T/100BASE-TX/10BASE-T networks.
Consult a specialist when handling the terminal processing of connection cable, installing trunk cables, etc.
- Use the cables compliant with IEEE802.3 1000BASE-T/100BASE-TX/10BASE-T standards. (☞ Page 82 Connectable twisted pair cables (sold separately))
- For the connection on the target device side, check the specifications of the target device in advance.
- Place an Ethernet cable in a duct or clamp it.
Otherwise, the dangling cable may swing or inadvertently be pulled. It may cause a module or an Ethernet cable to damage or malfunction due to the poor contact.
- Protect the core wire in the connector of Ethernet cable or the port of MES interface module to prevent touching by hand and sticking dirt or dust.
If any oil from your hand, dirt or dust sticks the core wire, it may increase the transmission loss and fail a data link.
- Check if the Ethernet cable used is disconnected, a short-circuit is generated, and the connector is properly connected.
- Do not use an Ethernet cable with broken clips.
Doing so may cause the cable to unplug or malfunction.
- Hold the connector on the Ethernet cable when connecting or disconnecting it.
If the cable is pulled while being connected to MES interface module, it may cause the module or Ethernet cable to damage or malfunction due to the poor contact.
- Attach the provided connector cover to protect the unused Ethernet port from dirt and dust.
- The maximum segment length of Ethernet cable is 100 m. However, the length may be shorter depending on the use environment of the cable. For details, contact the manufacturer of the cable used.
- The bend radius of the Ethernet cable is limited. For details, check the specifications of the Ethernet cable used.

7 INSTALLATION AND UNINSTALLATION

This chapter shows the methods for installing and uninstalling each piece of execution software of MX MESInterface-R. For the software that can be installed, refer to the following:

☞ Page 74 Software configuration of MX MESInterface-R

Considerations for installation and uninstallation


- Log on to a personal computer as a user with an administrator authority.
- Before the installation, end all running applications on the operating system.
If software is installed while other applications are running, the product may not run normally.
- Install software after changing the settings to prevent starting an update program automatically.
The installer may not operate normally because the update program of the operating system or other software, such as Windows Update or Java® update, may automatically start.
- After completing the installation, the computer may need to be restarted.
If the restart message appears, restart the computer before using it.

■For installing MES Interface Function Configuration Tool


Use MX MESInterface-R the software version of which is '1.10L' or later when using an RD81MES96N.

■For installing DB Connection Service Setting Tool

- Use DB Connection Service Setting Tool the version of which is 1.14Q or later to connect to a MELSEC iQ-R series MES interface module.
The version can be checked by selecting [Help] ⇒ [Product information].

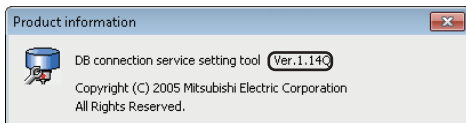

- If the following message appears, install DB Connection Service Setting Tool after executing 'SETUP.EXE' in the 'EnvMEL' folder in the DVD-ROM included in MX MESInterface-R.
If the "Program Compatibility Assistant" screen appears after completing the installation, select "This program installed correctly".

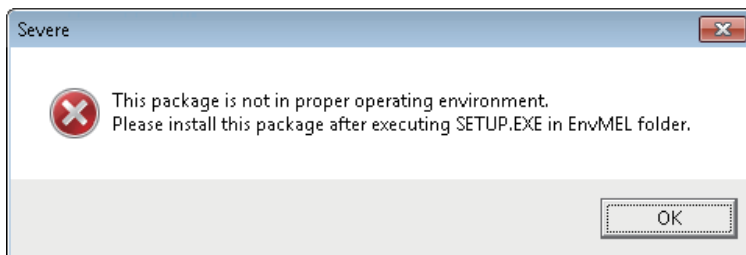

7.1 Installation Procedure


MX MESInterface-R

The following shows the installation procedure of MES Interface Function Configuration Tool, DB Connection Service and DB Connection Service Setting Tool.

Project File Conversion Tool is automatically installed when MES Interface Function Configuration Tool is installed.

Operating procedure

1. Start the installer.
Double-click 'Setup.exe' in the DVD-ROM included in MX MESInterface-R.
2. Select the software to be installed, and click the [Install] button.

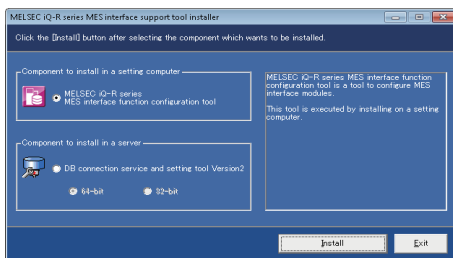

- When using Access for a database, select "32-bit".
 - When selecting "64-bit", configure the ODBC setting which is supported by a 64-bit version DB connection service. (Page 57 ODBC setting for database)
3. Enter or select the necessary information according to the instructions shown on the screen.

■Windows firewall setting


Perform any of the following operations when the firewall function of the operating system and the security software are enabled.

1. Set the following programs to the firewall exception.

For the setting methods, refer to the manuals and online help of the operating system or security software used.

Program	Execution file storage destination (operating system is a 64-bit version)
MES Interface Function Configuration Tool ^{*1}	• C:\Program Files(x86)\MELSOFT\MESIF\RMESIF\RMIFConfigTool.exe
DB Connection Service Setting Tool ^{*1}	• C:\Program Files\MELSOFT\MESIF\DBCnctConf2_64.exe or C:\Program Files(x86)\MELSOFT\MESIF\DBCnctConf2_32.exe • C:\MELSEC\MESIF\DBCnctConf.exe ^{*2}
DB Connection Service ^{*1}	• C:\Program Files\MELSOFT\MESIF\DBConnector2_64.exe or C:\Program Files(x86)\MELSOFT\MESIF\DBConnector2_32.exe • C:\MELSEC\MESIF\DBConnector.exe ^{*2}
	• C:\Program Files\MELSOFT\MESIF\DBCnctClient2_64.exe or C:\Program Files(x86)\MELSOFT\MESIF\DBCnctClient2_32.exe • C:\MELSEC\MESIF\DBCnctClient.exe ^{*2}


*1 This setting is not required when the [Yes] button is selected on the screen below.

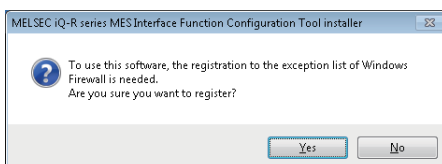

*2 For MX MESInterface-R whose software version is "1.03D" or earlier is installed

2. Disable the firewall function.

■ Setting to associate the extension (.mu2) of project file and program

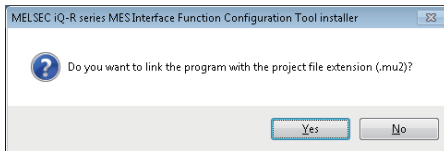

When the [No] button is selected on the screen above, MES Interface Function Configuration Tool does not open by double-clicking the project file with the extension (.mu2). Perform the following operation to open the project file.

Operating procedure

- Select [Project] ⇒ [Open] on the menu in MES Interface Function Configuration Tool
In another way, refer to the online help of the operating system and associate with a program.

Environment after installation

Each piece of software is installed to a specified folder and registered in the start menu.

The following table shows the startup method and the maximum number of software, which can start at the same time, for each piece of software after installing.

Software	Startup method	Maximum No.
MES Interface Function Configuration Tool	Click [MELSOFT] ⇒ [MESInterface] ^{*2} ⇒ [(each piece of software)] from Windows Start ^{*1} .	5
DB Connection Service Setting Tool (64-bit)		1
DB Connection Service Setting Tool (32-bit)		1
Project File Conversion Tool	Click 'RMESIFCONVMUPToMU2.exe' under the execution file storage destination ^{*3} of the MES Interface Function Configuration Tool.	No limit

*1 Select [All apps] on the Start screen or [Start] ⇒ [All Programs]/[All apps].

*2 Does not appear in Windows 8 or later.

*3 For 64-bit version operating system, it is installed in the following folder:
C:\Program Files(x86)\MELSOFT\RMESIF

7.2 Uninstallation Procedure

Uninstall from the control panel in Windows.

Project File Conversion Tool is automatically uninstalled when MES Interface Function Configuration Tool is uninstalled.

Disable the Windows firewall if it has been set manually.

For the method to disable the Windows firewall, refer to the manuals and online help of the operating system and the security software used.

Environment after uninstallation

The installed program files, folders, and start menu are deleted after uninstallation.

If a file, which is output after installation such as DB access log, exists in a folder, the file/folder will not be deleted.

8 OPERATION EXAMPLE

This chapter shows the operation example of simple data collection in a system configuration including an MES interface module.

8.1 Overview

The following shows the operation example based on a metal parts manufacturing line automated by a programmable controller system.


Process

Each process of the metal parts manufacturing line is shown below.

Process	Description
Machining	To machine metal materials and manufacture finished parts.
Imprint	To imprint a lot ID code and a specific serial number on each manufactured part.
Inspection	To measure the weight of each completed part.

Operation

The following shows the operation between the control system and the production control database.

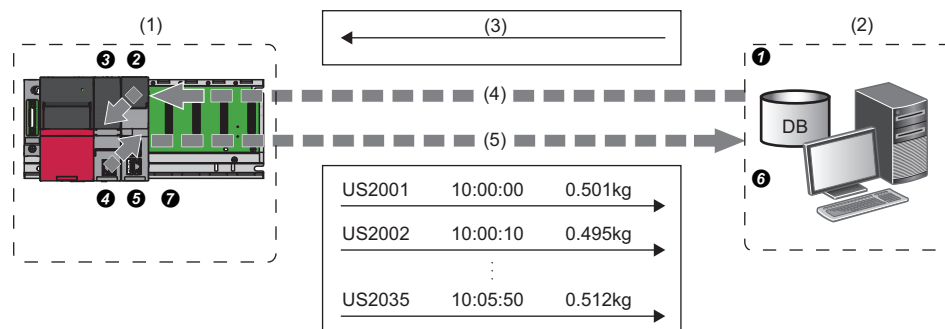

(1) Control system (CPU module, MES interface module)

(2) Production control database

(3) Target manufacturing number 35 units, lot ID code (US)

(4) Acquisition of manufacturing schedule information

(5) Delivering the actual manufacturing information

1. Acquire the manufacturing schedule information.

① Database → ② MES interface module → ③ CPU module

- MES interface module acquires the target manufacturing number and lot ID codes from the table of the production control database before starting the manufacture.
- The parts are manufactured according to the target manufacturing number.
The lot ID code is imprinted in front of the serial number on each part.

2. Deliver the actual manufacturing information.

④ CPU module → ⑤ MES interface module → ⑥ Database

- When each part is moved into the inspection process, the actual data, such as serial numbers, manufacturing time and part weight, are collected by MES interface module and transferred to the production control database.

3. Change the data to use easily.


⑦ Scaling with MES interface module

- The inspection scale notifies the control system of the part weight measured by a positive decimal number in a gram.
The production report from the database information needs to be read in a kilogram.
Therefore, the weight data is converted to g→kg format with MES interface module to prevent control logic changes and extra processing at the database-level.

8.2 Setup

System configuration

This section shows the setting for configuring a sample system including the following devices and software.

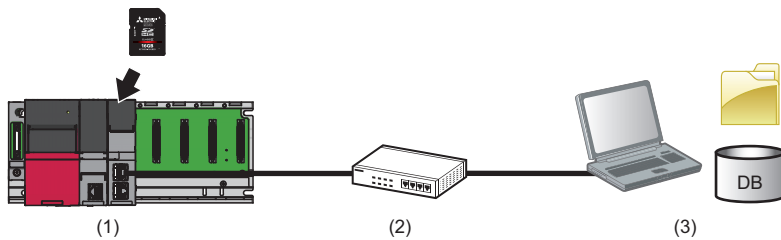

Device/Software		Product name/description	Reference	
(1)	Programmable controller system	Main base unit	R35B	MELSEC iQ-R Module Configuration Manual
		Power supply module	R61P	
		CPU module	R08CPU	Page 26 Accessible CPU modules
		MES interface module	RD81MES96	—
		SD memory card	NZ1MEM-nGBSD ('n' indicates a number of bytes.)	Page 69 Connectable SD memory cards (sold separately)
(2)	Twisted pair cable and hub	A cable and a hub compliant with IEEE802.3 1000BASE-T/100BASE-TX/10BASE-T standards	Page 82 Connectable twisted pair cables (sold separately)	
(3)	Personal computer (shared in a server and configuration personal computer)		A personal computer on which Windows operates	Page 78 Operating Environment
	Operating system		Microsoft Windows 7 Professional Operating System (64-bit version)	
	Relational database		Microsoft Access 2010 (32-bit version)	
	Engineering tool	GX Works3	SWnDND-GXW3 ('n' indicates its version.)	GX Works3 Installation Instructions GX Works3 Operating Manual
	MX MESInterface-R Configuration software	MES Interface Function Configuration Tool	SW1DND-RMESIF-E	Page 74 Software configuration of MX MESInterface-R Page 84 INSTALLATION AND UNINSTALLATION
DB Connection Service				
DB Connection Service Setting Tool				

- The IP address of an MES interface module is '192.168.3.3'.
- The IP address of a personal computer is '192.168.3.100'.

Point

To set a setting of an CPU module, connect a personal computer and the CPU module with a USB cable.

Device setup


This section shows the setup procedures of devices.

Personal computer setting

Operating procedure

1. Install each piece of software (relational database/engineering tool/MX MESInterface-R).
2. Set the IP address of a personal computer to '192.168.3.100'.

This setting can be set on the "Internet Protocol Version 4 (TCP/IPv4) Properties" screen.

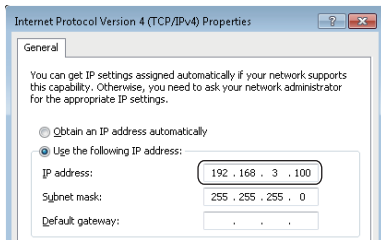

Programmable controller system setting

Operating procedure

1. Mount a power supply module, CPU module, and MES interface module on a main base unit.

📖 MELSEC iQ-R Module Configuration Manual

2. Insert an SD memory card into the MES interface module.

📖 Page 69 Insertion/removal method of an SD memory card

3. Set parameters and write them to the CPU module in the engineering tool.

📖 Page 67 Parameter settings

Point

For details on the parameter setting and programming in the engineering tool, refer to the following:

📖 GX Works3 Operating Manual

Creating a sample program


When setting parameters in the engineering tool, create a program for simulation and write it to a CPU module.

Devices used in the sample program

Device name	Device	Description
Special relay	SM400	Always ON signal
	SM402	Manufacturing code acquisition trigger
Data register	D0	Cumulative manufacturing number
	D2	Serial number (numeric value): binary
	D10	Random number
	D11	Random number division result
	D12	Random number remainder
	D100	Manufacturing code ID for products
	D200	Manufacturing instruction number
	D202	Product code
	D300	Serial number
	D400	Product weight (g)
Low-speed timer	T0	Manufacturing execution cyclic signal
Internal relay	M0	Manufacturing execution trigger

Sample program example

The following program is for simulating the metal parts manufacturing line.

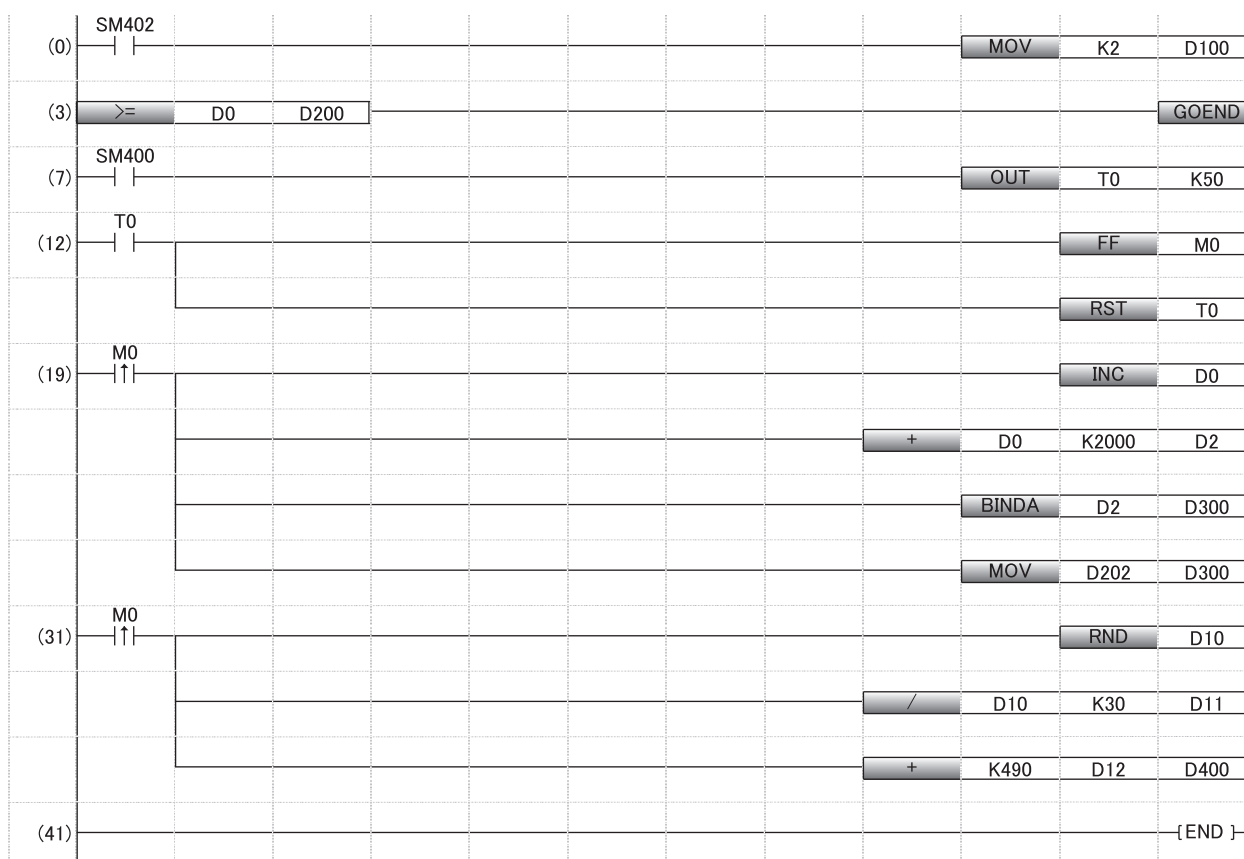


- (0) Manufacturing code setting
- (3) Operation stop when reaching to the manufacturing instruction number
- (7) to (12) 10 seconds cyclic signal generation
- (19) Serial number generation
- (31) Weight measurement (emulation)

8.3 Creating a Database Table


Before setting the ODBC setting and MES interface function setting, create two types of database table in Access 2010.

Database table creation procedure


Creating a [OrderTable] table

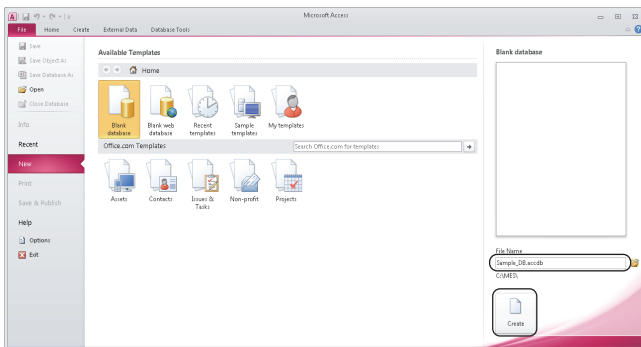


1. Start [Microsoft Access 2010] from Windows Start.
2. Select "New" on the [File] tab and enter 'Sample_DB.accdb' in the "File Name", then click the [Create] button.
In the operation example, the save location is 'C:\MES\'.

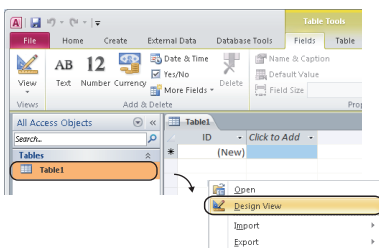

3. Right-click "Table 1" in the [Tables] and select [Design View] from the shortcut menu.




4. Enter 'OrderTable' in the "Table Name" and click the [OK] button.

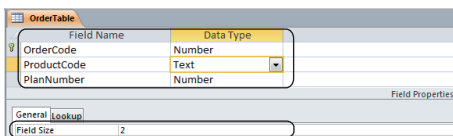


5. Set each setting item on the [OrderTable] tab and the [General] tab according to the following table.

Field Name	Data Type	Field Size
OrderCode	Number	Integer
ProductCode	Text	2
PlanNumber	Number	Integer

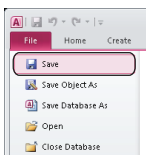

6. Select "Save" on the [File] tab.

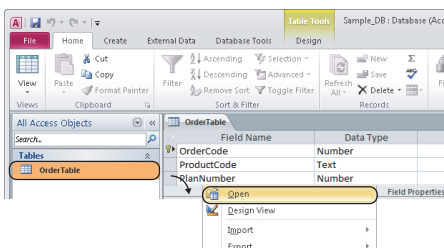


7. Right-click "OrderTable" in the [Tables] and select [Open] from the shortcut menu.

OrderCode	ProductCode	PlanNumber
1	EN	20
2	US	35
3	CN	25


8. Set each setting item on the [OrderTable] tab according to the following table.

OrderCode	ProductCode	PlanNumber
1	EN	20
2	US	35
3	CN	25


Creating a [History] table

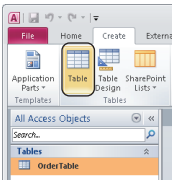


1. Click "Table" on the [Create] tab.

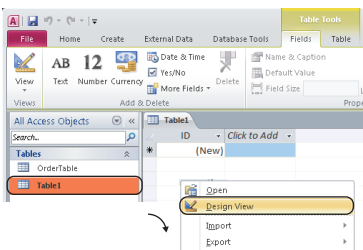

2. Right-click "Table 1" in the [Tables] and select [Design View] from the shortcut menu.




3. Enter 'History' in the "Table Name" and click the [OK] button.

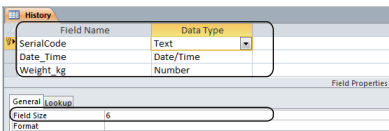

4. Set each setting item on the [History] tab and the [General] tab according to the following table.

Field Name	Data Type	Field Size
SerialCode	Text	6
Date_Time	Date/Time	—
Weight_kg	Number	Single


5. Select "Save" on the [File] tab and end the database table setting.

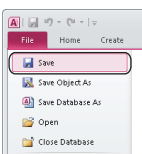

8.4 ODBC Setting

Set the ODBC setting before setting parameters with MES Interface Function Configuration Tool.


ODBC setting procedure

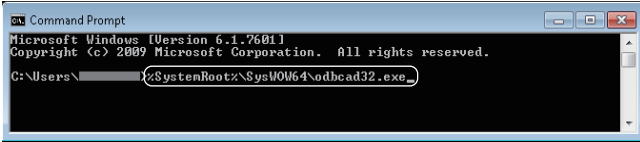

1. Start the ODBC Data Source Administrator.


Enter the following in the command prompt.

- %SystemRoot%\SysWOW64\odbcad32.exe

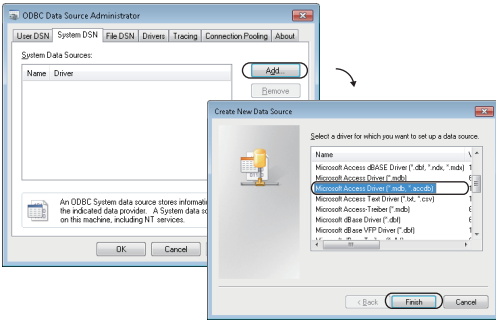

2. Select the [System DSN] tab and click the [Add] button.

3. Select "Microsoft Access Driver (*.mdb, *.accdb)", and click the [Finish] button.

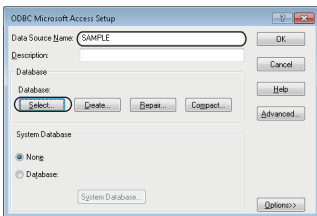


4. Enter 'SAMPLE' in the "Data Source Name" and click the [Select] button in the "Database".



Any data source name can be set.

The name set above is used for the data source name in the "Target Server Individual Settings" in the "Target Server Settings".

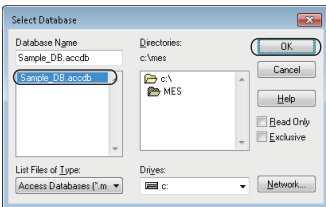


5. Select 'Sample_DB.accdb' in the "Data Source Name" and click the [OK] button.



The database name is for accessing to Access database.

Specify a save destination for the created database tables.

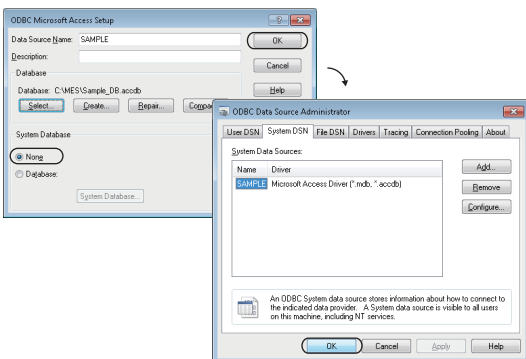

6. Select "None" in the "System Database" and click the [OK] button.

7. Click the [OK] button on the "ODBC Data Source Administrator" screen to complete the ODBC setting.

8.5 MES Interface Function Setting

Data (SQL statement) communication can be performed without creating a program by setting the parameters of MES Interface Function Configuration Tool.


Parameter setting procedure

Starting MES Interface Function Configuration Tool



1. Start MES Interface Function Configuration Tool.
Select [Start] ⇒ [All Programs] ⇒ [MELSOFT] ⇒ [MESInterface] ⇒ [MELSEC iQ-R Series MES Interface Function Configuration Tool] from Windows Start.

Setting a network

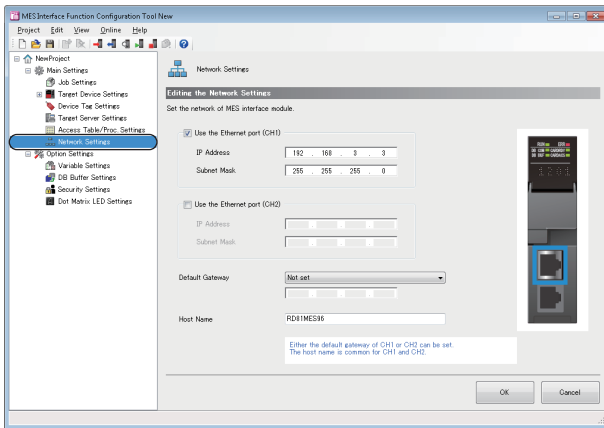


1. Set a network of MES interface module.
Select "Network Settings" in the edit item tree.

Point

This setting is used as a default.

Setting a target device

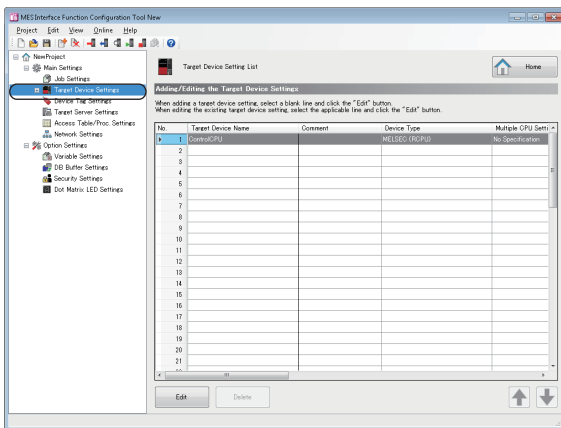


1. Set a connection route to a target device.
Select "Target Device Settings" in the edit item tree.

Point


This setting is used as a default.

Setting device tags

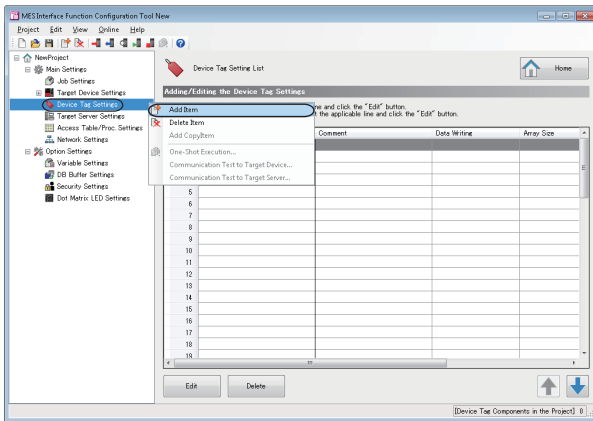


1. Set device tags.

- Right-click "Device Tag Settings" in the edit item tree and select [Add Item] from the shortcut menu.

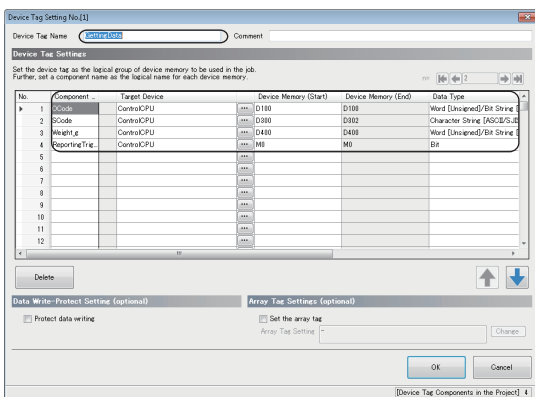


- ### 2. Enter 'GettingData' in the "Device Tag Name" and set each setting item according to the following table.

Component Name	Target Device	Device Memory (Start)	Device Memory (End)	Data Type	Length
OCode	ControlCPU	D100	D100	Word [Unsigned]/Bit String [16-bit]	—
SCode	ControlCPU	D300	D302	Character String [ASCII/SJIS]	6
Weight_g	ControlCPU	D400	D400	Word [Unsigned]/Bit String [16-bit]	—
ReportingTrigger	ControlCPU	M0	M0	Bit	—

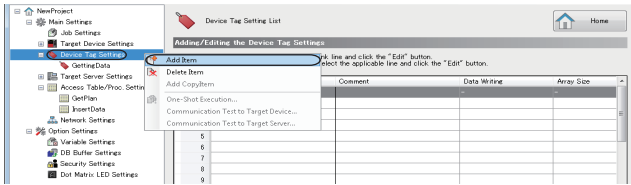

3. Add another device tag.


Right-click "Device Tag Settings" in the edit item tree and select [Add Item] from the shortcut menu.

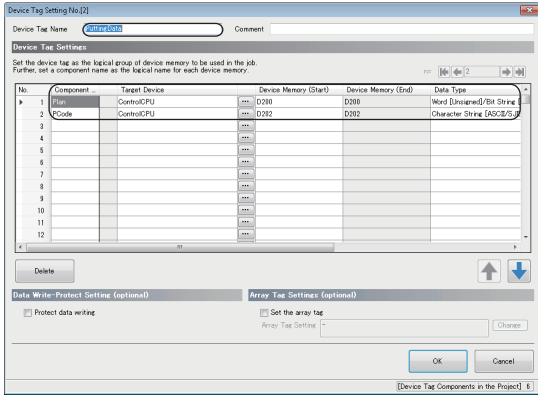

4. Enter 'PuttingData' in the "Device Tag Name" and set each setting item according to the following table.


Component Name	Target Device	Device Memory (Start)	Device Memory (End)	Data Type	Length
Plan	ControlCPU	D200	D200	Word [Unsigned]/Bit String [16-bit]	—
PCode	ControlCPU	D202	D202	Character String [ASCII/SJIS]	2

Setting a target server

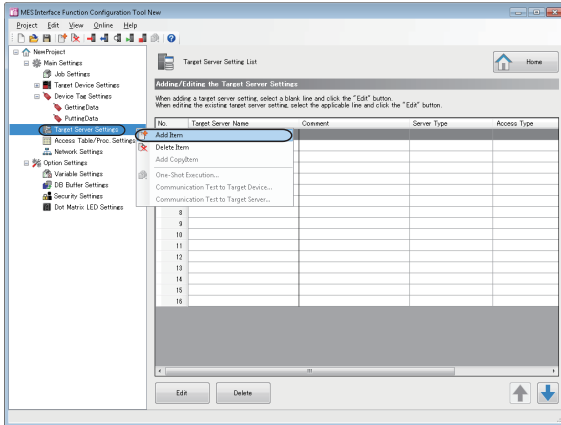

1. Set a target server.


Right-click "Target Server Settings" in the edit item tree and select [Add Item] from the shortcut menu.

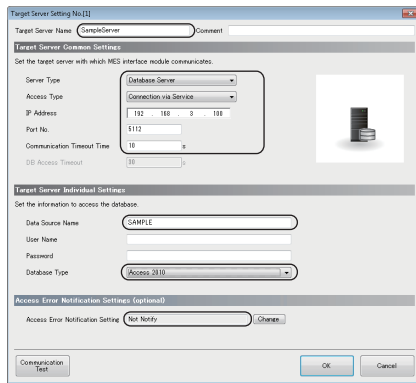


2. Enter 'SampleServer' in the "Target Server Name" and set each setting item according to the following table.

Setting item	Setting content	
Target Server Name	SampleServer	
Target Server Common Settings	Server Type	Database Server
	Access Type	Connection via Service
	IP Address	192.168.3.100 (Set the same IP address as the server.)
	Port No.	5112
	Communication Timeout Time	10
Target Server Individual Settings	Data Source Name	SAMPLE (Same name as the one set on the [System DSN] tab in the ODBC setting)
	User Name	—
	Password	—
	Database Type	Access 2010
Access Error Notification Settings (optional)	Access Error Notification Setting	Not Notify

Setting access tables

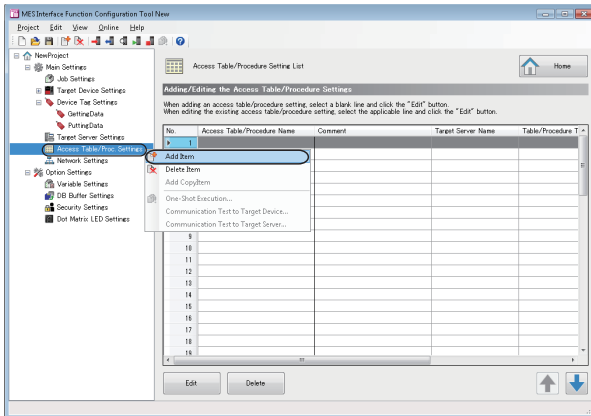

1. Set an access table/procedure.
- Right-click "Access Table/Proc. Settings" in the edit item tree and select [Add Item] from the shortcut menu.

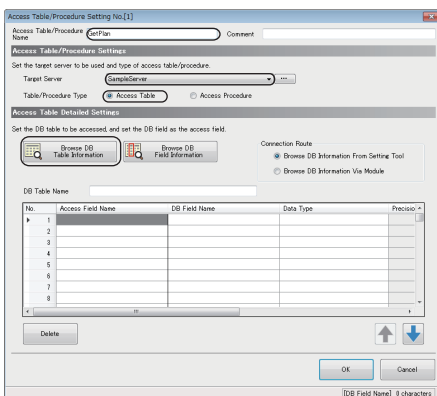


2. Enter 'GetPlan' in the "Access Table/Procedure Name".
3. Set each setting item in the "Access Table/Procedure Settings".


- Select "SampleServer" in the "Target Server" in the "Access Table/Procedure Settings", and select "Access Table" in the "Table/Procedure Type".

4. Set a DB table name.

- Click the [Browse DB Table Information] button in the "Access Table Detailed Settings".

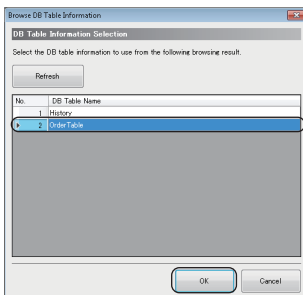


5. Select "OrderTable" and click the [OK] button.

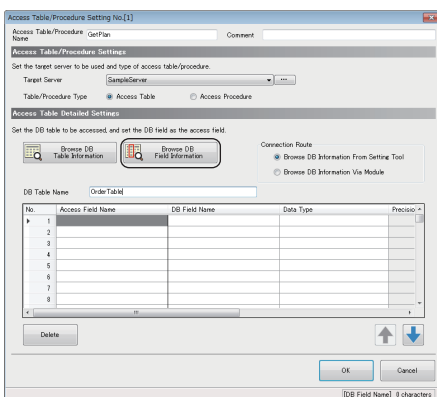


6. Set the DB field information.

- Click the [Browse DB Field Information] button in the "Access Table Detailed Settings".

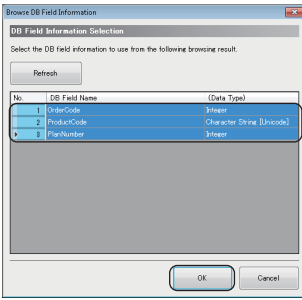


7. Select "OrderCode", "ProductCode", and "PlanNumber", and click the [OK] button.

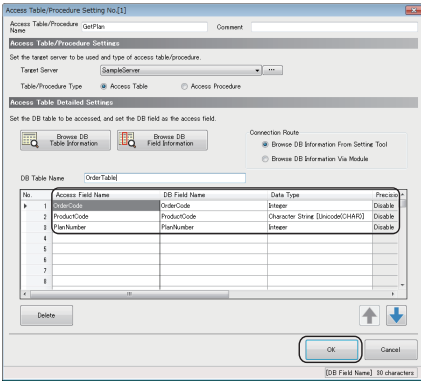


8. Set each setting item according to the following table and click the [OK] button.

Access Field Name	DB Field Name	Data Type	Precision Hold	Default Value Setting	Default Value
OrderCode	OrderCode	Integer	Disable	Disable	—
ProductCode	ProductCode	Character String [Unicode(CHAR)]	Disable	Disable	—
PlanNumber	PlanNumber	Integer	Disable	Disable	—

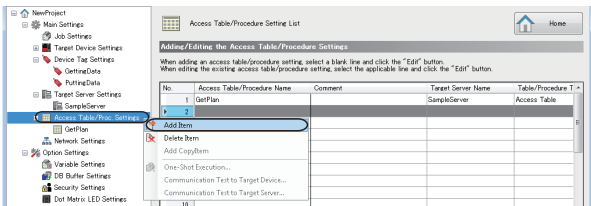

9. Add another access table/procedure.

Right-click "Access Table/Proc. Settings" in the edit item tree and select [Add Item] from the shortcut menu.

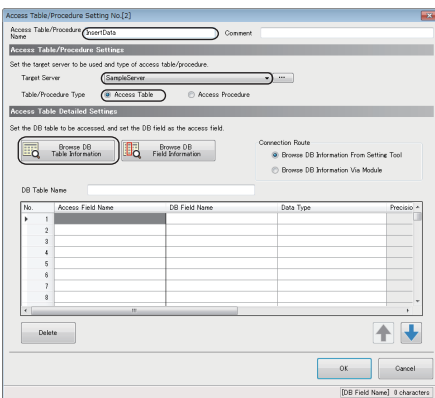

10. Enter 'InsertData' in the "Access Table/Procedure Name".


11. Set each setting item in the "Access Table/Procedure Settings".


Select "SampleServer" in the "Target Server" in the "Access Table/Procedure Settings", and select "Access Table" in the "Table/Procedure Type".

12. Set a DB table name.

Click the [Browse DB Table Information] button in the "Access Table Detailed Settings".


13. Select "History" and click the [OK] button.

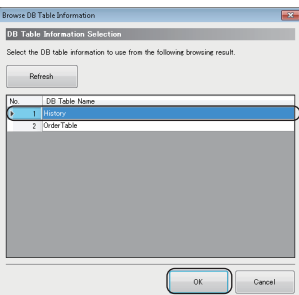

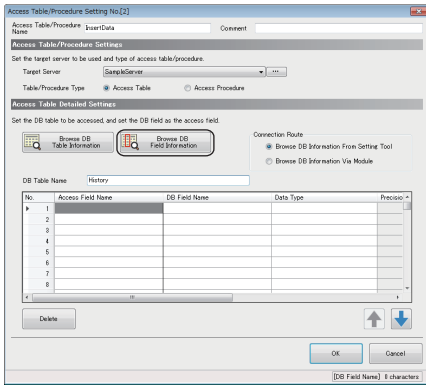


14. Set the DB field information.

Click the [Browse DB Field Information] button in the "Access Table Detailed Settings".

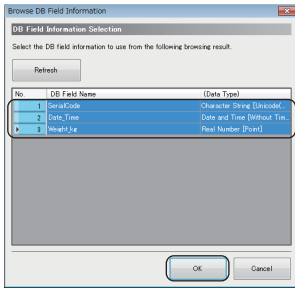


15. Select "SerialCode", "Date_Time", and "Weight_kg" and click the [OK] button.

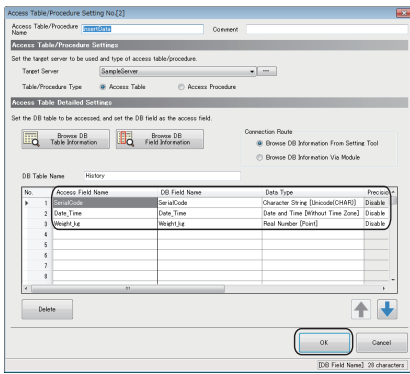

16. Set each setting item according to the following table and click the [OK] button.

Access Field Name	DB Field Name	Data Type	Precision Hold	Default Value Setting	Default Value
SerialCode	SerialCode	Character String [Unicode(CHAR)]	Disable	Disable	—
Date_Time	Date_Time	Date and Time [Without Time Zone]	Disable	Disable	—
Weight_kg	Weight_kg	Real Number [Point]	Disable	Disable	—

Setting a variable

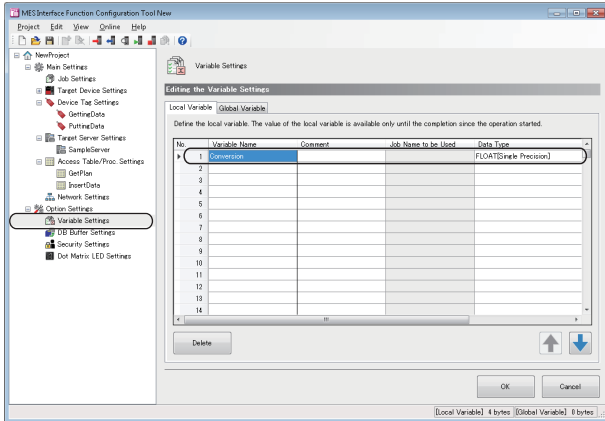


1. Set a variable to be used for jobs.
2. Select "Variable Settings" in the edit item tree.
3. Set a variable on the [Local Variable] tab according to the following table and click the [OK] button.


Variable Name	Comment	Job Name to be Used	Data Type	Length
Conversion	—	—	FLOAT[Single Precision]	—

Setting jobs (GettingPlan)

Job Configuration

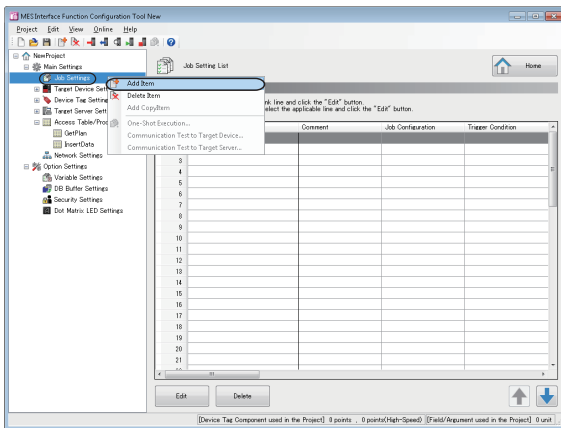

1. Set a job.
2. Right-click "Job Settings" in the edit item tree and select [Add Item] from the shortcut menu.

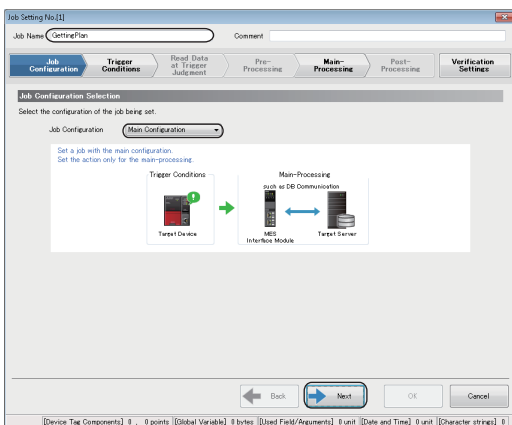

2. Enter 'GettingPlan' in the "Job Name". Select "Main Configuration" in the "Job Configuration" in the "Job Configuration Selection" and click the [Next] button.

Trigger Conditions

1. Set each setting item according to the following table and click the [Edit] button.

Trigger Condition Configuration Settings

Select the configuration of the trigger condition.

Configuration Type: **Single Event**

Condition Combination Type: **AND Combination**

Event/Condition Settings

Set each event/condition to be used at Trigger Judgment.

No.	Event/Condition Type	Detail Type	Content
1	Event (Module Monitoring)	MES Interface Module	

Trigger Buffering Setting (optional)

Set the operation of the job whenever the trigger conditions are satisfied at the same time.

Trigger Buffering: **Disable**

Setting item		Setting content
Trigger Condition Configuration Settings	Configuration Type	Single Event
	Condition Combination Type	—
Trigger Buffering Setting (optional)	Trigger Buffering	Disable

2. Set each setting item according to the following table and click the [OK] button.

Event/Condition Type Common Settings

Select the event/condition type and the detail type.

Event/Condition: **Event (Module Monitoring)**

Detail Type: **MES Interface Module**

Event/Condition Type Individual Settings

Specify the time to generate an event.

	Event
At Startup of MES Interface Module	Select
At Restart/Update of Settings of the MES Interface Function	Select

Setting item		Setting content
Event/Condition Type Common Settings	Event/Condition Type	Event (Module Monitoring)
	Detail Type	MES Interface Module
Event/Condition Type Individual Settings	At Startup of MES Interface Module	Select
	At Restart/Update of Settings of the MES Interface Function	Select

3. Click the [Next] button.

Event/Condition Settings

No.	Event/Condition Type	Detail Type	Content
1	Event (Module Monitoring)	MES Interface Module	At Startup, ON, At Restart (At...)

■ Main-Processing

Setting item	Setting content	Setting content
Operation Settings at Main-Processing Failure (optional)	At Processing Failure	Notification: "Not Set"
DB Buffering Settings (optional)	DB Buffering	No Buffering
	DB Buffer Use Size [byte]	—

No.	Access Field	(Data Type)	Assignment Data	(Data Type)
1	OrderCode	Integer		
2	ProductCode	Character Str.		
3	PlanNumber	Integer		
4				
5				
6				
7				
8				
9				
10				
11				
12				

Execution SQL: SELECT FROM [Order Table]



1. Set each setting item according to the following table and click the [Edit] button.

2. Click the [DB Communication Action] button in the "Action Type Selection".

3. Set each setting item in the "DB Communication Action Settings".

- Select "Select" in the "DB Communication Type" in the "DB Communication Action Settings", and select "GetPlan.SampleServer" in the "Access Table".

- Set each setting item on the [Data Assignment] and the [Narrowing-Down Conditions] tab according to the following table, and click the [OK] button.

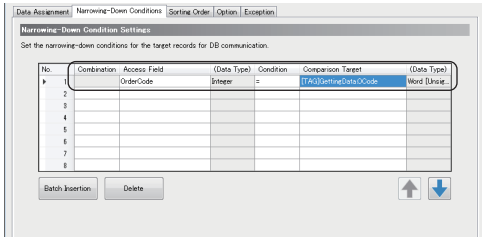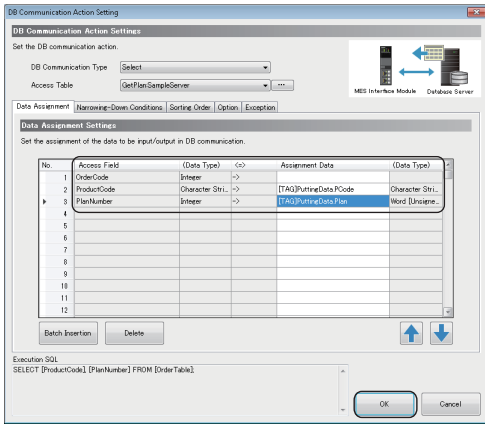


• Data Assignment Settings

Access Field	(Data Type)	↔	Assignment Data	(Data Type)
OrderCode	Integer	→	—	—
ProductCode	Character String [Unicode(CHAR)]	→	[TAG]PuttingData.PCode	Character String [ASCII/SJIS]
PlanNumber	Integer	→	[TAG]PuttingData.Plan	Word [Unsigned]/Bit String [16-bit]

• Narrowing-Down Condition Settings

Combination	Access Field	(Data Type)	Condition	Comparison Target	(Data Type)
—	OrderCode	Integer	=	[TAG]GettingData.OCode	Word [Unsigned]/Bit String [16-bit]

- Click the [Next] button.

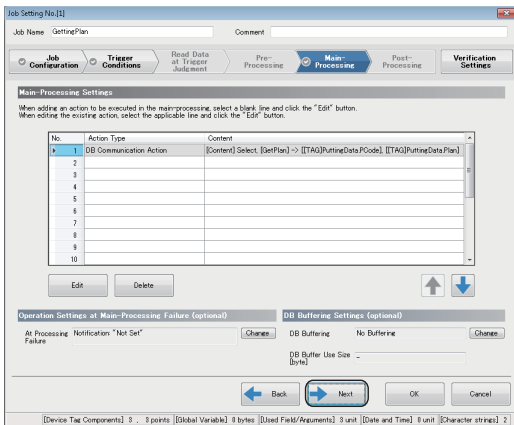


■ Verification Settings

1. Set each setting item according to the following table and click the [OK] button.

Setting item		Setting content
Working History Settings (optional)	Working History	Not output
	Detailed Log	—
Data Output Inhibition Necessity Settings (optional)	Inhibit the data output to the target device	Unselected
	Inhibit the data output to the target server	Unselected
Job Execution Inhibition Necessity Setting (optional)	Inhibit the job execution even when the trigger condition is satisfied.	Unselected


Setting jobs (Reporting)

Job Configuration

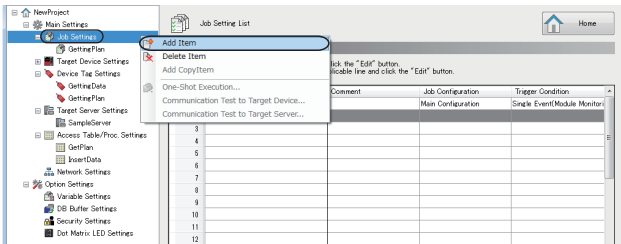


1. Add another job.

Right-click "Job Settings" in the edit item tree and select [Add Item] from the shortcut menu.

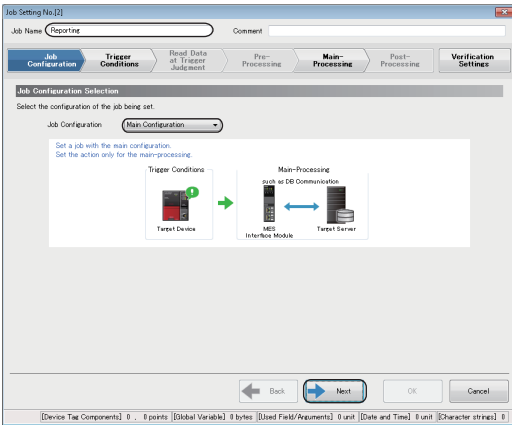


2. Enter 'Reporting' in the "Job Name". Select "Main Configuration" in the "Job Configuration" in the "Job Configuration Selection" and click the [Next] button.

Trigger Conditions

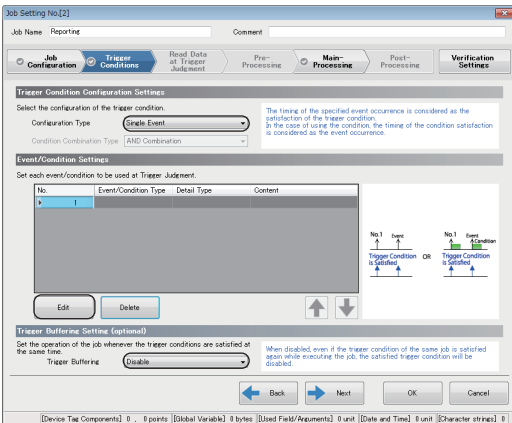

1. Set each setting item according to the following table and click the [Edit] button.


Setting item	Setting content	
Trigger Condition Configuration Settings	Configuration Type	Single Event
	Condition Combination Type	—
Trigger Buffering Setting (optional)	Trigger Buffering	Disable

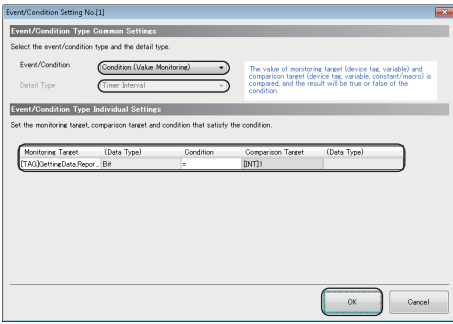

2. Set each setting item according to the following table and click the [OK] button.

Point " [INT]1 " in the " Comparison Target " can be set on the " Integer Type Constant Settings " screen.


" Comparison Target " ⇒ " Constant " ⇒ "[Integer]"

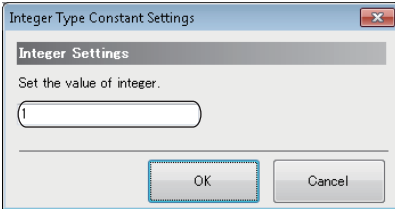


Setting item		Setting content
Event/Condition Type Common Settings	Event/Condition Type	Condition (Value Monitoring)
	Detail Type	—
Event/Condition Type Individual Settings	Monitoring Target	[TAG]GettingData.ReportingTrigger
	(Data Type)	Bit
	Condition	=
	Comparison Target	[INT]1*1
	(Data Type)	—

*1 When the data type of the monitoring target is "Bit", "[INT]1" in the comparison target indicates 'ON'.

3. Click the [Next] button.

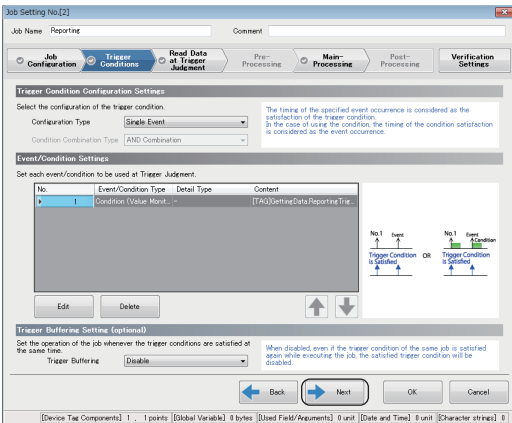


Read Data at Trigger Judgment

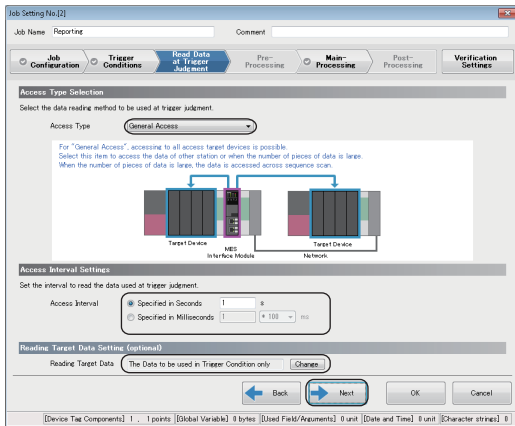

1. Set each setting item according to the following table and click the [Next] button.


Setting item	Setting content
Access Type Selection	Access Type General Access
Access Interval Settings	Access Interval Seconds Specification: '1' second
Reading Target Data Setting (optional)	Reading Target Data The Data to be used in Trigger Condition only

Main-Processing

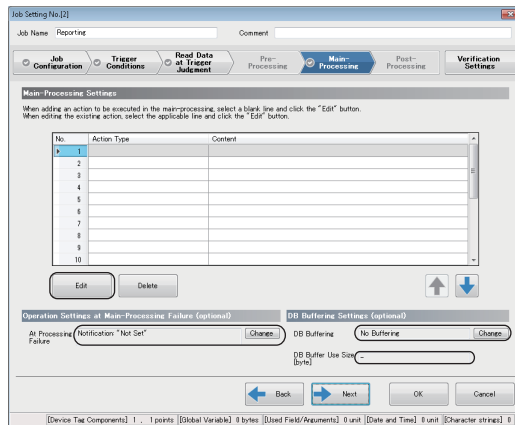


1. Set each setting item according to the following table and click the [Edit] button.

Setting item	Setting content
Operation Settings at Main-Processing Failure (optional)	At Processing Failure Notification: "Not Set"
DB Buffering Settings (optional)	DB Buffering No Buffering
	DB Buffer Use Size —

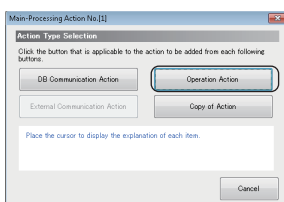


2. Click the [Operation Action] button in the "Action Type Selection".

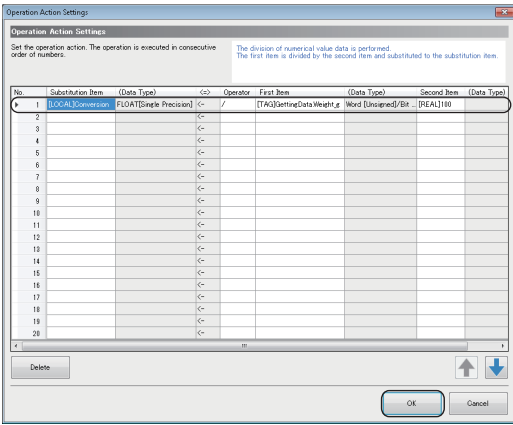


- Set an operation action according to the following table and click the [OK] button.


Substitution Item	(Data Type)	↔	Operator	First Item	(Data Type)	Second Item	(Data Type)
[LOCAL]Conversion	FLOAT[Single Precision]	←	÷	[TAG]GettingData.Weight_g	Word [Unsigned]/Bit String [16-bit]	[REAL]1000	—

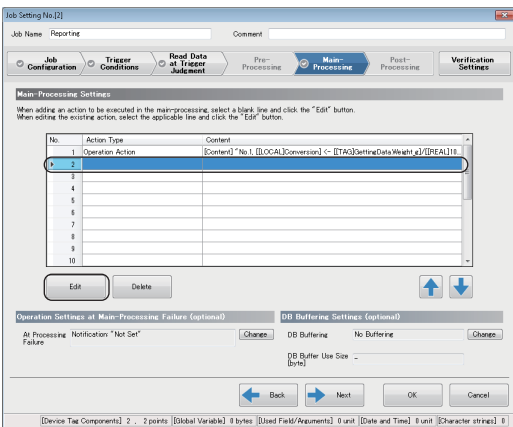


- Add another action.
 - Select the second row in the action list and click the [Edit] button.

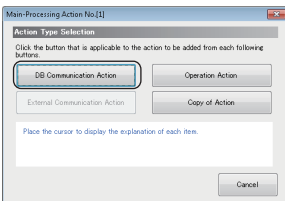

- Click the [DB Communication Action] button in the "Action Type Selection".

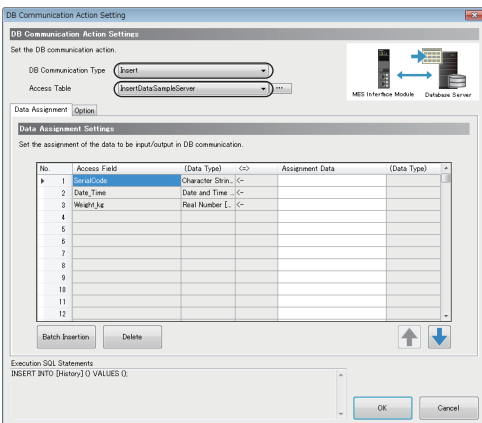

- Set each setting item in the "DB Communication Action Settings".
 - Select "Insert" in the "DB Communication Type" in the "DB Communication Action Settings" and select "Insert.SampleServer" in the "Access Table".

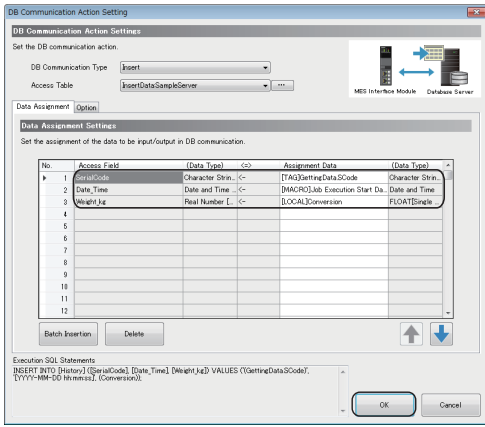


• Data Assignment Settings


Access Field	(Data Type)	↔	Assignment Data	(Data Type)
SerialCode	Character String [Unicode(CHAR)]	←	[TAG]GettingData.SCode	Character String [ASCII/SJIS]
Date_Time	Date and Time [Without Time Zone]	←	[MACRO]Job Execution Start Date and Time	Date and Time
Weight_kg	Real Number [Point]	←	[LOCAL]Conversion	FLOAT[Single Precision]

7. Set each setting item on the [Data Assignment] tab according to the following table and click the [OK] button.

8. Click the [Next] button.

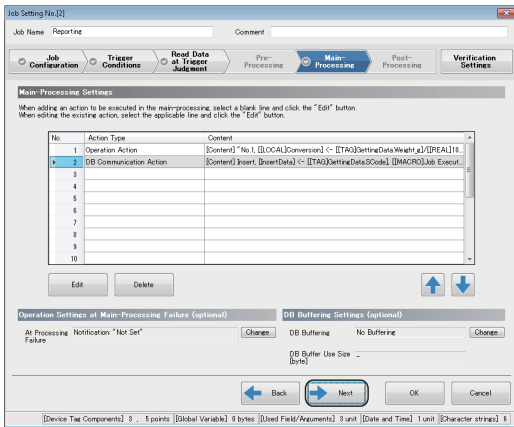

■ Verification Settings

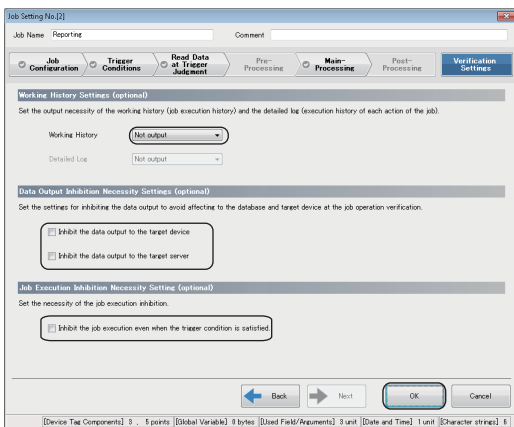



1. Set each setting item according to the following table and click the [OK] button.

Setting item	Setting content	
Working History Settings (optional)	Working History	Not output
	Detailed Log	—
Data Output Inhibition Necessity Settings (optional)	Inhibit the data output to the target device	Unselected
	Inhibit the data output to the target server	Unselected
Job Execution Inhibition Necessity Setting (optional)	Inhibit the job execution even when the trigger condition is satisfied.	Unselected

Operation check

The following shows the writing procedure of parameters to MES interface module and checking procedure of the writing result to a DB table.



Writing procedure of parameters to MES interface module

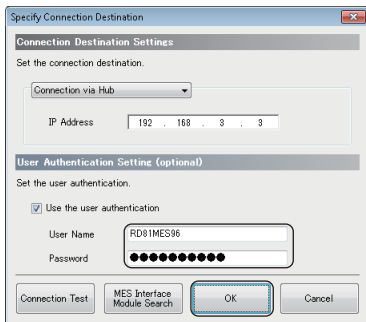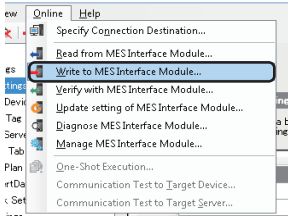

1. Write the parameters, which have been set with the MES Interface Function Configuration Tool, to MES interface module.
 Select [Online] ⇒ [Write to MES Interface Module] in MES Interface Function Configuration Tool.
2. When the "Specify Connection Destination" screen appears, enter a user name and password, then click the [OK] button.
 The following are set by default.
 User Name: RD81MES96
 Password: MITSUBISHI
3. After completing the writing, reset the CPU module and start MES interface module.
 After resetting the CPU module, turn the status to RUN.
4. The parameters are written to the database automatically after starting MES interface module.

8

Checking procedure of a writing result to a DB table

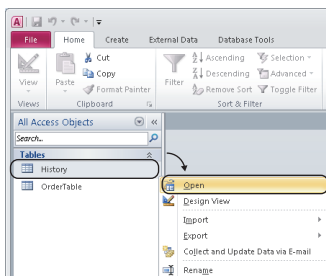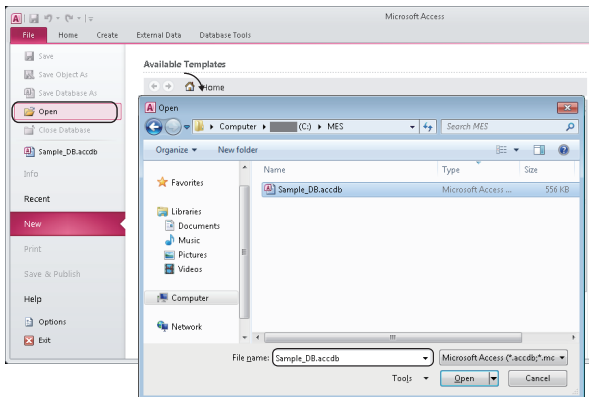

1. Select "Open" in Access 2010 and open the "Sample_DB.accdb" file ("C:\MES\Sample_DB.accdb").
2. Right-click "History" in the [Tables] and select [Open] from the shortcut menu.


SerialCode	Date_Time	Weight_kg
US2001	1/5/2016 10:56:17 AM	0.491
US2002	1/5/2016 10:56:27 AM	0.508
US2003	1/5/2016 10:56:37 AM	0.511
US2004	1/5/2016 10:56:47 AM	0.5
US2005	1/5/2016 10:56:57 AM	0.505
US2006	1/5/2016 10:57:07 AM	0.496
US2007	1/5/2016 10:57:17 AM	0.503
US2008	1/5/2016 10:57:27 AM	0.496
US2009	1/5/2016 10:57:37 AM	0.505
US2010	1/5/2016 10:57:47 AM	0.5
US2011	1/5/2016 10:57:57 AM	0.511
US2012	1/5/2016 10:58:07 AM	0.508
US2013	1/5/2016 10:58:17 AM	0.491
US2014	1/5/2016 10:58:27 AM	0.49
US2015	1/5/2016 10:58:37 AM	0.505
US2016	1/5/2016 10:58:47 AM	0.506
US2017	1/5/2016 10:58:57 AM	0.515
US2018	1/5/2016 10:59:07 AM	0.518
US2019	1/5/2016 10:59:17 AM	0.507
US2020	1/5/2016 10:59:27 AM	0.512
US2021	1/5/2016 10:59:37 AM	0.503
US2022	1/5/2016 10:59:47 AM	0.51
US2023	1/5/2016 10:59:57 AM	0.503
US2024	1/5/2016 11:00:07 AM	0.504
US2025	1/5/2016 11:00:17 AM	0.499
US2026	1/5/2016 11:00:27 AM	0.51
US2027	1/5/2016 11:00:37 AM	0.507
US2028	1/5/2016 11:00:47 AM	0.49
US2029	1/5/2016 11:00:57 AM	0.511
US2030	1/5/2016 11:01:07 AM	0.496
US2031	1/5/2016 11:01:17 AM	0.497
US2032	1/5/2016 11:01:27 AM	0.514
US2033	1/5/2016 11:01:37 AM	0.509
US2034	1/5/2016 11:01:47 AM	0.498
US2035	1/5/2016 11:01:57 AM	0.503
*		

- The result (manufacturing information), which is inserted to a history table from MES interface module, can be checked.

APPENDIX

Appendix 1 External Dimensions

The following figures show the external dimensions of MES interface module.

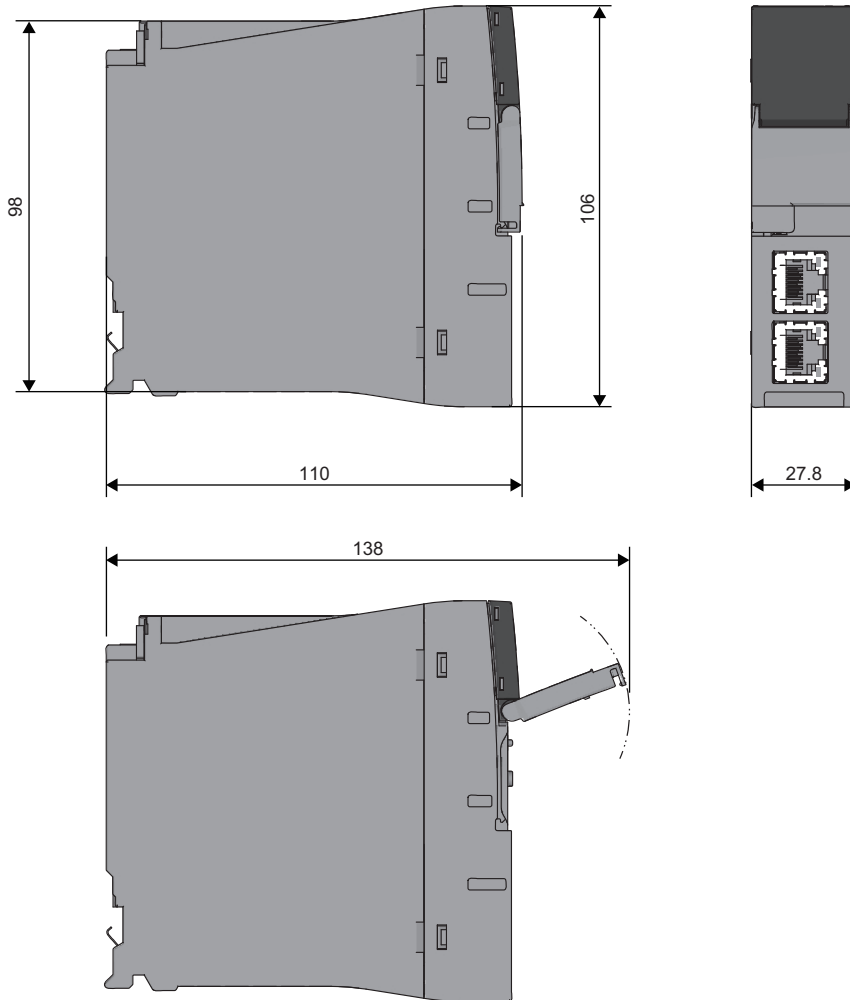

(Unit: mm)

Appendix 2 ODBC Setting

When using DB Connection Service on the database server, the ODBC setting for the database used is required to be set in advance.

The following shows the procedures for the ODBC setting.

For details on the setting method, refer to the manuals and online help of the operating system and the security software used.

To start the ODBC Data Source Administrator

Enter the following command in the command prompt in accordance with the software version of MX MESInterface-R and the bit version of DB Connection Service to be used.

Software version	Bit version of DB Connection Service	Command
'1.03D' or earlier	—	"%SystemRoot%\SysWOW64\odbcad32.exe"
'1.04E' or later	32-bit	
	64-bit	"%SystemRoot%\system32\odbcad32.exe"

Oracle

The following shows the setting example of ODBC setting in the environment written below.

Item	Description
Operating system	Microsoft Windows 7 Professional Operating System
Relational database	Oracle 12c
Data source name*1	SAMPLE
TNS Service Name*2	SAMPLETNS
OracleHome	OraClient12Home1

*1 A data source name can be set arbitrary.

The name set above is used in the "Data Source Name" in the "Target Server Individual Settings" on the "Target Server Settings".


*2 The TNS service name is for accessing to the database of Oracle.

It is the one entered when installing Oracle or creating database instances.

It can be checked by selecting [Configuration and Migration Tools] ⇒ [Net Manager] ⇒ "Service Naming" in the Oracle attachment tool.


1. Start the ODBC Data Source Administrator.

☞ Page 114 To start the ODBC Data Source Administrator

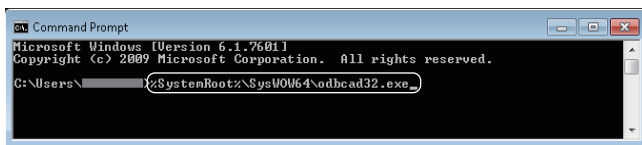


2. Select the [System DSN] tab and click the [Add] button.


3. Select "Oracle in OraClient12Home1", and click the [Finish] button.

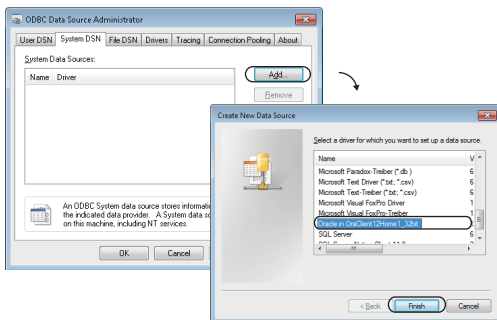

4. Set the following items and click the [Test Connection] button.

- Data Source Name: SAMPLE
- TNS Service Name: SAMPLETNS
- Enable Closing Cursors: Select

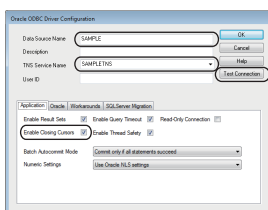

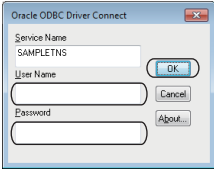

5. Enter the user name and password, and click the [OK] button.
6. When the connection is established normally, the "Testing Connection" screen will appear.
7. Click the [OK] button on the "Oracle ODBC Driver Connect" screen.
8. Click the [OK] button on the "ODBC Data Source Administrator" screen.

SQL Server

The following shows the setting example of ODBC setting in the environment written below.

Item	Description
Operating system	Microsoft Windows 7 Professional Operating System
Relational database	Microsoft SQL Server 2012
Data source name*1	SAMPLE
Server name*2	SAMPLESRV






*1 A data source name can be set arbitrary.

The name set above is used in the "Data Source Name" in the "Target Server Individual Settings" on the "Target Server Settings".

*2 The server name is for accessing to the database of Microsoft SQL Server 2012.

It is the one entered when installing Microsoft SQL Server 2012.

It can be checked in SQL Server Management Studio.

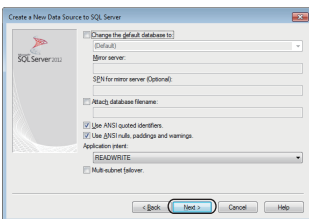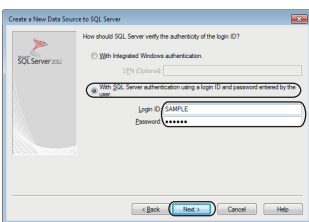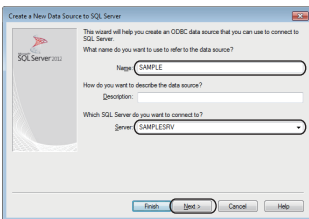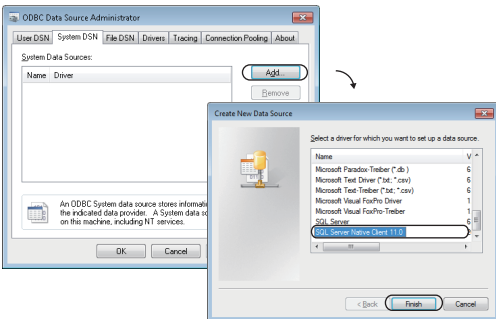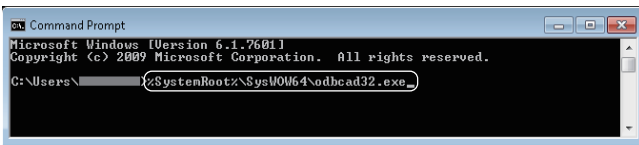

1. Start the ODBC Data Source Administrator.

Page 114 To start the ODBC Data Source Administrator

2. Select the [System DSN] tab and click the [Add] button.



3. Select "SQL Server Native Client 11.0", and click the [Finish] button.

4. Set the following items and click the [Next] button.

- Data source name: SAMPLE
- Server name: SAMPLESRV

5. Select "With SQL Server authentication using a login ID and password entered by the user.", enter the login ID and password, and click the [Next] button.

6. Click the [Next] button.

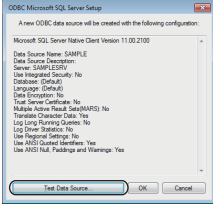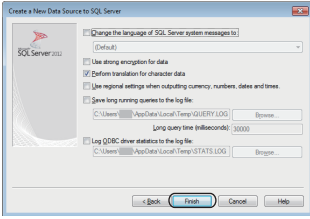

7. Click the [Finish] button.
8. Click the [Test Data Source] button, and check if the connection can be established normally.
9. Click the [OK] button on the "SQL Server ODBC Source Test" screen.
10. Click the [OK] button on the "ODBC Microsoft SQL Server Setup" screen.
11. Click the [OK] button on the "ODBC Data Source Administrator" screen.

Access

The following shows the setting example of ODBC setting in the environment written below.






Item	Description
Operating system	Microsoft Windows 7 Professional Operating System
Relational database	Microsoft Access 2010(32bit)
Data source name*1	SAMPLE
Database name*2	C:\MES\Sample_DB.accdb


*1 A data source name can be set arbitrary.

The name set above is used in the "Data Source Name" in the "Target Server Individual Settings" on the "Target Server Settings".

*2 The database name is for accessing to the database of Microsoft Access.

Specify the file path of the database created with Microsoft Access.

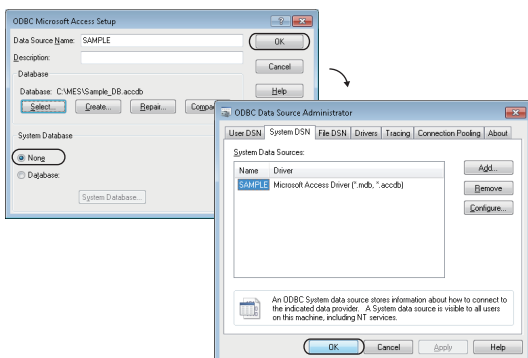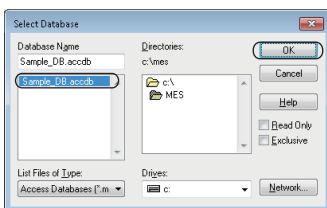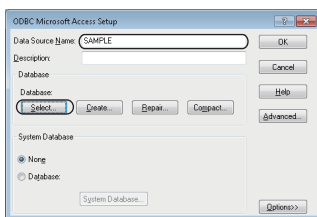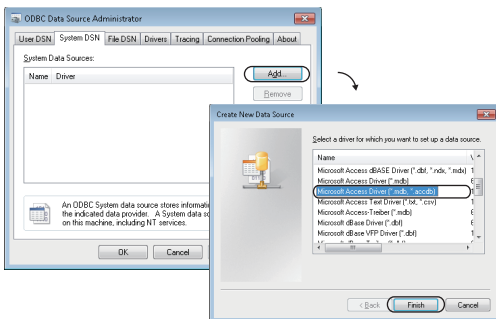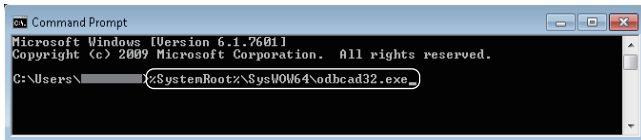

1. Start the ODBC Data Source Administrator.
 Page 114 To start the ODBC Data Source Administrator
2. Select the [System DSN] tab and click the [Add] button.
3. Select "Microsoft Access Driver(*.mdb, *.accdb)", and click the [Finish] button.
4. Enter 'SAMPLE' in the "Data Source Name" and click the [Select] button in the "Database".
5. Select 'Sample_DB.accdb' in the "Data Source Name" and click the [OK] button.
6. Select "None" in the "System Database" and click the [OK] button.
7. Click the [OK] button on the "ODBC Data Source Administrator" screen.


MySQL



The following shows the setting example of ODBC setting in the environment written below.

Item	Description
Operating system	Microsoft Windows 7 Professional Operating System
Relational database	MySQL
Data source name*1	SAMPLE


*1 A data source name can be set arbitrary.

The name set above is used in the "Data Source Name" in the "Target Server Individual Settings" on the "Target Server Settings".


1. Start the ODBC Data Source Administrator.
 Page 114 To start the ODBC Data Source Administrator

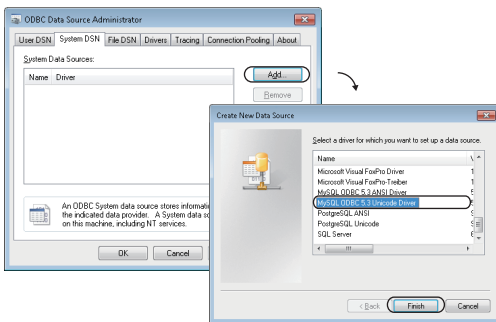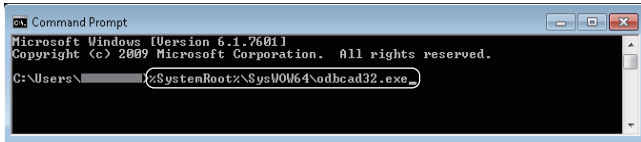

2. Select the [System DSN] tab and click the [Add] button.
3. Select "MySQL ODBC 5.3 Unicode Driver", and click the [Finish] button.

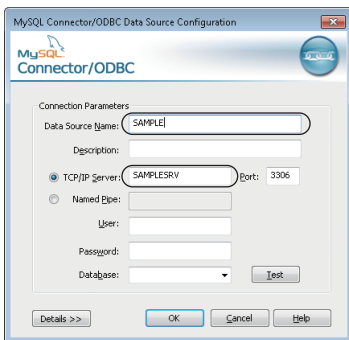

4. Set the following items.
 - Data Source Name: SAMPLE
 - TCP/IP Server: SAMPLESRV

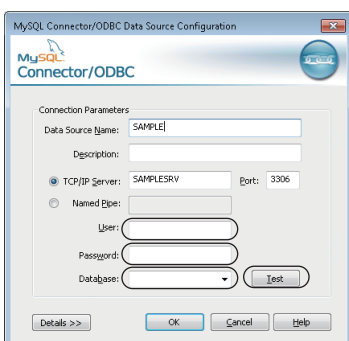

5. Enter the user name and password, and select a database to be used.
6. Click the [Test] button, and check if the connection can be established normally.
7. Click the [OK] button on the "MySQL Connector/ODBC Data Source Configuration" screen.
8. Click the [OK] button on the "ODBC Data Source Administrator" screen.




PostgreSQL



The following shows the setting example of ODBC setting in the environment written below.

Item	Description
Operating system	Microsoft Windows 7 Professional Operating System
Relational database	PostgreSQL
Data source name*1	SAMPLE


*1 A data source name can be set arbitrary.

The name set above is used in the "Data Source Name" in the "Target Server Individual Settings" on the "Target Server Settings".


1. Start the ODBC Data Source Administrator.
 Page 114 To start the ODBC Data Source Administrator

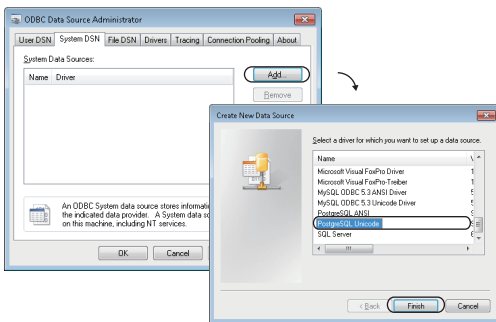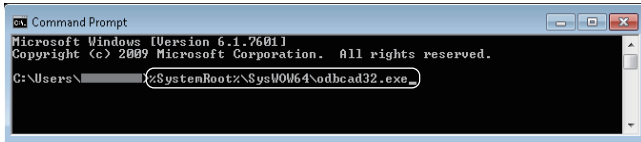

2. Select the [System DSN] tab and click the [Add] button.
3. Select "PostgreSQL Unicode", and click the [Finish] button.

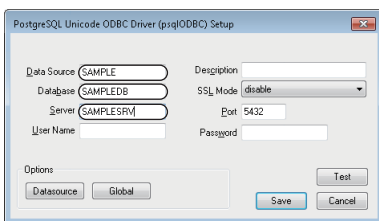

4. Set the following items.
 - Data source name: SAMPLE
 - Server name: SAMPLESRV
 - Database name: SAMPLEDB

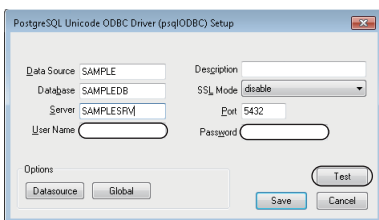

5. Enter the user name and password, and click the [Test] button.
6. When the connection is established normally, the "Testing Connection" screen will appear.
7. Click the [Save] button on the "PostgreSQL Unicode ODBC Driver (psqlODBC) Setup" screen.
8. Click the [OK] button on the "ODBC Data Source Administrator" screen.

MEMO

INDEX

A

- Access specifications for a CPU module 25
- Adding an item 64

C

- Connectable SD memory cards 69
- Connectable twisted pair cables 82
- Constant 66

D

- Data category 43
- DB connection service function list 55
- DB connection service setting tool function list . . . 55
- Deleting an item 64
- Dot matrix LED 17
- Dot matrix LED display mode switch 18

E

- External dimensions 113

F

- Formatting an SD memory card 70

I

- Insertion/removal method of an SD memory card 69

M

- Macro 66
- MES Interface Function Configuration Tool function list 53
- MES interface module function list 52
- Moving an item 65

O

- ODBC 57

P

- Parameter setting 67
- Performance specifications 19
- Procedure before operation 56
- Project File Conversion Tool function list 55

S

- SD memory card lock switch 18
- System configuration 72

MEMO

REVISIONS

*The manual number is given on the bottom left of the back cover.

Revision date	*Manual number	Description
December 2015	SH(NA)-081422ENG-A	First edition
July 2016	SH(NA)-081422ENG-B	■Added or modified parts TERMS, Chapter 2, Section 4.1, Section 4.2, Section 5.1, Section 5.2, Section 5.3, Appendix 2
September 2016	SH(NA)-081422ENG-C	■Added or modified parts TERMS, Section 4.1, Section 4.2, Section 5.2, Section 5.3, Section 7.1
March 2017	SH(NA)-081422ENG-D	■Added or modified parts SAFETY PRECAUTIONS, Section 2.1, Section 2.3, Section 2.4, Section 3.3, Section 4.1, Section 4.2, Section 4.3, Section 5.1, Section 5.2, Section 5.3, Section 7.1, Section 8.5, Appendix 2
May 2017	SH(NA)-081422ENG-E	■Added or modified part Section 2.3
October 2017	SH(NA)-081422ENG-F	■Added functions REST server function, project file conversion function ■Added or modified parts Section 2.3, Section 3.1, Section 3.2, Section 3.3, Section 3.6, Section 4.2, Section 5.1, Section 5.2, Section 5.3, Chapter 7, Section 8.5
October 2017	SH(NA)-081422ENG-G	■Added or modified part Section 2.2
May 2018	SH(NA)-081422ENG-H	■Added or modified part Section 5.3
August 2018	SH(NA)-081422ENG-I	■Added or modified part Section 2.3
October 2019	SH(NA)-081422ENG-J	■Added or modified parts TERMS, Chapter 1, Section 2.1, Section 2.2, Section 2.3, Section 2.4, Section 3.2, Section 3.3, Section 4.1, Section 4.2, Section 4.3, Section 5.1, Section 5.2, Section 5.4, Chapter 7, Section 8.5

Japanese manual number: SH-081420-M

This manual confers no industrial property rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2015 MITSUBISHI ELECTRIC CORPORATION

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 2. Failure caused by unapproved modifications, etc., to the product by the user.
 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

TRADEMARKS

Intel is either registered trademarks or trademarks of Intel Corporation in the United States and/or other countries. Microsoft, Microsoft Access, Excel, SQL Server, Windows, and Windows Server are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

MySQL is either a registered trademark or a trademark of MySQL AB.

Oracle and Java are registered trademarks of Oracle and/or its affiliates.

The SD and SDHC logos are trademarks of SD-3C, LLC.

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as [™] or [®] are not specified in this manual.



SH-(NA)-081422ENG-J(1910)KWIX

MODEL: R-MES-U-IN-E

MODEL CODE: 13JX23

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the
Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.