



X2 extreme 15 SL HP

Installation manual for X2 extreme 15 SL HP

Foreword

All operator panels are developed to satisfy the demands of human-machine communication. Built-in functions such as displaying and controlling text, dynamic indication, time channels, alarm and recipe handling are included.

The operator panel works primarily in an object-oriented way, making it easy to understand and use. Configuration is carried out on a PC using iX Developer software. The project can then be transferred and stored in the operator panel itself.

Various types of automation equipment such as PLCs, servos or drives can be connected to the operator panels. In this manual, the term “the controller” refers to the connected equipment.

This manual explains how to install the operator panel. Please refer to the iX Developer reference manual for further information.

Order no: MAEN263

Copyright © 2020-01 Beijer Electronics AB. All rights reserved.

The information in this document is subject to change without notice and is provided as available at the time of printing. Beijer Electronics AB, including all its group companies, reserves the right to change any information without updating this publication. Beijer Electronics AB, including all its group companies, assumes no responsibility for any errors that may appear in this document. Read the entire installation manual prior to installing and using this equipment. Only qualified personnel may install, operate or repair this equipment. Beijer Electronics AB, including all its group companies, are not responsible for modified, altered or renovated equipment. Because the equipment has a wide range of applications, users must acquire the appropriate knowledge to use the equipment properly in their specific applications. Persons responsible for the application and the equipment must themselves ensure that each application is in compliance with all relevant requirements, standards and legislation in respect to configuration and safety. Only parts and accessories manufactured according to specifications set by Beijer Electronics AB, including all its group companies, may be used.

BEIJER ELECTRONICS AB, INCLUDING ALL ITS GROUP COMPANIES, SHALL NOT BE LIABLE TO ANYONE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE INSTALLATION, USE OR REPAIR OF THIS EQUIPMENT, WHETHER ARISING IN TORT, CONTRACT, OR OTHERWISE. BUYER'S SOLE REMEDY SHALL BE THE REPAIR, REPLACEMENT, OR REFUND OF PURCHASE PRICE, AND THE CHOICE OF THE APPLICABLE REMEDY SHALL BE AT THE SOLE DISCRETION OF BEIJER ELECTRONICS AB, INCLUDING ALL ITS GROUP COMPANIES.

Contents

| | | |
|----------|--|-----------|
| 1 | Safety Precautions | 4 |
| 1.1 | General | 4 |
| 1.2 | Hazardous Materials | 4 |
| 1.3 | Disposal Requirements Under WEEE Regulations | 5 |
| 1.4 | UL and cUL Installation | 5 |
| 1.5 | IECEX/ATEX Certificate and Dust Rating | 6 |
| 1.6 | Conditions of Safe Use for Zone 2/22 ATEX/IECEX | 6 |
| 1.7 | During Installation | 6 |
| 1.8 | During Use | 6 |
| 1.9 | Service and Maintenance | 7 |
| 1.10 | Dismantling and Scrapping | 7 |
| 1.11 | Appearance of Air in Touch Screen | 7 |
| 2 | Naming Convention | 8 |
| 3 | Installation | 9 |
| 3.1 | Installation Process | 9 |
| 3.1.1 | Protective Connector Shield Installation Process | 11 |
| 3.1.2 | Connections to the Controller | 13 |
| 3.1.3 | Other Connections and Peripherals | 13 |
| 4 | Technical Data | 14 |
| 5 | Chemical Resistance | 16 |
| 5.1 | Metal Casing | 16 |
| 5.2 | Touch Screen and Overlay Material | 16 |
| 5.2.1 | Protective Film | 16 |
| 5.2.2 | Touch Screen Surface | 18 |
| 5.2.3 | Touch Screen Protector | 18 |
| 6 | Operator Panel Drawings | 19 |
| 6.1 | Connectors | 19 |
| 6.1.1 | Communication Ports | 19 |
| 6.1.2 | Power Supply | 20 |
| 6.1.3 | COM A | 20 |
| 6.1.4 | USB 1/2 | 21 |
| 6.1.5 | LAN A / LAN B | 21 |
| 6.1.6 | COM B | 21 |
| 6.2 | Connectors | 21 |
| 6.3 | X2 extreme 15 SL HP Outline | 22 |
| 7 | Additional Installation Tips | 23 |
| 7.1 | Grounding the operator panel | 23 |
| 7.2 | To Achieve Better EMC Protection | 23 |
| 7.3 | Safety | 27 |
| 7.4 | Galvanic Isolation | 28 |
| 7.5 | Cable and Bus Termination RS-485 | 30 |

1 Safety Precautions

Both the installer and the owner and/or operator of the operator panel must read and understand this installation manual.

1.1 General

- Read the safety precautions carefully.
- Check the delivery for transportation damage. If damage is found, notify the supplier as soon as possible.
- Do not use the operator panel in an environment with high explosive hazards.
- The supplier is not responsible for modified, altered or reconstructed equipment.
- Use only parts and accessories manufactured according to specifications of the supplier.
- Read the installation and operating instructions carefully before installing, using or repairing the operator panel.
- Never allow fluids, metal filings or wiring debris to enter any openings in the operator panel. This may cause fire or electrical shock.
- Only qualified personnel may operate the operator panel.
- Storing the operator panel where the temperature is lower/higher than recommended in this manual can cause the LCD display liquid to congeal/become isotropic.
- The LCD display liquid contains a powerful irritant. In case of skin contact, wash immediately with plenty of water. In case of eye contact, hold the eye open, flush with plenty of water and get medical attention.
- The figures in this manual serve an illustrative purpose. Because of the many variables associated with any particular installation, the supplier cannot assume responsibility for actual use based on the figures.
- The supplier neither guarantees that the operator panel is suitable for your particular application, nor assumes responsibility for your product design, installation or operation.
- It is recommended to turn on and shut down the operator panel at least once before installing any components/cards or before connecting the operator panel to external devices; for example serial devices.
- For Marine panels only:
 - The operator panel must be installed and operated as described in this document to meet this certification.
 - Observe precautions for handling electrostatic discharge sensitive devices

1.2 Hazardous Materials

| Part description 零件描述 | Toxic and hazardous materials or elements 有毒和有害的材料或元素 | | | | | |
|---|--|----|----|------|-----|------|
| | Pb | Hg | Cd | Cr6+ | PBB | PBDE |
| PCB and electronic components PCB 和 电子元件 | X | O | O | O | O | O |

O: Indicates that this toxic or hazardous substance contained in all of the homogenous materials for this part is below the limit requirement in SJ/T 11363-2014.

O : 表示该有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2014 规定的限量要求以下。

X: Indicates that this toxic or hazardous substance contained in at least one of the homogenous materials for this part is above the limit requirement in SJ/T 11363-2014.

X: 表明该有害物质至少在部件的某一均质材料中的含量超出 SJ/T 11363-2014 规定的限量要求。

1.3 Disposal Requirements Under WEEE Regulations

For professional users in the European Union: If you wish to discard electrical and electronic equipment (EEE), please contact your dealer or supplier for further information.

For disposal in countries outside of the European Union: If you wish to discard this product please contact your local authorities or dealer and ask for the correct method of disposal.

1.4 UL and cUL Installation

- All devices have to be supplied by a Class 2 power supply.



Warning:

Do not separate when energized.

AVERTISSEMENT, NE PAS SEPARER SOUS TENSION.



Warning:

Do not open when an explosive atmosphere is present.

NE PAS OUVRIR SI UNE ATMOSPHERE EXPLOSIVE EST PRÉSENT.



Warning:

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.

This product contains a battery that is not user replaceable.

LA BATTERIE PEUT EXPLOSER EN CAS DE MAUVAISE MANIPULATION.

NE LA RECHARGEZ PAS, NE LA DÉMONTEZ PAS ET NE LA JETEZ PAS DANS LE FEU.

CE PRODUIT CONTIENT UNE PILE QUI NE PEUT PAS ÊTRE REMPLACÉE PAR L'UTILISATEUR.



Warning:

Explosion hazard! Substitution of components may impair suitability for Class I, Division 2.

RISQUE D'EXPLOSION! LA SUBSTITUTION DE COMPOSANTS PEUT NUIRE À LA CONFORMITÉ DE CLASSE I, DIVISION 2.

Caution:

Temperature code T4 IEC/EN60079-0 (2012) , IEC/EN 60079-15 (2010) and IEC/ EN 60079-31 (2014).

Protection string Ex nA nC IIC T4 Gc and Ex tc IIIC T75 ° C Dc.

CODES DE TEMPÉRATURE T4 IEC/EN 60079-0 (2012) , ET IEC/EN60079-15 (2010) and IEC/ EN 60079-31 (2014).

CHAÎNE DE PROTECTION Ex nA nC IIC T4 Gc Ex tc IIIC T75 ° C Dc.

1.5 IECEx/ATEX Certificate and Dust Rating

 II 3 G Ex nA nC IIC T4 Gc

 II 3 D Ex tc IIIC T85 ° C Dc

IECEx UL 19.0058X

DEMKO 19 ATEX 1900X

1.6 Conditions of Safe Use for Zone 2/22 ATEX/IECEx

- To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth when installed/used within a potentially explosive atmosphere.
- The area the device is mounted in shall not be more than pollution degree 2, as defined in IEC/EN 60664-1.
- This equipment has been evaluated for low risk of mechanical impact and should be installed accordingly.

1.7 During Installation

- Install the operator panel according to the accompanying installation instructions.
- Ground the operator panel according to the accompanying installation instructions.
- Only qualified personnel may install the operator panel.
- Separate the high voltage, signal, and supply cables.
- Make sure that the voltage and polarity of the power source is correct before connecting the operator panel to the power outlet.
- Peripheral equipment must be appropriate for the application and location.
- Use only UL certified and approved M12 cables or M12 connector with cable gland. See section 3.1 (step 2) for installation details. See section 3.1.1 (step 2) for UL approved M12 cables sets and M12 connector with cable gland.

1.8 During Use

- Keep the operator panel clean.
- Emergency stop and other safety functions may not be controlled from the operator panel.
- Do not use excessive force or sharp objects when operating the touch screen.

1.9 Service and Maintenance

- Only qualified personnel should carry out repairs.
- The agreed warranty applies.
- Before carrying out any cleaning or maintenance operations, disconnect the equipment from the electrical supply.
- Clean the display and surrounding front cover with a soft cloth and mild detergent.
- The battery must be replaced by an authorized Beijer Electronics service center.

1.10 Dismantling and Scrapping

- The operator panel or parts thereof shall be recycled according to local regulations.
- The following components contain substances that might be hazardous to health and the environment: lithium battery, electrolytic capacitor, and display.

1.11 Appearance of Air in Touch Screen

The layer structure of the touch screen contains air. In rare cases, the appearance of bubbles can arise. This is purely cosmetic and does not affect the functionality of the operator panel. The appearance can occur under certain environmental conditions such as temperature, humidity, and atmospheric pressure.

2 Naming Convention

The name of each panel is based on its properties according to the table below.

| X2 family | Size (inches) | Variant | |
|---------------------|---------------|---------|--------------------|
| base | 4 | SC | SoftControl |
| pro | 5 | SM | SoftMotion |
| marine (= with BL) | 7 | HB | High Brightness |
| control (= with SC) | 10 | HP | High performance |
| motion (= with SM) | 12 | BL | Black |
| extreme | 15 | 12V | 12 Volt |
| | | SL | Sealed |
| | | RO | Rugged Only |
| | | CO | Certification Only |

Examples:

- X2 pro 7
- X2 control 10
- X2 marine 12 SC
- X2 marine 15 HB SC
- X2 extreme 7 12V*
- X2 extreme 12 HP SC*
- X2 extreme 7 SL HP*
- X2 extreme 12 SL HP SC*
- X2 extreme 7 CO*
- X2 extreme 12 SL HP RO

Note:


Not all combinations are available.

Note:

* indicates variants including IECEx\ATEX and C1D2 accreditation.

3 Installation

3.1 Installation Process

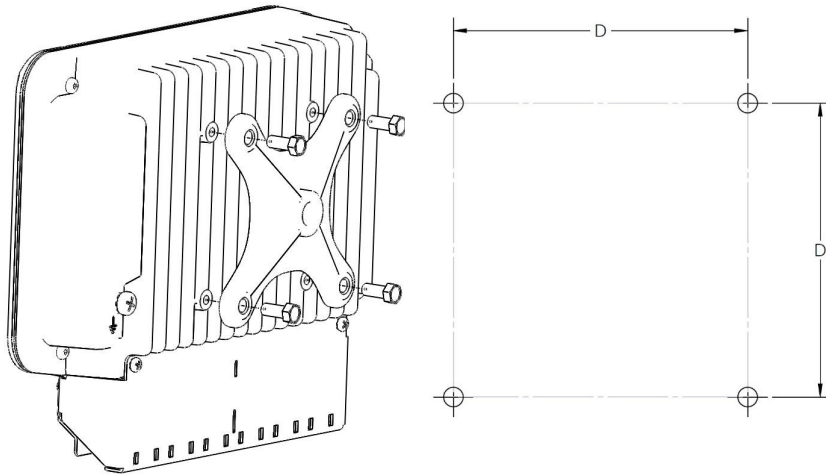

| Measurement | X2 extreme 15 SL HP |
|-------------------------|---------------------|
| D | 100 × 100 mm |
| Hole size | 5.5 ± 0.5 mm |
| Thread type | M5 × 0.8 mm |
| Max thread depth | 8 mm |
| Min required engagement | 5 mm |
| Torque (max) | 3.5 Nm |

The following is needed:

- A Phillips/slot screwdriver
- Four M5 × 0.8 screws conforming to the table above
- Installation tool for mounting screws

Do the following:

1. Unpack and check the delivery. If damage is found, notify the supplier.

Note:

Place the operator panel on a stable surface during installation.
Dropping the operator panel or letting it fall may cause damage.

2. Attach UL certified and approved cables\connectors to the operator panel. Special precaution must be followed to ensure approved cable\connector sets are installed according to the environment and application where the device will be located. The unit is certified to be installed in the following hazardous environments:
 - C1D2, Type 4X
 - ATEX\IECEX Zone 2

Note:

Please refer to the following tables for information on which connectors \ cables are to be used in each of these two environments:


Note:

For information, see table ATEX \ IECEx Zone 2 Environment (M12 cables sets) and Type 4X, C1D2 Environments (M12 connector with cable gland) below.

Note:

M12 connector with cable gland torque: 3 Nm.

3. Drill the correct hole pattern in panel outlined above or install unit on VESA compliant mounting bracket.

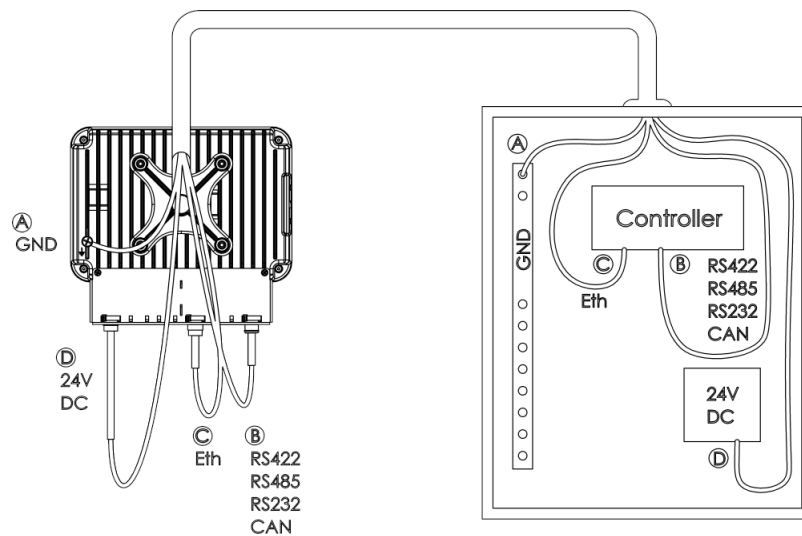

- Connect cable A to the terminal, using 14-20 AWG (2.08–0.52 mm²), 180–220 N-cm torque.

Note:

Use minimum 85° C copper conductors only.

| Manufacturer | Beijer Part Number | Manufacturer Model No. | Description |
|--------------|--------------------|-------------------------|---|
| Binder | 100-1025 | 77-3529-0000-50708-0300 | M12 male 8p to blank 3 meter (COM) |
| | 100-1151 | 77-3529-0000-50708-1000 | M12 male 8p to blank 10 meter (COM) |
| Binder | 100-1024 | 77-4529-0000-34704-0300 | M12 male 4p to blank 3 meter (LAN) |
| | 100-1152 | 77-4529-0000-34704-1000 | M12 male 4p to blank 10 meter (LAN) |
| Binder | 100-1023 | 77-3430-0000-50004-0300 | M12 female 4p to blank 3 meter (power) |
| | 100-1153 | 77-3430-0000-50004-1000 | M12 female 4p to blank 10 meter (power) |

ATEX \ IECEx Zone 2 Environment (M12 cables sets)



| Manufacturer | Beijer Part Number | Manufacturer Model No. | Description | Cable Ratings |
|--------------|--------------------|------------------------|---|--|
| Binder | 100-1148 | 99-1487-992-08 | X2 extreme Connector, M12 SS 8p male 5.5-7.5mm Gland (COM) | CMX cable rated 300V, 2 4AWG, 8 conductor, 5.5 mm - 7.5 mm OD, -30° C to 70° C PLTC cable rated 300V, 22AWG, 4 conductor, Wet, Sun Res, 5.5 mm - 7.5 mm OD, -30° C to 70° C |
| Binder | 100-1149 | 99-3729-995-04 | X2 extreme Connector, M12 SS 4p male 5.5-7.5mm Gland (LAN) | |
| Binder | 100-1150 | 99-1430-992-04 | X2 extreme Connector, M12 SS 4p female 5.5-7.5 mm Gland (Power) | |

Type 4X, C1D2 Environments (M12 connector with cable gland)


3.1.1 Protective Connector Shield Installation Process

Do the following:

1. Install the protective connector shield as shown.

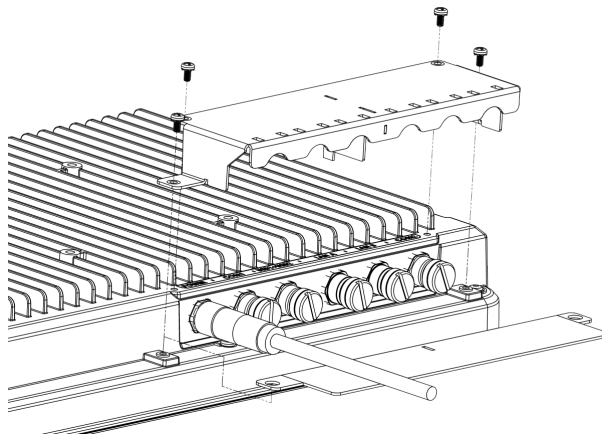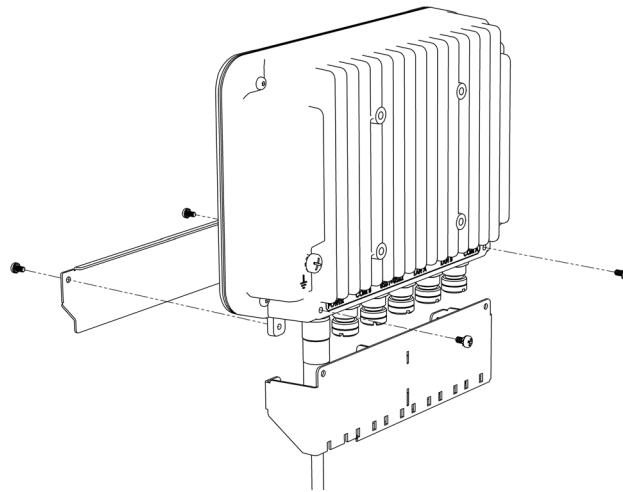

2. Secure the cables to the protective connector shield using the included cable ties

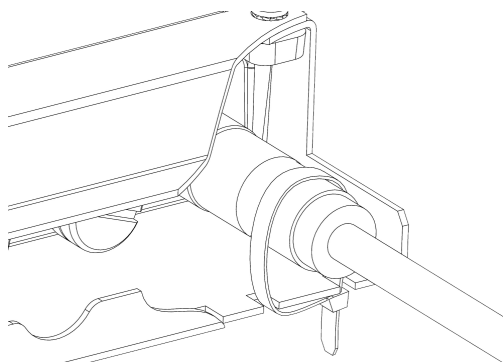

Note:

The protective connector shield is required to be used on all applications.

3.1.2 Connections to the Controller

For information about the cables to be used when connecting the operator panel to the controller, please refer to the help file for the driver in question.

3.1.3 Other Connections and Peripherals

Cables, peripheral equipment and accessories must be suitable for the application and its environment. For further details or recommendations, please refer to the supplier.

4 Technical Data

| Parameter | X2 extreme 15 SL HP |
|------------------------------------|---|
| Dimensions, W × H × D | 411 × 286 × 65 mm |
| Sealing | IP66 (IP65 for IECEx\ATEX) |
| Touch screen material | Polyester on glass, ITO film, resistive |
| Frame overlay | Autoflex EBA 180L |
| Touch screen operations | 1 million finger touch operations |
| Reverse side material | Powder-coated aluminum |
| Frame material | Powder-coated aluminum |
| Weight | 4.8 kg |
| CPU | i.MX 6Quad Quad ARM Cortex-A9 Core 1.0 GHz 1 MB L2 cache |
| Serial port COMA | M12 (8 pin, female) 1×RS-232 Rx/Tx with RTS (no CTS) 1×RS-422, or 1×RS - 485 or 1×CAN 2.0B |
| Serial port COMB | M12 (8 pin, female) 1×RS-485 with isolated +5V/5mA out for bias resistor network, or 1×CAN 2.0B with termination |
| Ethernet LAN A | M12 (4 Pin, female, D-coded according to EN/IEC 61076-2-101) 10/100Mbit via RMII |
| Ethernet LAN B | M12 (4 Pin, female, D-coded according to EN/IEC 61076-2-101) 10/100Mbit via RMII |
| USB | Supports up to USB 2.0 High Speed |
| External storage media | 1 × SD card |
| Flash memory (application memory) | 3.5 GB SSD (eMMC) |
| Memory RAM | 2 GB DDR3 |
| NVRAM | 64 kB |
| LED | 1 × Multi color |
| Real time clock | Yes |
| Battery | BR 2477A/GAN lithium battery, non replaceable |
| Power consumption at rated voltage | 28 W |
| Fuse | Internal DC fuse, 4 AT SMT |

| Parameter | X2 extreme 15 SL HP |
|--------------------------------|---|
| Power supply | +24 VDC CE: The power supply must conform with the requirements according to EN/IEC 60950 and EN/IEC 61558-2-4. UL and cUL: The power supply must conform with the requirements for class 2 power supplies. |
| Display | TFT-LCD with LED backlight 800 × 480 pixels, 262k colors |
| Active area of display, W × H | 15.4" diagonal |
| Pixel errors | Class I (ISO 9241-307) |
| Backlight brightness | 1000 cd/m ² |
| Backlight lifetime | 50,000 hours |
| Operating temperature | -30 °C to +70 °C |
| Storage temperature | -40 °C to +80 °C |
| Relative humidity in operation | 5% - 95% non-condensation |
| Vibration | 4g, according to EN/IEC 60068-2-6, Test Fc |
| Mechanical shock | 40g, half-sine, 11ms according to EN/IEC60068-2-27 |
| Approvals and certifications | CE / FCC / KC Information is available on www.bejerelectronics.com |
| UL approval | Information is available on www.bejerelectronics.com and/or UL.com |
| Marine certificates | Information is available on www.bejerelectronics.com |

5 Chemical Resistance

5.1 Metal Casing

The frame and casing material is powder-coated aluminum. This powder paint withstands exposure to the following chemicals without visible change:

| | |
|----------------------|---------------------|
| Acetic acid 10% | Phosphoric acid 4% |
| Citric acid 10% | Phosphoric acid 10% |
| Diesel | Sea water |
| Distilled water | Sodium chloride 2% |
| Edible oil | Sodium chloride 20% |
| Fuel oil | Sulphuric acid 20% |
| Hydrogen peroxide 3% | Tap water |

The powder paint shows limited resistance to the following chemicals at room temperature:

| | |
|-------------------------|---------------------|
| Butanol | Nitric acid 3% |
| Hydrochloric acid 5% | Nitric acid 10% |
| Isopropyl alcohol | Phosphoric acid 43% |
| Sodium hypochlorite 10% | Turpentine |

Note:

If exposure to any of the above chemicals is demanded, it is recommended to first test the chemical in a hidden spot of the metal casing.

The powder paint shows little or no resistance to the following chemicals at room temperature:

| | | |
|--------------------|----------------------|---------------------------|
| Acetic acid, conc. | Methyl-ethyl ketone | Toluene |
| Acetone | Nitric acid 30% | Trichlorethylene |
| Ammonia 5% | Phenol | Xylene |
| Ammonia, conc. | Sodium hydroxide 5% | 97 octane unleaded petrol |
| Ethyl acetate | Sodium hydroxide 30% | 98 octane leaded petrol |

5.2 Touch Screen and Overlay Material

5.2.1 Protective Film

Autoflex EBA 180L covers the overlay surrounding the screen.

Solvent Resistance

The protective film withstands exposure of more than 24 hours duration under DIN 42 115 Part 2 to the following chemicals without visible change:

| | | |
|---|--|---------------------------------|
| Acetonitrile | Diesel | Petroleum spirit ⁽¹⁾ |
| Ajax / Vim in solution | Downy / Lenor ⁽¹⁾ | Phosphoric acid (<30%) |
| Alkalicarbonate solution ⁽¹⁾ | Ethanol | Potassium ferricyanide |
| Ammonia (<40%) ⁽¹⁾ | Glycerine | Potassium hydroxide (<30%) |
| Acetic acid (<50%) | Glycol | Pure Turpentine |
| Ariel powder in solution ⁽¹⁾ | Gumption ⁽¹⁾ | SBP 60/95 ⁽¹⁾ |
| Bleach ⁽¹⁾ | Hydrochloric acid (<36%) | Sulfuric acid (<10%) |
| Castor oil | Linseed oil | Tomato ketchup |
| Caustic soda (<40%) ⁽¹⁾ | Methanol | Trichloroacetic acid (<50%) |
| Cutting oil | Nitric acid (<10%) | White Spirit |
| Cyclohexanol | Paraffin oil | Windex ⁽¹⁾ |
| Diacetone alcohol | Persil powder in solution ⁽¹⁾ | Wisk |

⁽¹⁾ Extremely faint glossing of the texture was noted.

The Autoflex protective film withstands DIN 42 115 Part 2 exposure of up to 1 hour duration to glacial acetic acid without visible change.

The Autoflex protective film is not resistant to high pressure steam at over 100 °C or the following chemicals:

| | |
|-------------------------------|--------------------|
| Concentrated mineral acids | Benzyl alcohol |
| Concentrated caustic solution | Methylene chloride |

5.2.2 Touch Screen Surface

The touch screen surface on the operator panel withstands exposure to the following solvents without visible change:

| Solvents | Time |
|-------------|------------|
| Acetone | 10 minutes |
| Isopropanol | 10 minutes |
| Toluene | 5 hours |


The touch screen surface on the operator panel is made of polyester with a hard coat to resist scratches and withstand exposure to many solvents without visible change.

5.2.3 Touch Screen Protector

For harsh environments and exposure to outdoor conditions, it is recommended to use a protective film to guard the touch screen from damage. This optional part can be ordered from Beijer Electronics.

6 Operator Panel Drawings

6.1 Connectors

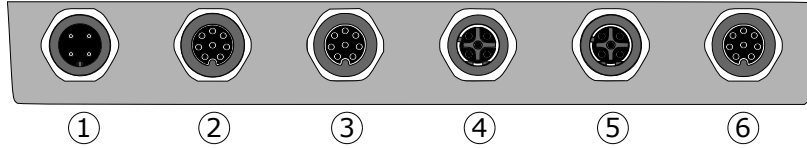

| Pos | Connector | Description |
|-----|---------------|---|
| 1 | Power supply | +24 VDC |
| 2 | COM B | Serial communication port |
| 3 | USB 1 + USB 2 | USB Host 2.0, max output current 500 mA |
| 4 | LAN A | 1 × 10/100 Base-T |
| 5 | LAN B | 1 × 10/100 Base-T |
| 6 | COM A | Serial communication port |

6.1.1 Communication Ports

| COM A | | | |
|-------------|-----------|------------------------------|----------|
| Description | | | |
| Pin | COM 1 | COM 2 | CAN |
| 1 | - | RS422 Tx+ RS485 Tx+ / Rx+ | 1. CAN-H |
| 2 | RS232_RxD | - | - |
| 3 | RS232_TxD | - | - |
| 4 | - | RS422_Rx+ | - |
| 5 | GND | GND | - |
| 6 | - | RS422 Tx- RS485 Tx- / Rx- | CAN-L |
| 7 | RS232_RTS | - | - |
| 8 | RS232_CTS | RS422_Rx- | - |

The connector supports up to three independent serial communication channels and can be configured for RS-232, and RS-422 or 2×RS-485 or 2×CAN.


The connector supports up to two independent serial communication channels and can be configured for RS-232, and RS-422 or RS-485 or CAN.

| COM B | | |
|-----------------|------------------|-------|
| D-sub-9, female | | |
| Pin | COM 3 | CAN |
| 1 | RS-485 Tx+ / Rx+ | CAN-H |
| 2 | TERM+ | TERM+ |


| COM B | | |
|-----------------|------------------|-----------------|
| D-sub-9, female | | |
| Pin | COM 3 | CAN |
| 3 | - | - |
| 4 | - | - |
| 5 | GND | GND |
| 6 | RS-485 Tx- / Rx- | CAN-L |
| 7 | TERM- | TERM- |
| 8 | - | - |
| 9 | V _{CC} | V _{CC} |

The connector supports galvanic isolated RS-485 or CAN.

6.1.2 Power Supply
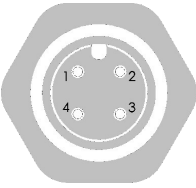
| Pin | Description | M12, 4 pin male |
|-----|------------------|--|
| 1 | V _{in+} |  |
| 2 | V _{in-} | |
| 3 | V _{in-} | |
| 4 | V _{in+} | |


6.1.3 COMA
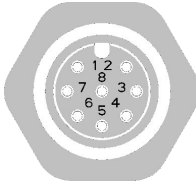
| Pin | COM 1 | COM 2 | COM 3 | M12, 8 pin female |
|-----|-----------|------------------------------|-------|---|
| 1 | | RS422 Tx+ RS485 Tx+ / Rx+ | CAN-H |  |
| 2 | RS232_RxD | - | - | |
| 3 | RS232_TxD | - | - | |
| 4 | | RS422_Rx+ | - | |
| 5 | GND | GND | - | |
| 6 | | RS422 Tx- RS485 Tx- / Rx- | CAN-L | |
| 7 | RS232_RTS | - | - | |
| 8 | | RS422_Rx- | - | |


Note:

The connector supports up to two independent serial communication channels and can be configured for RS232, and RS422 or RS485 or CAN.


6.1.4 USB 1/2
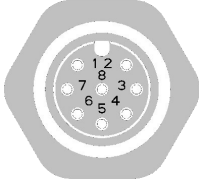
| Pin | USB 1/2 | M12, 8 pin female |
|-----|-----------------|---|
| 1 | V _{CC} |  |
| 2 | USB 2 D- | |
| 3 | USB 2 D+ | |
| 4 | GND | |
| 5 | V _{CC} | |
| 6 | USB 1 D- | |
| 7 | USB 1 D+ | |
| 8 | GND | |

6.1.5 LAN A/LAN B
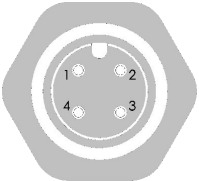
| Pin | LAN A | LAN B | M12, 4pin female |
|-----|-------|-------|---|
| 1 | | Tx+ |  |
| 2 | | Rx+ | |
| 3 | | Tx- | |
| 4 | | Rx- | |

6.1.6 COMB

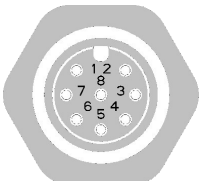
| Pin | COM 3 | CAN | M12, 8 pin female |
|-----|-----------------|-----------------|--|
| 1 | RS-485 Tx+/Rx+ | CAN-H |  |
| 2 | TERM+ | TERM+ | |
| 3 | - | - | |
| 4 | - | - | |
| 5 | GND | GND | |
| 6 | RS-485 Tx-/Rx- | CAN-L | |
| 7 | TERM- | TERM- | |
| 8 | V _{CC} | V _{CC} | |

Note:

The connector supports galvanic isolated RS485 or CAN.

6.2 Connectors

6.3 X2 extreme 15 SL HP Outline

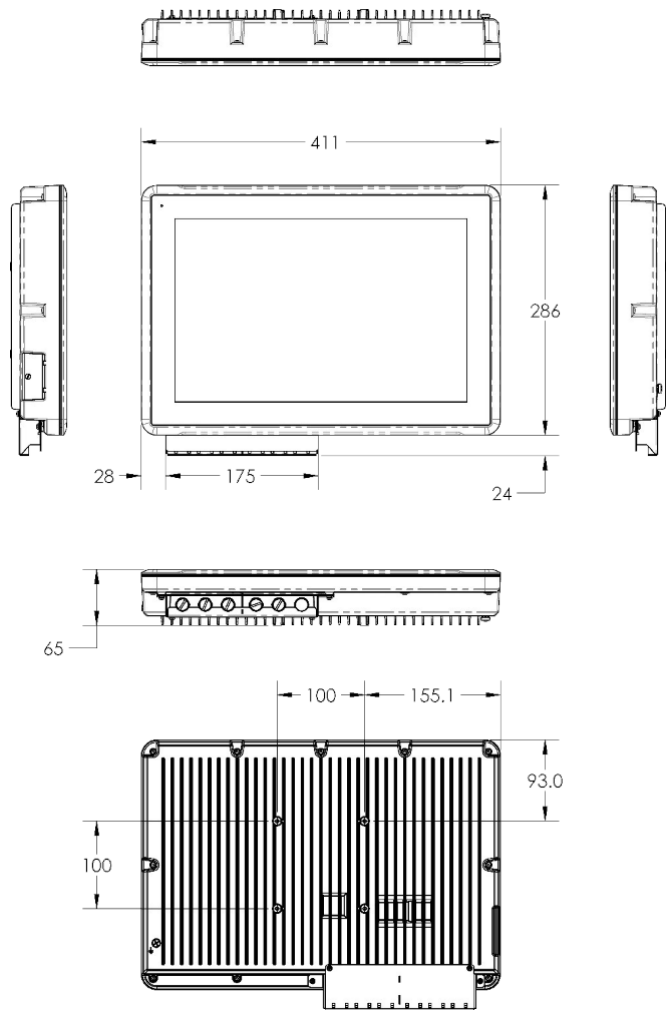


Note:

A Step CAD file is available on the web site www.beijerelectronics.com

7 Additional Installation Tips

When experiencing communication problems in noisy environments or when operating close to temperature limits, the following recommendations are to be noticed.

7.1 Grounding the operator panel

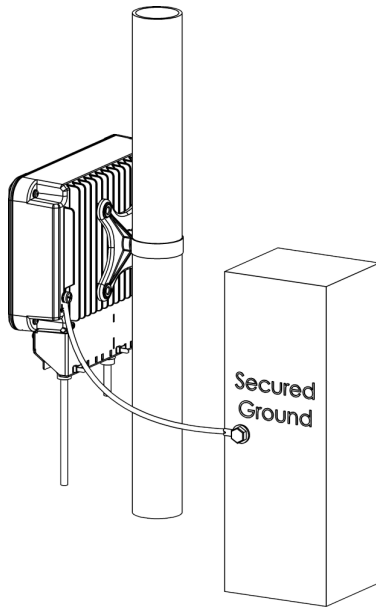

The VESA mounting of the operator panel does not provide a secure grounding connection between the panel and the device cabinet, see drawing above.

Connect a wire or grounding braid, that is sized correctly according to local electrical codes, between the chassis of the operator panel and the closest grounding point.

Note:


The grounding wires should be short and the conductor should have a large area. A long, thin grounding wire has a very high impedance (resistance) at high frequencies and does not guide disturbances to the ground.

Multi-wire conductors are better than single wire conductors with the same area. A braided conductor wire with the same area is even better. The best is a short, thick grounding braid.


7.2 To Achieve Better EMC Protection

- Initially, use the original cabling from Beijer Electronics primarily.
- Use shielded M12 cables

- Place the 24 V DC and communications cabling in one cable trunk/cable duct and 230/380 V AC in another. If the cables need to be crossed, cross them at 90° only. Avoid combining the cabling for stronger 24 V DC outputs with the communication cabling.
- Initially, use the original cabling from Beijer Electronics primarily.
- Use shielded cables for RS-232 communication.
- Use twisted pair and shielded cabling for RS-422 and RS-485.
- Use the cabling intended for the bus type; Ethernet, Profibus, CC-Link, CAN, Device Net etc.
- Use the cabling intended for the bus type; Ethernet and CAN
- Install and connect according to applicable specifications for the relevant bus standard.
- Use shielded cabling for Ethernet, preferably with foil and a braided shield.
- D-sub covers should be shielded, and the shield should be connected to the cover 360° where the cable enters.
- Connect the shield at both ends.

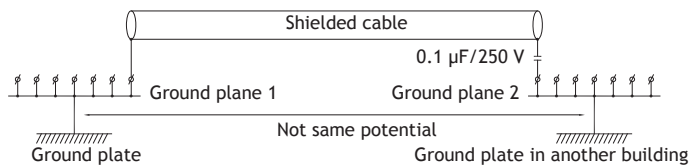

With longer distances, there is a risk that the ground potential may be different. In that case, the shield should only be connected at one end. A good alternative is to connect the other end of the shield to the ground via a 0.1 µF/250 V film capacitor. Both ends are then connected to the ground in terms of HF, but only connected to the ground at one end in terms of LF, thus avoiding the 50/60 Hz grounding loops.

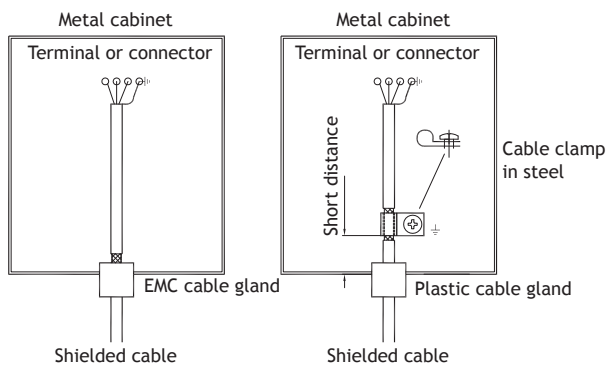

1. Use an EMC cable gland or regular plastic cable gland, remove the outer jacket and connect the shield to the installation plate with a 360° metal cable clamp.
2. Place the 24 V DC and communications cabling in one cable trunk/cable duct and 230/380 V AC in another. If the cables need to be crossed, cross them at 90° only. Avoid combining the cabling for stronger 24 V DC outputs with the communication cabling.

Ferrite cores that are snapped onto the shielded cabling may remove minor disturbances. Large ferrite pieces that are snapped onto unshielded cabling and

where the wires go 2-4 times around the cores are approximately 5-25 times more efficient.

| Condition | Standard Compass | Steering Compass |
|-----------------------------------|------------------|------------------|
| Non-energized | 15 cm | 10 cm |
| Non-energized after magnetization | 40 cm | 25 cm |
| Energized and operating | 15 cm | 10 cm |

| Condition | Standard Compass | Steering Compass |
|-----------------------------------|------------------|------------------|
| Non-energized | 40 cm | 25 cm |
| Non-energized after magnetization | 40 cm | 25 cm |
| Energized and operating | 40 cm | 25 cm |

| Condition | Standard Compass | Steering Compass |
|-----------------------------------|------------------|------------------|
| Non-energized | 25 cm | 15 cm |
| Non-energized after magnetization | 30 cm | 20 cm |
| Energized and operating | 30 cm | 20 cm |

| Condition | Standard Compass | Steering Compass |
|-----------------------------------|------------------|------------------|
| Non-energized | 65 cm | 50 cm |
| Non-energized after magnetization | 70 cm | 50 cm |
| Energized and operating | 65 cm | 50 cm |

| Condition | Standard Compass | Steering Compass |
|-----------------------------------|------------------|------------------|
| Non-energized | 70 cm | 55 cm |
| Non-energized after magnetization | 80 cm | 60 cm |
| Energized and operating | 80 cm | 55 cm |

| Condition | Standard Compass | Steering Compass |
|-----------------------------------|------------------|------------------|
| Non-energized | 75 cm | 55 cm |
| Non-energized after magnetization | 80 cm | 55 cm |
| Energized and operating | 75 cm | 55 cm |


| Condition | Standard Compass | Steering Compass |
|-----------------------------------|------------------|------------------|
| Non-energized | 60 cm | 45 cm |
| Non-energized after magnetization | 70 cm | 50 cm |
| Energized and operating | 70 cm | 50 cm |

| Condition | Standard Compass | Steering Compass |
|-----------------------------------|------------------|------------------|
| Non-energized | 60 cm | 35 cm |
| Non-energized after magnetization | 75 cm | 50 cm |
| Energized and operating | 70 cm | 45 cm |

| Condition | Standard Compass | Steering Compass |
|-----------------------------------|------------------|------------------|
| Non-energized | 60 cm | 40 cm |
| Non-energized after magnetization | 70 cm | 45 cm |
| Energized and operating | 60 cm | 40 cm |

| Condition | Standard Compass | Steering Compass |
|-----------------------------------|------------------|------------------|
| Non-energized | 80 cm | 60 cm |
| Non-energized after magnetization | 100 cm | 70 cm |
| Energized and operating | 85 cm | 65 cm |

7.3 Safety

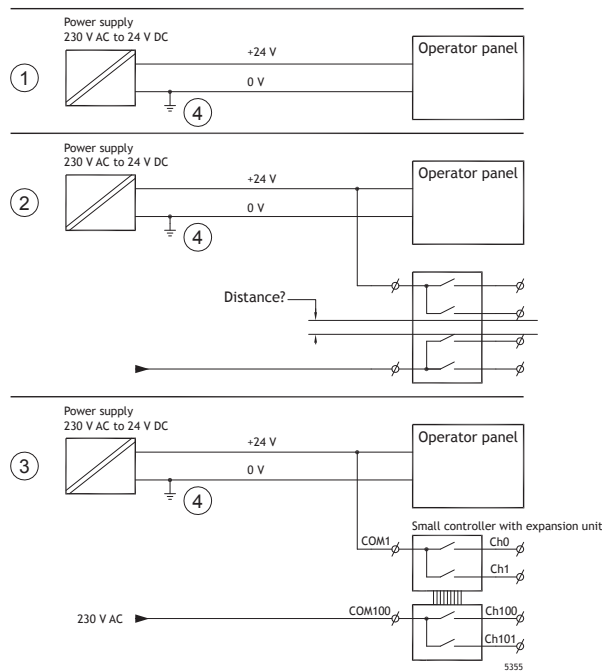

If a power supply that meets safety standards is used and only powers the operator panel, there is no problem. See 1 in drawing above.

However, if a 24 V unit that also powers other units is used, there is reason to be cautious, see 2 in drawing above. The operator panel does not have insulation that meets safety requirements in the event of a potential short circuit between 230 V AC and 24 V DC. It is assumed that the 24 V power supply is secure, for example, SELV according to EN 60950 (protection against electric shock) and UL 950.

Note:




Here is an example that explains why a secure 24 V DC power supply can be ruined by mixing 24 V relay contacts with 230 V AC relay contacts in a smaller controller. Check that the clearances and creepage distances between 24 V DC and 230 V AC fulfill EN 60950 or UL 950. If not, input a separate 24 V unit into the operator panel.

If there is a substantial distance between the relay contacts for 24 V DC and 230 V AC, it is OK to use the same 24 V devices for all feeds. See 3 in drawing above.

Connect 0 V on the 24 V power supply to the ground, see 4 in drawing above. This offers three advantages:


- Safety is increased. The 24 V power supply is not live in the event of a faulty connection or short circuit between 0 V (24 V) and 230 V phase.
- Transients on the 24 V feed are connected to the ground.
- No risk that the 24 V feed is at a high level in relationship to the ground. This is not unusual since there is high static electricity.

7.4 Galvanic Isolation

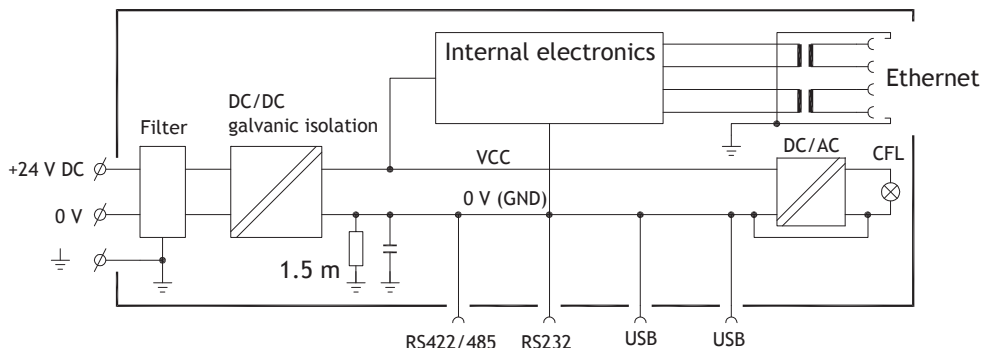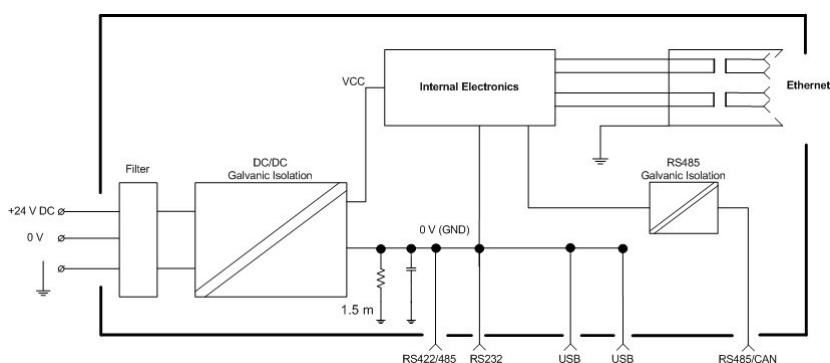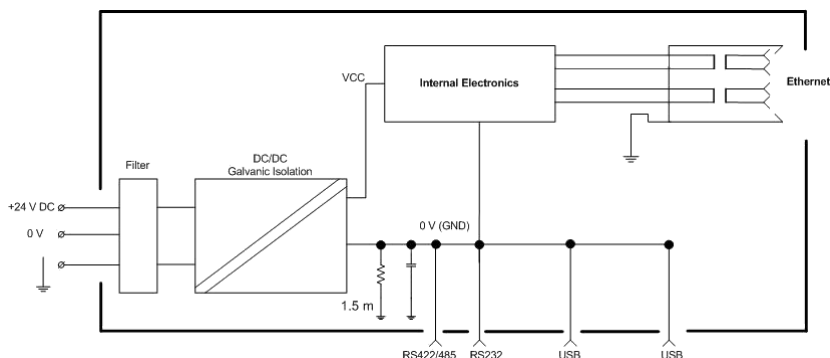

The operator panel has galvanic isolation against the 24 V DC power supply but no galvanic isolation between the communication ports for RS-232, RS-422/RS-485 and USB. Only the Ethernet connection has galvanic isolation.

The operator panel has galvanic isolation against the 24 V DC power supply but no galvanic isolation between the communication ports for RS-232, RS-422/RS-485 and USB. Only the Ethernet- and RS-485 connection have galvanic isolation.

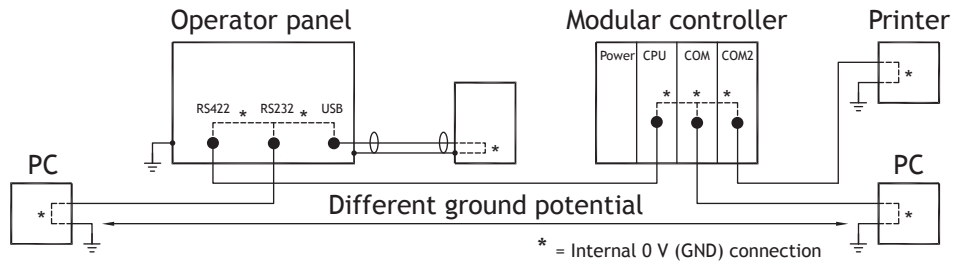

When a PC is connected to the operator panel, the internal 0 V (GND) of the panel is connected to the protective ground via the PC.

A number of USB devices can have the shield connected together with the protective ground. Here, the 0 V (GND) of the operator panel is connected to the protective ground when, for example, a USB memory stick, keyboard, or similar device is plugged in.

If a number of units are connected that have a 0 V and a ground connection, and these are connected to various grounding points, there is a substantial risk of problems. Grounding currents go through communication cables, the rear plate of the controller, internally in the operator panel, and can cause errors.

Use external units to improve communication and achieve galvanic isolation. Westermo has good industry-standard insulators that are also insulated from the 24 V DC feed.

Note:

It is very important to make sure that the 24 V feed in the external insulation unit is not connected to one of the communication outlets. If it does not have 100% insulation against the 24 V feed, disturbances and grounding currents from the 0 V on the 24 V side disrupt the communication.

Using this type of unit solves one problem but creates a larger problem! A substandard installation may work now, but problems may arise when other devices are connected.

7.5 Cable and Bus Termination RS-485

- If maximum transfer distance and maximum transfer speed is needed, shielded and twisted pair cable should be used. The mutual capacitance may not exceed 52.5 pF/m, and the cable area should be at least 0.25 mm² (AWG 24).
- 0 V, the reference voltage for communication should be included in the cabling. With two-way communication use two pairs; one pair for communication and one pair for 0 V.
- The shield must be grounded at one end. The other end is usually grounded, but with longer distances or when there is a difference in the ground potential, the shield should be connected to the ground via 0.1 µF/250 V film capacitor to prevent ground current in the braided shield. A number of manufacturers recommend that the shield be grounded at each node. Various manufacturers have different systems for bus termination.

Depending on the recipients' design, the bus wires may be on the same level or require pull-up or pull-down to ensure that no faulty signals are detected when the bus is in resting mode (all transmitters are disconnected).

Beijer

ELECTRONICS

Head office

Beijer Electronics AB

Box 426

201 24 Malmö, Sweden

www.beijerelectronics.com / +46 40 358600