# WAGO-I/O-SYSTEM ###

# Fieldbus Independent I/O Modules

4 DO DC 24 V 0.5 A, High-Side Switching 750-504(/xxx-xxx)



## **Manual**

Version 1.0.5



Copyright © 2006 by WAGO Kontakttechnik GmbH & Co. KG All rights reserved.

#### WAGO Kontakttechnik GmbH & Co. KG

Hansastraße 27 D-32423 Minden

Phone: +49 (0) 571/8 87 – 0 Fax: +49 (0) 571/8 87 – 1 69

E-Mail: info@wago.com

Web: http://www.wago.com

#### **Technical Support**

Phone: +49 (0) 571/8 87 – 5 55 Fax: +49 (0) 571/8 87 – 85 55

E-Mail: support@wago.com

Every conceivable measure has been taken to ensure the correctness and completeness of this documentation. However, as errors can never be fully excluded, we would appreciate any information or ideas at any time.

E-Mail: documentation@wago.com

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally trademark or patent protected.



## Content

| 1 In  | aportant Comments   | 4 |
|-------|---|---|
|       | Legal Principles  |   |
| 1.1.1 |   |   |
| 1.1.2 |   |   |
| 1.1.3 | Intended Use  | 4 |
| 1.2   | Symbols   | 5 |
| 1.3   | Number Notation   | 5 |
| 1.4   | Safety Notes  |   |
| 1.5   | Scope   |   |
| 2 I/0 | O Modules   | 7 |
| 2.1   | Digital Output Module                                       | 7 |
| 2.1.1 | 750-504(/xxx-xxx) [4 DO DC 24 V 0.5 A, High-Side Switching] | 7 |
| 2.1.1 | .1 Variations   | 7 |
| 2.1.1 | .2 View   | 7 |
| 2.1.1 | .3 Description  | 8 |
| 2.1.1 | .4 Display Elements   | 9 |
| 2.1.1 | .5 Schematic Diagram  | 9 |
| 2.1.1 |   |   |
|       |   |   |

## 1 Important Comments

To ensure fast installation and start-up of the units described in this manual, we strongly recommend that the following information and explanations are carefully read and abided by.

## 1.1 Legal Principles

## 1.1.1 Copyright

This manual is copyrighted, together with all figures and illustrations contained therein. Any use of this manual which infringes the copyright provisions stipulated herein, is not permitted. Reproduction, translation and electronic and photo-technical archiving and amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG. Non-observance will entail the right of claims for damages.

WAGO Kontakttechnik GmbH & Co. KG reserves the right to perform modifications allowed by technical progress. In case of grant of a patent or legal protection of utility patents all rights are reserved by WAGO Kontakttechnik GmbH & Co. KG. Products of other manufacturers are always named without referring to patent rights. The existence of such rights can therefore not be ruled out.

#### 1.1.2 Personnel Qualification

The use of the product detailed in this manual is exclusively geared to specialists having qualifications in PLC programming, electrical specialists or persons instructed by electrical specialists who are also familiar with the valid standards. WAGO Kontakttechnik GmbH & Co. KG declines all liability resulting from improper action and damage to WAGO products and third party products due to non-observance of the information contained in this manual.

#### 1.1.3 Intended Use

For each individual application, the components supplied are to work with a dedicated hardware and software configuration. Modifications are only permitted within the framework of the possibilities documented in the manuals. All other changes to the hardware and/or software and the non-conforming use of the components entail the exclusion of liability on part of WAGO Kontakttechnik GmbH & Co. KG.

Please direct any requirements pertaining to a modified and/or new hardware or software configuration directly to WAGO Kontakttechnik GmbH & Co. KG.



## 1.2 Symbols



#### **Danger**

Always abide by this information to protect persons from injury.



#### Warning

Always abide by this information to prevent damage to the device.



#### Attention

Marginal conditions must always be observed to ensure smooth operation.



#### **ESD** (Electrostatic Discharge)

Warning of damage to the components by electrostatic discharge. Observe the precautionary measure for handling components at risk.



#### Note

Routines or advice for efficient use of the device and software optimization.



#### **More information**

References on additional literature, manuals, data sheets and internet pages.

## 1.3 Number Notation

| Number Code | Example              | Note   |  |
|-------------|----------------------|--|--|
| Decimal     | 100                  | normal notation                                    |  |
| Hexadecimal | 0x64                 | C notation   |  |
| Binary      | '100'<br>'0110.0100' | within inverted commas, nibble separated with dots |  |



## 1.4 Safety Notes



#### Warning

Switch off the system prior to working on bus modules!

In the event of deformed contacts, the module in question is to be replaced, as its functionality can no longer be ensured on a long-term basis.

The components are not resistant against materials having seeping and insulating properties. Belonging to this group of materials is: e.g. aerosols, silicones, triglycerides (found in some hand creams).

If it cannot be ruled out that these materials appear in the component environment, then additional measures are to be taken:

- installation of the components into an appropriate enclosure
- handling of the components only with clean tools and materials.



#### Attention

Cleaning of soiled contacts may only be done with ethyl alcohol and leather cloths. Thereby, the ESD information is to be regarded.

Do not use any contact spray. The spray may impair the functioning of the contact area.

The WAGO-I/O-SYSTEM 750 and its components are an open system. It must only be assembled in housings, cabinets or in electrical operation rooms. Access must only be given via a key or tool to authorized qualified personnel.

The relevant valid and applicable standards and guidelines concerning the installation of switch boxes are to be observed.



#### **ESD** (Electrostatic Discharge)

The modules are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the modules, ensure that the environment (persons, workplace and packing) is well grounded. Avoid touching conductive components, e.g. gold contacts.

## 1.5 Scope

This manual describes the Digital Output Module 750-504(/xxx-xxx) 4 DO DC 24 V 0.5 A, High-Side Switching of the modular WAGO-I/O-SYSTEM 750.

Handling, assembly and start-up are described in the manual of the Fieldbus Coupler. Therefore this documentation is valid only in the connection with the appropriate manual.



## 2 I/O Modules

## 2.1 Digital Output Module

## 2.1.1 750-504(/xxx-xxx) [4 DO DC 24 V 0.5 A, High-Side Switching]

4-Channel Digital Output Module DC 24 V 0.5 A, short-circuit-protected, high-side switching

#### 2.1.1.1 Variations

| Item-No.        | Designation                                   | Description  |
|-----------------|---|--|
| 750-504         | 4 DO DC 24 V 0.5 A<br>High-Side Switching     | 4-Channel Digital Output Module DC 24 V 0.5 A, short-circuit-protected, high-side switching  |
| 750-504/025-000 | 4 DO DC 24 V 0.5 A,<br>High-Side Switching /T | 4-Channel Digital Output Module DC 24 V 0.5 A,short-circuit-protected, high-side switching extended temperature range from – 20 °C to +60 °C |

#### 2.1.1.2 View

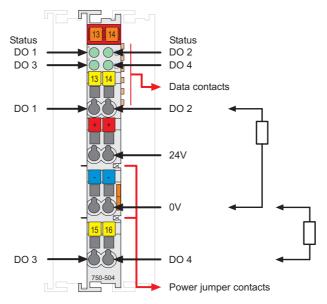


Fig. 2.1.1-1: 4-Channel Digital Output Module 750-504

g050400e



#### 2.1.1.3 Description

The connected load is switched via the digital output from the control system.

The module has four output channels. Two actuators may be directly connected to the module.

As an example, two 2-conductor actuators may be directly connected using connection 0 V and signal output DO 1 or 0 V and signal output DO 2. The connection of more actuators to signal outputs DO 3 and DO 4 requires a field side connection module (750-614) for 24V and for 0V, if need be.



#### Note

For the connection of inductive loads a protected circuit, e. g. a recovery diode, has to be switched parallel to this load.

The output channels are electrically short-circuit-protected and high-side switching. Which means that the status of the output channels is "high" if the output channels switch to the 24 V supply voltage for the field side.

The supply voltage for the field side is derived from an adjacent supply module by means of power jumper contacts.

The status of the four output channels is indicated via green status LEDs.

An optocoupler is used for electrical isolation between the bus and the field side.

Any configuration of the output modules is possible when designing the fieldbus node. Grouping of module types is not necessary.

The field side supply voltage of 24 V for the output module is derived from adjacent I/O modules or from a supply module. The supply voltage for the field side is made automatically through the individual I/O modules by means of power jumper contacts.



#### Warning

The maximum current of the internal power jumper contacts is 10 A. When configuring the system it is important not to exceed the maximum/sum current. However, if such a case should occur, another supply module must be added.



#### Attention

In case of overloads a supply module with fuse (750-601) must be connected on the line side to protect the output modules!

The output module 750-504 can be used with all couplers/controllers of the WAGO-I/O-SYSTEM 750.



## 2.1.1.4 Display Elements




Fig. 2.1.1-2: Display Elements g050402x

| LED   | Channel | Designation    | State | Function                |
|-------|---------|----------------|-------|-------------------------|
| A     | 1       | Status<br>DO 1 | off   | Output DO 1: not active |
| green |         |                | on    | Output DO 1: active     |
| С     | 2       |                |       | Output DO 2: not active |
| green |         | DO 2           | on    | Output DO 2: active     |
| В     | 3       | Status<br>DO 3 | off   | Output DO 3: not active |
| green |         |                | on    | Output DO 3: active     |
| D     | 4       | Status<br>DO 4 | off   | Output DO 4: not active |
| green |         |                | on    | Output DO 4: active     |

## 2.1.1.5 Schematic Diagram

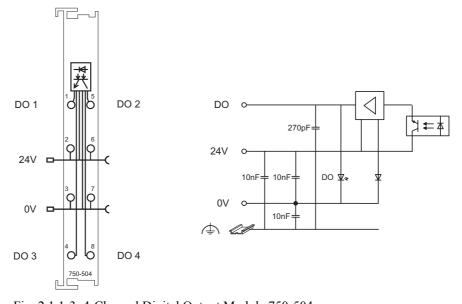


Fig. 2.1.1-3: 4-Channel Digital Output Module 750-504

g050401e

#### 2.1.1.6 Technical Data

| Module Specific Data              |  |  |  |  |  |
|-----------------------------------|--|--|--|--|--|
| Number of ou                      | tputs  | 4  |  |  |  |
| Current consu                     | mption (internal) <sub>max.</sub>            | 7 mA   |  |  |  |
| Voltage via po                    | ower jumper contacts                         | DC 24 V (-   | 15 % / + 20 %)                                     |  |  |
| Type of load                      |  | resistive, in  | ductive, lamps                                     |  |  |
| Switching rate                    | max.   | 1 kHz  |  |  |  |
| Reverse voltag                    | ge protection                                | yes  | yes  |  |  |
| Output curren                     | t  | 0.5 A short-circuit-protected  |  |  |  |
| Energy dissipation (unique switch |  | $\begin{bmatrix} 0.3 \text{ J} \\ L_{\text{max.}} = 2 \text{ W}_{\text{max.}} / I^2 \end{bmatrix}$ |  |  |  |
| Isolation                         |  | 500 V (System/Field)   |  |  |  |
| Current consu                     | mption typ.(field side)                      | 30 mA (per   | module) + load                                     |  |  |
| Internal bit wi                   | dth  | 4 Bit out  |  |  |  |
| Dimensions (r                     | mm) W x H x L                                |  | 12 x 64* x 100<br>* from upper edge of 35 DIN rail |  |  |
| Weight                            |  | ca. 50 g   |  |  |  |
| Standards an                      | d Regulations (cf. Chapter 2.2 o             | f the Couple   | r/Controller Manual)                               |  |  |
| EMC-Immuni                        | ty to interference (CE)                      | acc. to EN 61000-6-2 (01)  |  |  |  |
| EMC-Emissio                       | on of interference (CE)                      | acc. to EN 61000-6-3 (01)  |  |  |  |
| EMC-Immuni                        | ty to interference (Ship building)           | acc. to Germanischer Lloyd (01)  |  |  |  |
| EMC-Emissio                       | EMC-Emission of interference (Ship building) |  | acc. to Germanischer Lloyd (01)                    |  |  |
| Approvals (c                      | f. Chapter 2.2 of the Coupler/Co             | ntroller Mai   | nual)  |  |  |
| c <b>(VL</b> )us                  | <sub>C</sub> UL <sub>US</sub> (UL508)        |  |  |  |  |
| ABS                               | ABS (American Bureau of Shipp                | ing)   |  |  |  |
| (0)                               | BV (Bureau Veritas)                          |  |  |  |  |
| <u>Ĵ&amp;</u>                     | DNV (Det Norske Veritas)                     |  | Cl. B  |  |  |
| (GL)                              | GL (Germanischer Lloyd)                      |  | Cat. A, B, C, D                                    |  |  |
| KR CONTRA                         | KR (Korean Register of Shipping)             |  |  |  |  |
| Lloyd's<br>Register               | LR (Lloyd's Register)                        |  | Env. 1, 2, 3, 4                                    |  |  |
|                                   | NKK (Nippon Kaiji Kyokai)                    |  |  |  |  |
| *                                 | RINA (Registro Italiano Navale)              |  |  |  |  |
| c UL us                           | <sub>C</sub> UL <sub>US</sub> (UL1604)       |  | Class I Div2 ABCD T4A                              |  |  |
| ⟨Ex⟩                              | KEMA   |  | II 3 G EEx nA II T4                                |  |  |
| CE                                | Ce Conformity Marking                        |  |  |  |  |





#### **More Information**

Detailed references to the approvals are listed in the document "Overview Approvals WAGO-I/O-SYSTEM 750", which you can find on the CD ROM ELECTRONICC Tools and Docs (Item-No.: 0888-0412) or in the internet under:

<u>www.wago.com</u> → Documentation → WAGO-I/O-SYSTEM 750 → System Description

#### 2.1.1.7 Process Image

| Output bit | В3            | B2            | B1            | В0            |
|------------|---------------|---------------|---------------|---------------|
| Meaning    | controls DO 4 | controls DO 3 | controls DO 2 | controls DO 1 |
|            | Channel 4     | Channel 3     | Channel 2     | Channel 1     |





WAGO Kontakttechnik GmbH & Co. KG Postfach 2880 • D-32385 Minden Hansastraße 27 • D-32423 Minden

Phone: 05 71/8 87 - 0 Fax: 05 71/8 87 - 1 69 E-Mail: info@wago.com

Internet: http://www.wago.com